


- In a wooden box which is not water tight.

The separator must be stored dry and protected from rain and humidity.

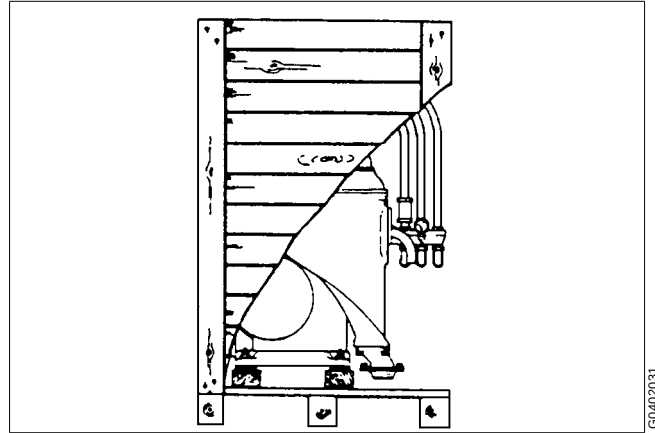


G0402031

In a wooden box which is not water tight

- In a special water-resistant box for outdoor storage.

The separator and its parts have been treated with an anti-corrosion agent. Once the box has been opened, store dry and protected from rain and humidity.

The packaging for outdoor storage is only to special order.

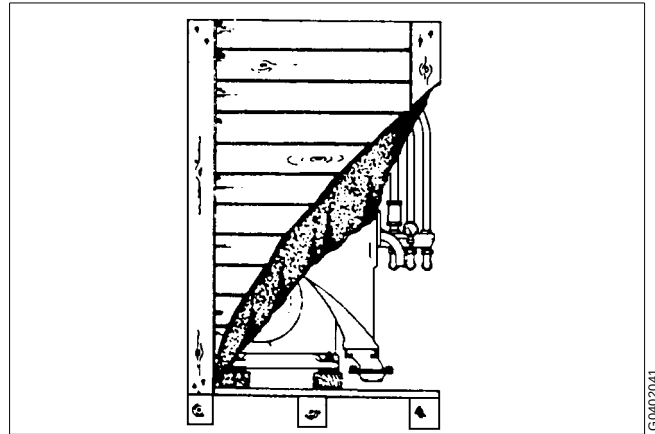

G0402041

In a special water-resistant box for outdoor storage

Transport

Specification

- During transport of the separator, the frame hood and bowl **must always be removed from the machine**.
- When lifting a separator it must always be **hung securely**. See chapter “5.5 When changing oil” on page 76.



WARNING

Crush hazards

Use correct lifting tools and follow lifting instructions.

- During erection, all inlets and outlets to separators and accessories must be covered to be protected from dirt and dust.


8.10.2 Planning and installation

Introduction

The requirements for one or more separators can be established by consulting the following documents.

- Basic size drawing
- Connection list
- Interface description
- Interconnection drawing
- Foundation drawing
- Lifting drawing

These are included in this chapter “8 Technical Reference” on page 125.

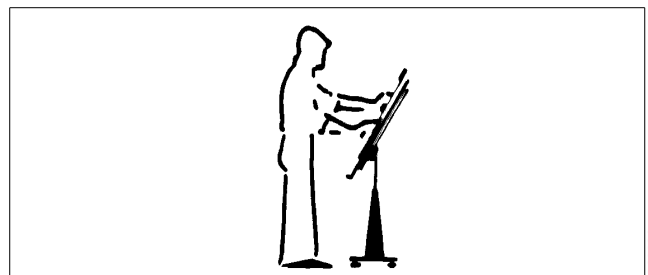


Check the drawings when planning the installation

G0020611

Important measurements

Important measurements are the minimum lifting height for lifting tackle, shortest distance between driving motor and wall, free passage for dismantling and assembly, maintenance and operation.

Plan your installation with sufficient room for the controls and operation so that instruments are easily visible. Valves and controls must be within convenient reach. Pay attention to space requirements for maintenance work, work benches, dismantled machine parts or for a service trolley.

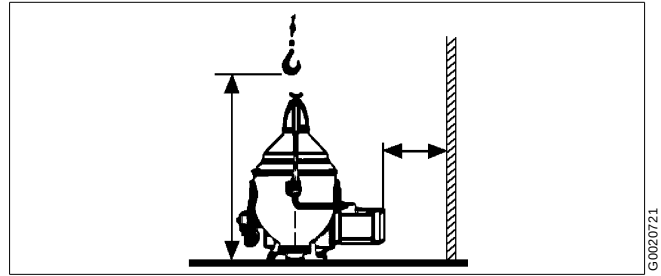

Suitable space must be obtained for the maintenance work

Space for separator

The separator shall be placed in such a way that suitable space for maintenance and repair is obtained.

Specification

- See “8.5 Basic size drawing, for heater” on page 132 for the service space required with the separator installed.

Recommendation

- The spanner for the large lock ring should have sufficient space to make a complete turn without hitting any of the ancillary equipment surrounding the separator.

Lifting height for transport of bowl

Specification

- A minimum height is required to lift the bowl, bowl parts and the bowl spindle.

Recommendation

- When two or more separators are installed, the lifting height may have to be increased to enable parts from one separator to be lifted and moved over an adjoining assembled separator.

NOTE

Remove the separator bowl before lifting.




WARNING

Crush hazard

Use correct lifting tools and follow lifting instructions.

Do **not** work under a hanging load.

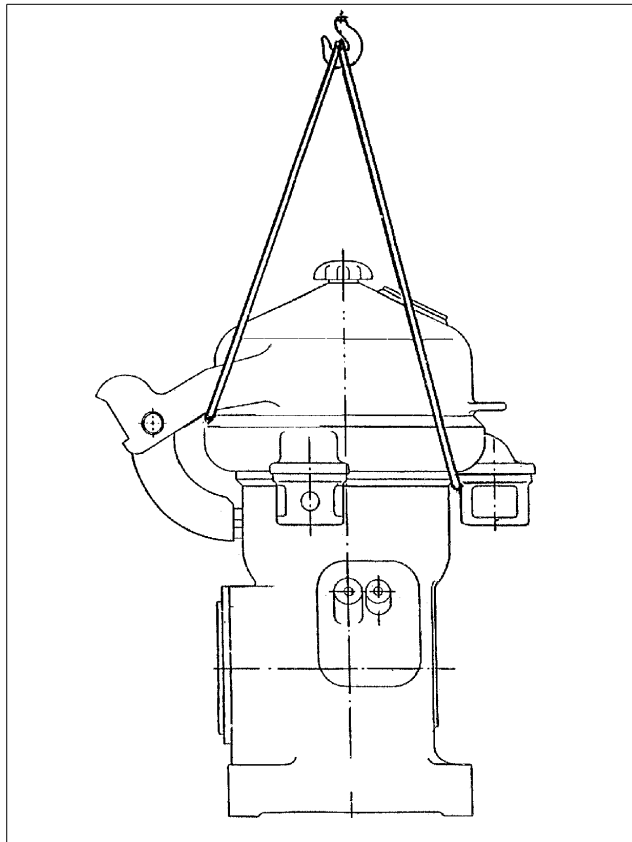

G0625911

Do not lift the separator in any other way


Space for oil changing

Specification

- The plug for gearbox oil draining must not be blocked by floor plate arrangement, etc.

Recommendation

- It should be possible to place a portable collecting tray under the gearbox drain plug for changing oil.

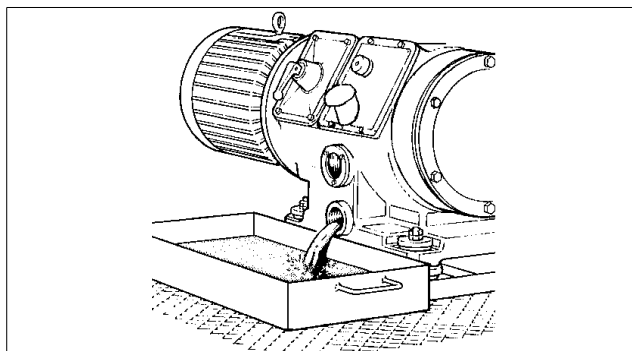

G0035921

Place the separator in such way that makes the oil change easy


8.10.3 Foundations

Specification

- The separator should be installed at floor level, see “8.5 Basic size drawing, for heater” on page 132.
- The separator must be installed on a strong and rigid foundation to reduce the influence of vibrations from adjacent machinery.
- The foundation should be provided with a cofferdam.

Fit the separator frame on the foundation as follows:

1. Place the separator frame without cushions in position.
2. Check that the bolts do not press against the edges of the holes, otherwise the elasticity of the mounting of the separator frame will be impeded.
3. Check that the separator frame is horizontal and that all feet rest on the foundation.
4. Fit height adjusting washers required.
5. Lift the separator frame, fit the vibration dampers, lower and check that the bolts do not press against the edges of the holes.
6. Tighten nut with 16 Nm. Hold firmly and secure with the lock nut. Repeat for the other frame feet.

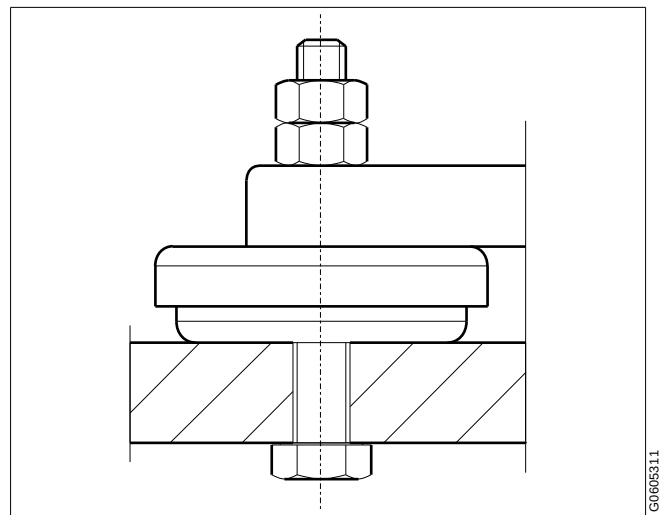

Foundation foot

G0605311

Reader's Comment Form

Dear reader,

It is our ambition to produce as useful and instructive manuals as possible. Should you have any comments (positive or negative) regarding this manual, please note them down and send them to us. You can do this by copying this page and sending it by fax, or you could mail it, or hand it over to your local Alfa Laval representative.

Alfa Laval Separation AB, Separator Manuals, dept. SKL, S-147 80 Tumba, Sweden.
Fax: +46 8 53065029.

Your name:

Company:

Address:

City:

Country:

Product: MAB 104B-14/24C Book No.: 1270492-02 V3

Date:

	Yes	No
Is it easy to find what you are looking for by using the table of contents?	☐	☐
Are the chapter and section headings clear and adequate?	☐	☐
Is the information presented in the correct order for your purposes?	☐	☐
Does the information in the manual cover your needs?	☐	☐
Is it easy to understand the instructions in the manual?	☐	☐
Is the terminology sufficiently explained?	☐	☐
Are the illustrations easy to understand?	☐	☐

Your comments:

Order Form

If you wish to order extra copies of this manual, please copy this page and give it to your local Alfa Laval representative, who will advise you of current prices.

Your local Alfa Laval representative will also be able to help you with information regarding any other manuals.

Your name:

Company:

Address:

City:

Country:

Product: MAB 104B-14/24C

Book No.: 1270492-02 V3

Quantity:

Date:

Comments:

Index

B

Bearings	
Assembly of bowl spindle bearings	95
Ball bearing housing damage	68
Maintenance directions	78
Bowl	
Assembly	101
Dismantling	85
Lock ring damage	63
Bowl cleaning	
Procedure	42
Bowl discs	
Cleaning	75
Disc stack pressure	62
Bowl spindle	
Assembly	95
Dismantling	88
Broken water seal	122

C

Centrifugal separation	16
Clarification	
Definition	32
Oil discharge through water outlet	123
Unsatisfactory separation result	123
Clarifier disc	
Definition	32
Cleaning	
Bowl discs	75
External cleaning	72
Fuel oil separators	73
Lube oil separators	73
Time intervals	42
Connection list	131
Connection list, for heater	133
Corrosion	
Check points	58
Maintenance logs	53
Oiling of parts	74
Shutdowns	80
Cover interlocking switch (option)	31
Cracks	
Check points	61
Maintenance logs	53

D

Daily checks	53
Density of feed	126
Disc stack pressure	62
Drawings	
Basic size drawing	130
Basic size drawing, for heater	132
Machine plates and safety labels	158
Pump	149

E

Electric motor	154, 156
Emergency stop	41, 135
Erosion	
Check points	60
Maintenance logs	53
Excessive vibration during normal running	118
Excessive vibration during starting sequence	118

F

Flexible coupling	30
Foundation	165
Frame feet	
Vibration dampers exchange	114

G

Gear	
Number of teeth	127
Wear of gear teeth	69
Gravity disc	
Definition	32
Dismantling	87
Selection	35

H

Horizontal driving device	
Dismantling	91

I		P	
Installation		Periodic maintenance	50
Checkpoints	34	Power consumption	126
Planning of installation	162	Power transmission	
Interface		Description	30
Definition	32	Process capacity	126
Interface description	134	Pump	
L		Axial play	105
Lifting instruction	81, 153	Bushings	104
Liquid flows through bowl casing drain	120	Dismantling	104
Lock ring		Impeller shaft	104
Wear and damage	63	Lipring seals	104
Lubricants	137	Shear pin coupling	104
Lubricating oil volume	127	Wearing seals	104
Lubricating points	137	Pump capacity	127
Lubrication		Pumps	
Oil change procedure	76	Checkpoints	104
Oil filling procedure	113	Purification	
M		Broken water seal	122
Main parts	20	Definition	32
Maintenance		Outgoing water contaminated by oil	121
Intervals	50	Start procedure	39
Procedure	52	Unsatisfactory separation result	121
Service kits	52	Purifier bowl	
Major service	56	Characteristic parts	22
Materials	128	Gravity disc	23
Maximum running time without flow	127	R	
Metal surfaces		Ready for start	134
Corrosion	58	Revolution counter	
Cracks	61	Function	31
Erosion	60	Speed	127
Gear teeth wear	69	Rotor	
Motor		Assembly	101
Coupling disc	67	Dismantling	85
Motor cleaning	72	Running-up procedure	37
Motor current during start	38	S	
N		Safety Instructions	9
Noise		Separated sludge	
Sound power level	128	Cleaning the bowl	42
Sound pressure level	128	Separation	
O		Optimum separation	24
Oil		Purification	23
Before first start	34	Temperature	17
Oil change procedure	76	Viscosity	17
Sight glass	31	Separator	
Oil discharge through water outlet	122	Lubricating points	137
Outgoing water contaminated by oil	121	Stopping time	127

Separator does not start.	116
Separator vibration level	128
Service intervals	50
Service kits	52
Service logs	55
Shear pin coupling	105
Shutdowns	80
Sludge and water space volume	127
Smell	119
Speed	127
Speed too low	119
Start	37
Checkpoints	35
Starting power too high	117
Starting power too low	117
Starting time	127
Start-up time too long	116
Stopping procedure	40
Storage	160

T

Throughput	
Definition	32
Trouble tracing	116

U

Unsatisfactory separation result	121
----------------------------------	-----

V

Vertical driving device	
Assembly	95
Dismantling	88
Vibration	
Critical speed	37
Spindle wobble	64
Vibration checking	77
Vibration level	128

W

Warning signs	13
Water in oil sump	120
Weight	127
Worm gear	
Function	30
