

Parts Manual



See "General Information"
for New Parts Manual
Features.

3406C Generator Set

L5A1-Up (Generator)
L6B1-Up (Generator)
L7A1-Up (Generator)
C2G1-Up (Generator Set)
NKM1-Up (Generator Set)
ZKC1-Up (Generator Set)
1DZ1-Up (Engine)
2GG1-Up (Engine)

Product and Dealer Information

Note: For product identification plate locations, see the section “Product Identification Information” in the Operation and Maintenance Manual.

Delivery Date: _____

Product Information

Model: _____

Product Identification Number: _____

Engine Serial Number: _____

Transmission Serial Number: _____

Generator Serial Number: _____

Attachment Serial Numbers: _____

Attachment Information: _____

Customer Equipment Number: _____

Dealer Equipment Number: _____

Dealer Information

Name: _____ Branch: _____

Address: _____

	<u>Dealer Contact</u>	<u>Phone Number</u>	<u>Hours</u>
Sales:	_____	_____	_____
Parts:	_____	_____	_____
Service:	_____	_____	_____

MEMORANDA

TABLE OF CONTENTS

Name	Page	Name	Page
GENERAL INFORMATION	A4	LINES GP-ENGINE OIL	80
REPAIR ALTERNATIVES	A7	LINES GP-ENGINE OIL DRAIN	82
SUPPLEMENTAL COOLANT ADDITIVES	A8	LINES GP-TURBOCHARGER OIL	84
MAINTENANCE PARTS	A9	PUMP GP-ENGINE OIL	86
INDEX	A15	PUMP GP-SUMP	87
ENGINE ARRANGEMENT	1	COOLING SYSTEM	89
ENGINE AR	1	COOLER GP-ENGINE OIL	89
GENERAL AR	5	COVER GP	90
GENERAL AR-GENSET	7	FLANGE AS-RADIATOR	91
BASIC ENGINE	11	FLANGE GP-RADIATOR	92
CAMSHAFT GP	11	GUARD GP-RADIATOR	93
COUPLING GP	12	HEAT EXCHANGER GP-SEA WATER	95
COUPLING GP-GENERATOR	13	LINES GP-AFTERCOOLER WATER	105
COVER GP-CYLINDER BLOCK	14	LINES GP-COOLANT	106
COVER GP-ENGINE LIFTING EYE	16	LINES GP-WATER	107
COVER GP-FLYWHEEL HOUSING	17	PUMP GP-WATER	109
COVER GP-FRONT HOUSING	18	RADIATOR GP	112
COVER GP-VALVE MECHANISM	21	SUPPORT GP-RADIATOR	119
CRANKSHAFT GP	22	VALVE GP-COOLANT SAMPLING	120
CYLINDER BLOCK AS	23	AIR INLET AND EXHAUST SYSTEM	121
CYLINDER BLOCK GP	24	AFTERCOOLER GP-WATER	121
CYLINDER HEAD GP	34	AIR CLEANER GP	123
DAMPER & PULLEY GP	44	CAP AS-AIR CLEANER	131
DRIVE GP-ACCESSORY	45	CARTRIDGE GP-TURBOCHARGER	132
DRIVE GP-FAN	46	ELBOW GP-EXHAUST	134
FASTENER GP-FRONT HOUSING	48	EXHAUST GP	136
FLYWHEEL GP	49	FITTING GP-EXHAUST	138
GEAR GP-FRONT	50	FLANGE GP-EXHAUST	140
GUARD GP-BELT	51	LINES GP-AIR	141
GUARD GP-DAMPER	52	MANIFOLD GP-EXHAUST	143
HOUSING GP-FLYWHEEL	53	MOUNTING GP-EXHAUST	145
HOUSING GP-FRONT	54	MOUNTING GP-MUFFLER	146
LIFTING GP-ENGINE	56	MUFFLER AS	148
MOUNTING GP-ALTERNATOR	57	MUFFLER GP	149
PAN GP-OIL	60	PRECLEANER GP	159
PISTON & ROD GP	61	SHIELD GP-MANIFOLD	161
ROCKER ARM GP	64	SHUTOFF GP-AIR	162
SEAL GP-CRANKSHAFT	65	TURBOCHARGER GP	163
SUPPORT GP-ENGINE	67	FUEL SYSTEM	167
VALVE MECHANISM GP	68	BASE GP-FUEL TANK	167
LUBRICATION SYSTEM	70	CONTROL AS-GOVERNOR	177
BASE GP-OIL FILTER	70	CONTROL GP-GOVERNOR	179
BREATHER GP	72	COVER GP-FUEL TRANSFER	184
FASTENER GP-OIL PUMP MOUNTING	73	DRIVE GP-GOVERNOR & FUEL PUMP	185
FILLER GP-ENGINE OIL	74	FASTENER GP-FUEL INJ PUMP	188
FILTER GP-ENGINE OIL	76	FASTENER GP-FUEL TRANSFER	
FUMES DISPOSAL GP	77	PUMP	190
GAUGE GP-OIL LEVEL (DIPSTICK)	78	FILTER GP-FUEL	191
		FILTER GP-WATER SEP & FUEL	194
		GOVERNOR GP	195
		LINES GP-FUEL	200
		LINES GP-FUEL FILTER	211

TABLE OF CONTENTS

Name	Page	Name	Page
LINES GP-FUEL INJECTION	213	MOUNTING GP-ELECTRONIC CONTROL	399
MOUNTING GP-GOVERNOR ACTUATOR	220	MOUNTING GP-JACKET WTR HEATER	402
PIPE GP-FUEL TANK	222	MOUNTING GP-SENSOR	404
PUMP & MTG GP-FUEL TRANSFER	223	MOUNTING GP-TERMINAL STRIP	405
PUMP GP-FUEL INJECTION	233	MOUNTING GP-WIRING	407
PUMP GP-FUEL PRIMING	238	PANEL GP-CIRCUIT BREAKER	408
PUMP GP-FUEL TRANSFER	240	PLUG GP-BOX	425
PUMP GP-GOV & FUEL INJ	259	SENSOR GP-COOLANT LEVEL	426
SEPARATOR GP-WATER	262	SENSOR GP-ENGINE	428
SHUTOFF GP-MANUAL	266	SENSOR GP-PRESSURE	431
TORQUE CONTROL GP	267	SENSOR GP-SPEED	432
VALVE GP-FUEL SHUTOFF	269	SENSOR GP-TEMPERATURE	433
ELECTRICAL AND STARTING SYSTEM	271	SHUNT TRIP GP	437
ACTUATOR-CIRCUIT BREAKER	271	SHUNT-TRIP	438
ALTERNATOR GP-CHARGING	272	SHUTOFF GP-ELECTRICAL	440
BATTERY GP	276	SOLENOID GP-SHUTOFF	441
BLOCK AS-TERMINAL	282	STARTING AID GP	442
BOX GP-CONNECTION	283	STARTING AID GP-ETHER	443
BRACKET GP-TERMINAL	291	STARTING MOTOR GP-ELECTRIC	447
CABLE GP	292	STRIP GP-TERMINAL	453
CABLE GP-BATTERY	293	SUPPORT GP-BATTERY	454
CIRCUIT BREAKER & MOUNTING GP	294	SUPPORT GP-CABLE	457
CIRCUIT BREAKER GP	301	SWITCH AS	458
COIL AS-ACTUATOR	332	SWITCH AS-LIQUID LEVEL	460
CONDUIT GP-ELECTRICAL	334	SWITCH AS-TOGGLE	463
CONNECTION GP-ELECTRICAL	341	SWITCH GP-DISCONNECT	464
CONNECTOR AS	347	SWITCH GP-LIQUID LEVEL	466
CONTACT AS-ELECTRICAL	347	SWITCH GP-PUSH BUTTON	467
CONTACTOR AS	347	SWITCH GP-TOGGLE	468
CONTACTOR GP	347	TERMINAL GP-CIRCUIT BREAKER	469
CONTROL & MTG GP-ENGINE ELEK	366	TRANSFORMER	473
CONTROL GP-ELECTRONIC GOVERNOR	367	TRANSFORMER GP-CURRENT	475
CONTROL GP-ETHER ELECTRONIC	368	WIRING GP-AIR SHUTOFF	495
CONTROL GP-VOLTAGE	369	WIRING GP-ENGINE	496
COVER GP-CIRCUIT BREAKER	370	WIRING GP-GENERATOR	498
ENCLOSURE GP-WIRING	372	WIRING GP-PANEL	499
FASTENER GP-WIRING HARNESS	374	ENCLOSURES, GUARDS AND BASES	516
FUSE GP	375	BASE GP-ENGINE & GENERATOR	516
HARNESS AS-ENGINE	377	COVER GP-ACCESS	522
HARNESS AS-LIGHTING	382	COVER GP-BASE	523
HARNESS AS-PANEL	382	COVER GP-ENCLOSURE	526
HARNESS AS-POWER	383	COVER GP-GENERATOR	528
HARNESS AS-SENSOR	383	DOOR AS	529
HARNESS AS-WIRING	383	DOOR GP-ACCESS	531
HARNESS GP-WIRING	390	DUCT GP-CABLE	533
HEATER GP-JACKET WATER	391	ENCLOSURE AS	536
LAMP GP-FLOOD	393	ENCLOSURE GP-GENERATOR	537
LIGHTING GP-GENERATOR	394	ENCLOSURE GP-GENSET	604
MODULE GP-INTERFACE	396	FASTENER GP-ENCLOSURE	616
MOUNTING GP-BATTERY	397	GUARD GP-ENGINE	618
MOUNTING GP-BUS BAR	398	MOUNTING GP-BEAM	620
		MOUNTING GP-BRACKET	631

TABLE OF CONTENTS

Name	Page	Name	Page
GENERATORS	633	PLATE & FILM GP	1284
CONNECTION GP-GENERATOR		PART NUMBER INDEX	B1
LEADS	633		
CONNECTION GP-TERMINAL STRIP	685		
GENERATOR AR	714		
GENERATOR GP	746		
HEATER GP-SPACE	1099		
INSULATION GP-WEATHER	1102		
LIFTING GP-GENERATOR	1103		
MOUNTING GP-GENERATOR	1105		
MOUNTING GP-VOLTAGE			
REGULATOR	1107		
REGULATOR AS-VOLTAGE	1110		
REGULATOR GP-VOLTAGE	1113		
OPERATOR STATION	1125		
ALARM GP	1125		
CONTROL GP-EMCP ELECTRONIC	1127		
CONTROL GP-ENGINE MONITORING	1146		
CONTROL GP-GENERATOR SET	1147		
CONTROL GP-SPEED	1154		
COVER GP-ACCESS	1156		
COVER GP-CONTROL PANEL	1159		
COVER GP-INSTRUMENT PANEL	1165		
DOOR GP	1170		
FASTENER GP-INSTRUMENT PANEL	1175		
FASTENER GP-PANEL	1176		
FILTER GP-ELECTRONIC	1177		
GAUGE GP-FUEL PRESSURE	1179		
KIT-ELECTRONIC CONVERSION	1180		
MODULE GP-ALARM	1181		
CONTROL GP-ALARM MODULE	1184		
MODULE GP-ALARM	1185		
CONTROL GP-ALARM MODULE	1186		
MODULE GP-ALARM	1187		
CONTROL GP-ALARM MODULE	1190		
MODULE GP-RELAY DRIVER	1191		
MODULE GP-SYNCHRONIZING			
LIGHTS	1193		
MODULE GP-SYSTEM			
COMMUNICATION	1194		
MOUNTING GP-CONTROL PANEL	1197		
MOUNTING GP-DIVIDER PLATE	1198		
MOUNTING GP-PANEL	1199		
PANEL GP-CONTROL	1200		
PANEL GP-ELECTRICAL	1212		
PANEL GP-ELECTRONIC	1213		
PANEL GP-INSTRUMENT	1234		
POTENTIOMETER AS	1239		
SEAL GP-ENCLOSURE	1241		
SERVICE EQUIPMENT AND SUPPLIES	1248		
CHART-PLATE & FILM	1248		
FILM GP	1250		
KIT-INSTALLATION	1283		

MEMORANDA

GENERATORS


239-7787 CONNECTION GP-GENERATOR LEADS

S/N: C2G1-UP; NKM1-UP
AN ATTACHMENT

SMCS-4460

i01947539

NOTE	REF NO	GRAPHIC REF	PART NUMBER	QTY	PART NAME						SEE PAGE
					1	2	3	4	5	6 (PRODUCT LEVEL)	
	1	1	239-7814	4	CABLE AS-BRAIDED						

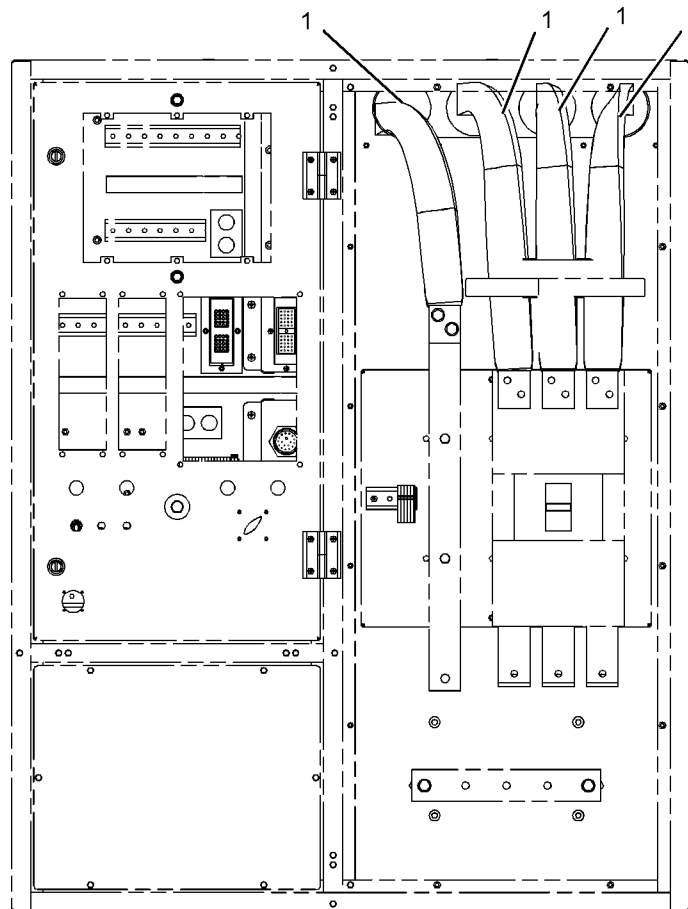

(BREAKER CONNECTION)

<END>

GRAPHIC #1

g01015495

GENERATORS


239-7788 CONNECTION GP-GENERATOR LEADS

S/N: C2G1-UP
AN ATTACHMENT

SMCS-4460

i01947545

NOTE	REF NO	GRAPHIC REF	PART NUMBER	QTY	PART NAME						SEE PAGE
					1	2	3	4	5	6 (PRODUCT LEVEL)	
	1	1	239-7815	4	CABLE AS-BRAIDED						

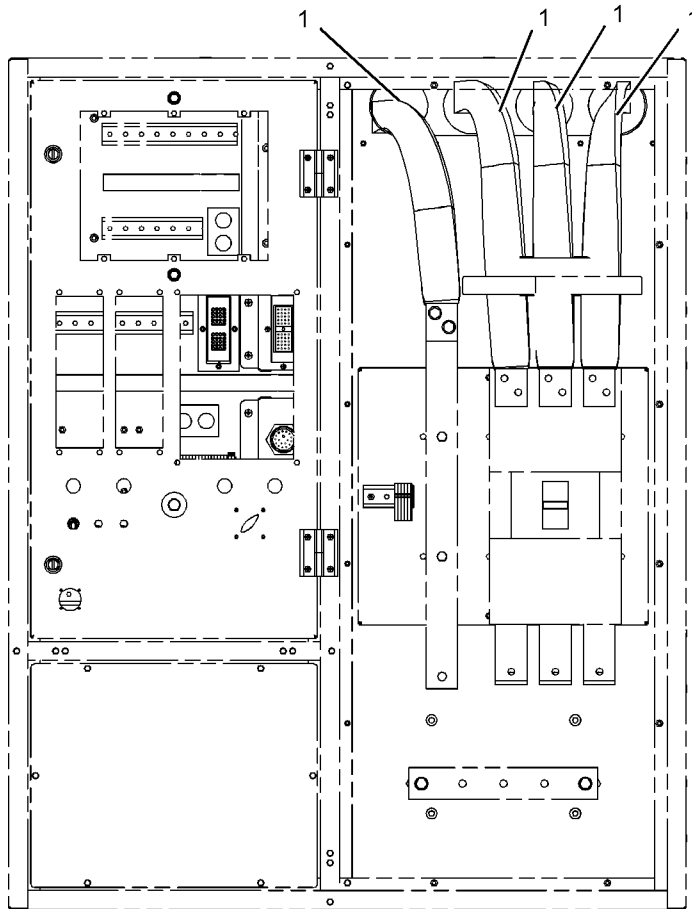

(BREAKER CONNECTION)

<END>

GRAPHIC #1

g01015495