

## Operating Instructions

### Indication and adjustment module PLICSCOM



Contents

**1 About this document ..... 4**

1.1 Function ..... 4

1.2 Target group ..... 4

1.3 Symbolism used ..... 4

**2 For your safety ..... 6**

2.1 Authorised personnel ..... 6

2.2 Appropriate use ..... 6

2.3 Warning about misuse ..... 6

2.4 General safety instructions ..... 6

2.5 CE-conformity ..... 7

2.6 Safety instructions for Ex areas ..... 7

2.7 Environmental instructions ..... 7

**3 Product description ..... 8**

3.1 Configuration ..... 8

3.2 Principle of operation ..... 9

3.3 Adjustment ..... 9

3.4 Storage and transport ..... 9

**4 Mounting ..... 10**

4.1 Mounting procedure ..... 10

|                                                |           |
|------------------------------------------------|-----------|
| <b>5 Set-up .....</b>                          | <b>11</b> |
| 5.1 Adjustment system .....                    | 11        |
| 5.2 Menu schematic .....                       | 12        |
| 5.3 General functions .....                    | 16        |
| 5.4 Special functions, 4 ... 20 mA/HART® ..... | 25        |
| 5.5 Special functions, Profibus PA .....       | 27        |
| <b>6 Dismounting .....</b>                     | <b>32</b> |
| 6.1 Dismounting procedure .....                | 32        |
| 6.2 Disposal .....                             | 32        |
| <b>Supplement .....</b>                        | <b>33</b> |
| Technical data .....                           | 33        |
| Dimensions .....                               | 34        |

# 1 About this document

## 1.1 Function

This operating instructions manual has all the information you need for quick set-up and safe operation of PLICSCOM. Please read this manual before you start set-up.

## 1.2 Target group

This operating instructions manual is directed to trained personnel. The contents of this manual should be made available to these personnel and put into practice by them.

## 1.3 Symbolism used



### Information, tip, note

This symbol indicates helpful additional information.



### Caution

This symbol informs you of a dangerous situation that could occur. Ignoring this cautionary note can impair the person and/or the instrument.



### Ex applications

This symbol indicates special instructions for Ex applications.

- **List**

The dot set in front indicates a list with no implied sequence.

- **Action**

This arrow indicates a single action.

- 1 **Sequence**

Numbers set in front indicate successive steps in a procedure.

## 2 For your safety

### 2.1 Authorised personnel

All operations described in this operating instructions manual must be carried out only by trained and authorised specialist personnel. For safety and warranty reasons, any internal work on the instruments must be carried out only by VEGA personnel.

### 2.2 Appropriate use

PLICSCOM is a pluggable indication and adjustment module for VEGA level and pressure sensors.

### 2.3 Warning about misuse



Inappropriate or incorrect use of the instrument can give rise to application-specific hazards, e.g. vessel overfill or damage to system components through incorrect mounting or adjustment.

### 2.4 General safety instructions

PLICSCOM is a high-tech instrument requiring the strict observance of standard regulations and guidelines. The user must take note of the safety instructions in this manual, the country-specific installation standards (e.g. the VDE regulations in Germany) as well as prevailing safety regulations and accident prevention rules.

## 2.5 CE-conformity

PLICSCOM is in CE conformity with EMC (89/336/EWG) and NSR (73/23/EWG).

The conformity has been evaluated acc. to the following standards:

- EMC
  - Emission EN 61326: 1997
  - Susceptibility EN 61326: 1997 + A1: 1998
- NSR EN 61010: 2001.

## 2.6 Safety instructions for Ex areas



In Ex applications, please observe the Ex specific safety instructions. These are part of the operating instructions manual of the respective instrument and are delivered with every instrument with Ex approval.

## 2.7 Environmental instructions

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified acc. to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter 3.4 „Storage and transport“
- Chapter 6.2 „Disposal“.

## 3 Product description

### 3.1 Configuration

#### Scope of delivery

The scope of delivery encompasses:

- indication and adjustment module PLICSCOM
- documentation
  - this operating instructions manual
- optional: cover with inspection glass.

#### Components

PLICSCOM is provided with a display with full dot matrix and four buttons for adjustment purposes.

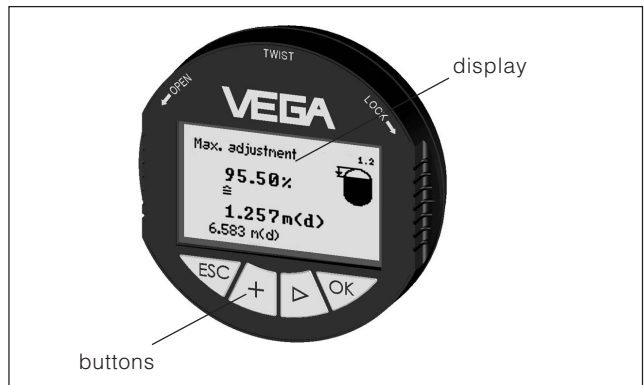


Fig. 1:  
Indication and adjustment module PLICSCOM

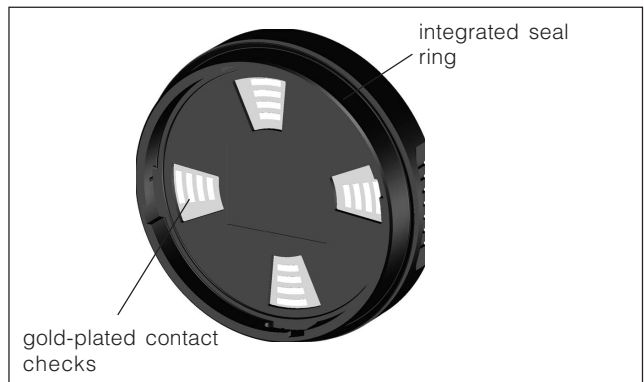


Fig. 2:  
Back side of the indication and adjustment module PLICSCOM



## 3.2 Principle of operation

### Area of application

The indication and adjustment module PLICSCOM is designed for indication of measured values, adjustment and diagnosis for VEGAPULS series 60, VEGAFLEX series 60 and VEGABAR series 50 and 60. It is installed in the sensor housing or in the external indication and adjustment unit VEGADIS 61.

The operation of two PLICSCOMs in parallel is not supported.

After installation, the sensor and PLICSCOM are splash-proof even without the housing cover.

### Power supply

The power supply is provided by the sensor or VEGADIS 61. An additional connection is not necessary.

## 3.3 Adjustment

The adjustment is carried out via the integrated buttons.

## 3.4 Storage and transport

### Packaging

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test acc. to DIN 55439.

The packaging consists of environment-friendly, recyclable cardboard. Dispose of the packing material via specialised recycling companies.

### Storage and transport temperature

- Storage and transport temperature -40 ... +80°C
- Relative humidity 20 ... 85 %.

## 4 Mounting

### 4.1 Mounting procedure

#### Insert/remove PLICSCOM

PLICSCOM can be inserted or removed at any time. An interruption of the power supply is not necessary.



To install, proceed as follows:

- 1 Unscrew housing cover
- 2 Place PLICSCOM in the desired position on the electronics (you can choose any one of four different positions - each displaced by 90°)

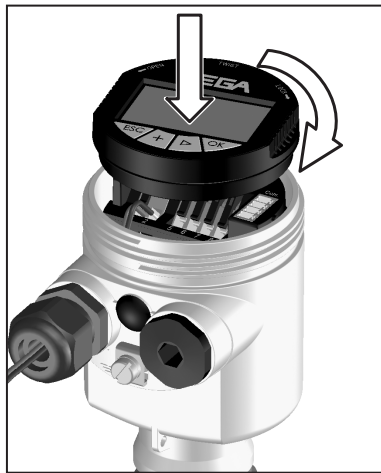


Fig. 3:  
Insertion of PLICSCOM

- 3 Press PLICSCOM lightly onto the electronics and turn it to the right until it snaps in
- 4 Screw the housing cover with inspection glass tightly back on



The housing cover without inspection window cannot be screwed on if PLICSCOM is installed.

Removal is carried out in reverse order.