

Reset

Basic adjustment:

Resets the adjusted and changed values.

Default setting:


Resets the service parameters which are changed with PACTware™.

Peak value of measurement and temperature ¹⁾:

Resets the min./max. values of pressure, level and temperature to the current values.

Reset values of the basic adjustment:


Menu	Menu point	VEGAPULS/VEGASON	VEGAFLEX	VEGABAR
Basic setting	Adjustment unit	deleted	deleted	Density unit kg/dm ³
		deleted	deleted	Density 1.0000 kg/dm ³
	zero, min. adjustment	upper dead zone depending on the instr.	50, 150, 300 mm (upper dead zone dep. on the instr.)	Beginning of nominal range
	span, max. adjustment	End of nominal range	30 m (d)	End of nominal range
	Damping	1 s	1 s	1 s
	Linearisation curve	linear	linear	linear
	Sensor-TAG	Sensor	Sensor	Sensor
Display	Indication value 1	Distance	Height	Dep. on adjustment unit pressure or height
	Scaling	0 % = 0.0, 100 % = 100.0		
Service	Current output	Characteristics: 4 ... 20 mA Failure mode: keep value min. current: 3.8 mA		

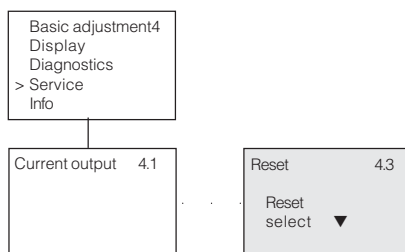

¹⁾ Temperature only with VEGABAR and VEGASON.


Adjustment unit ¹⁾

In this menu item you can select the system unit of the sensor in m (d) or ft (d).

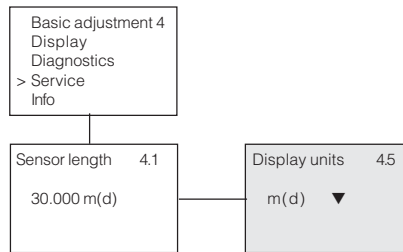**Language**

The sensor is preset to the ordered language. In this menu item you can select the desired language:

- German
- English
- Français
- Español
- Pycckuu.

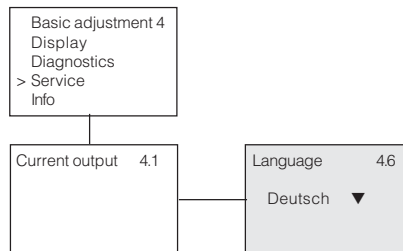


¹⁾ The description refers only to VEGAPULS, VEGASON and VEGAFLEX. For VEGABAR you will find the description in the sensor operating instructions manual under basic settings.

Copy sensor data

With this function you:

- copy data from the sensor
- copy data into the sensor.

The data are temporarily stored in PLICSCOM. They can be copied from there into several sensors of the same type or kept as a backup for a possible sensor exchange. When the data are copied into a sensor, the instrument type from which the data originate as well as the TAG no. of that sensor are displayed.

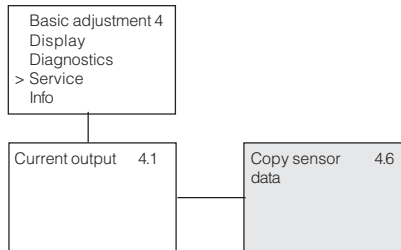


Activate/Deactivate PIN

Entering a 4-digit PIN protects the sensor data against unauthorised access and unintentional modifications. If the PIN is activated, only the following functions are available:

- select menu items and have data displayed
- copy data from the sensor into PLICSCOM.


In this menu item, the PIN is activated/deactivated permanently. If the PIN is activated permanently, it can be deactivated temporarily (i.e. for approx. 60 min.) in any menu item. The instrument is delivered with the PIN set to 0000.

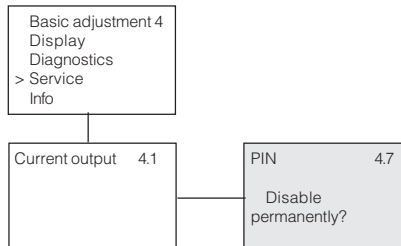

Info

In this menu, the most important sensor information can be displayed:

- Instrument type: e.g. VEGAPULS 61
- Serial no.: 8-digit figure, e.g. 12345678
- Calibration date: Date of the factory calibration e.g. 26. September 2003
- Software version: Edition of the sensor software, e.g. 3.03.00
- Last modification via PC: Date of the last modification of sensor parameters with the PC, e.g. 26. September 2003
- Sensor features, e.g. approval, sensor fittings, seal, meas. cell, meas. range, electronics, housing, cable entry, plug, length of the suspension cable.

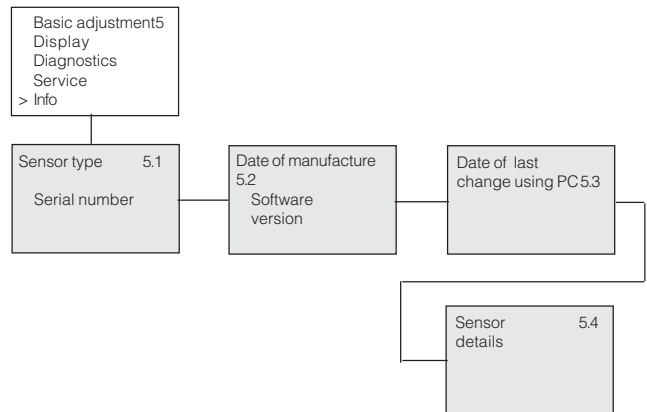

5.4 Special functions, 4 ... 20 mA/HART®

The 4 ... 20 mA/HART® specifications are briefly described in this paragraph. PLICSCOM's range of function is determined by the sensor and the sensor software version.

Display

In the menu item „Display“ you can define how the measured value should be presented on the display.

The following indication values are available:

- Height
- Pressure (only with VEGABAR)
- Distance (only with VEGAPULS, VEGASON and VEGAFLEX)
- Current
- Scaled
- Percentage
- Lin. percentage
- Temperature (only with VEGABAR).

The selection „scaled“ opens the menu items „Display unit“ and „Scaling“. In the menu item „Display unit“ there are the following options with the appropriate units:


- Height
- Mass
- Flow
- Volume
- Without unit.

The desired numerical value with decimal point for 0 % and 100 % is entered in the menu item „Scaling“.



There is the following connection between the indication value in the menu item „Display“ and the adjustment unit in the menu item „Basic adjustment“:

- When the indication value „Distance“ is selected on VEGAPULS, VEGASON and VEGAFLEX, the measured value is displayed in the selected adjustment unit, e.g. m (d).
- When the indication value „Pressure“ or „Height“ is selected on VEGABAR, the measured value is displayed in the selected adjustment unit, e.g. bar or m.

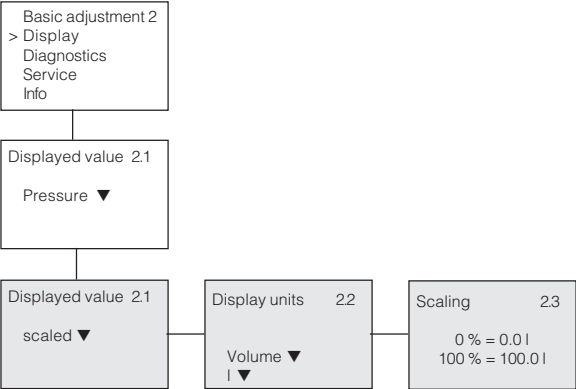

Current output

In the menu item „Current output“ you determine the behaviour of the current output during operation and in case of failure. The following options are available:


Current output	Characteristics	4 ... 20 mA
		20 ... 4 mA
	Failure mode ¹⁾	Hold value
		20.5 mA
		22.0 mA
		< 3.6 mA
	Min. current ²⁾	3.8 mA
		4 mA

¹⁾ Failure mode: value of the current output in case of failure, e.g. if no valid measured value is available.

²⁾ Min. current: the output current never falls below this value during operation

The fields highlighted in grey show the data of the default setting.


In HART® multidrop mode, the current is constantly 4 mA. This value does not change even in case of failure.

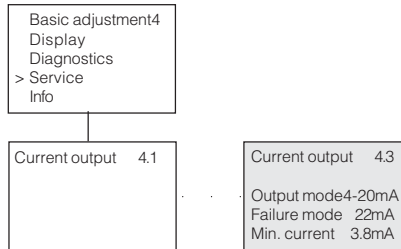

HART® mode

HART® offers the standard and multidrop¹⁾ modes. In multidrop mode, up to 15 sensors can be operated on one two-wire cable.

In this menu item you can set the HART® mode and, in case of multidrop, set the address.

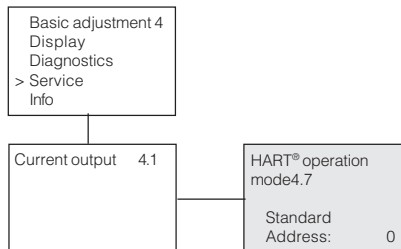


5.5 Special functions, Profibus PA

The Profibus PA specifications are briefly described in this paragraph. PLICSCOM's range of function is determined by the sensor and the sensor software version.

¹⁾ In multidrop mode the 4 ... 20 mA signal of the HART® sensor is switched off. The sensor consumes a constant current of 4 mA. The measuring signal is only transmitted as digital HART® signal.

Sensor address


Sensors operate as slaves on the Profibus PA. To be identified as a bus participant, each sensor must have a unique address. Each instrument is delivered with address 126. With this address, it can at first be connected to an existing bus. However, the address must be changed. This can be done in this menu item.

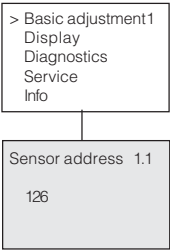

Channel

The channel is the input selector switch for the function block (FB) of the sensor. Within the function block, additional scalings (Out-Scale) are carried out. In this menu item, the value for the function block is selected:

- SV1 (Secondary Value 1):
 - Percent with VEGAPULS, VEGASON and VEGAFLEX
 - Pressure or height with VEGABAR
- SV2 (Secondary Value 2):
 - Distance with VEGAPULS, VEGASON and VEGAFLEX
 - Percent with VEGABAR
- PV (Primary Value): linearised percentage value.

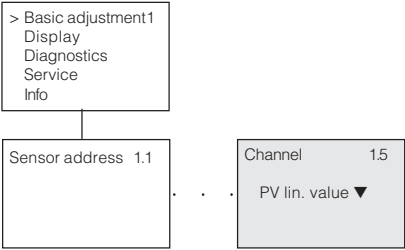

Define display


VEGAPULS, VEGASON and VEGAFLEX deliver the following measured values

- SV1 (Secondary Value 1): Percentage value after the adjustment
- SV2 (Secondary Value 2): Distance value before the adjustment
- PV (Primary Value): Linearised percentage value
- PA-Out (value after passing a function block): PA output.

VEGABAR delivers the following measured values:

- SV1 (Secondary Value 1): Pressure or height value before the adjustment
- SV2 (Secondary Value 2): Percentage value after the adjustment
- PV (Primary Value): Linearised percentage value
- PA-Out (value after passing a function block): PA output
- Temperature.

In the menu „Display“ you define which of these values should be presented on the display.

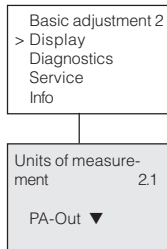

Additional PA value


The Profibus transmits two measured values cyclically. The first value is determined in the menu item „Channel“. The selection of the additional cyclical value is made in the menu item „additional PA value“.

With VEGAPULS, VEGASON and VEGAFLEX, the following values are available for selection:

- SV1 (Secondary Value 1): Percentage value after the adjustment
- SV2 (Secondary Value 2): Distance value before the adjustment
- PV (Primary Value): Linearised percentage value.

With VEGABAR, the following values are available for selection:

- SV1 (Secondary Value 1): Pressure or height value before the adjustment
- SV2 (Secondary Value 2): Percentage value after the adjustment
- PV (Primary Value): Linearised percentage value.

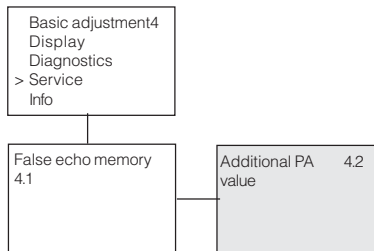

Determine Out-Scale

Here, you determine the unit and scaling for PA-Out. These settings also apply to the value displayed on PLICSCOM, if in the menu item „Indicated value“ PA-Out was selected.

The following indicated values are available in „Out-Scale unit“:

- Pressure (only with VEGABAR)
- Height
- Mass
- Flow
- Volume
- Others (no unit, %, mA).

In the menu item „PV-Out-Scale“, the requested number value (with decimal point, for 0 % and 100 %) of the measured value is entered.