

2.4G 10-Channel Remote Control

2.4G 10-Channel Remote Control

[Product Parameters](#)

[Function Buttons](#)

[Default Channels](#)

[SBUS Receiver](#)

[Pairing Steps](#)

[PWM Receiver](#)


[Pairing Steps](#)

Product Parameters

Product Parameters

Number of channels	10
Applicable models	ROS Robot、robot car、AGV mobile carrier、drone etc
Frequency range	2.4GHz ISM
Spread spectrum method	FHSS
Wireless remote control distance	300~800m(open area)
Receiver signal	SBUS/PWM signal
Connect automatically	After pairing, it supports automatic connection after power on
Low voltage alarm	Support
Antenna length	About 9cm
Number of antennas	Dual Antenna
Weight	About 320g (battery not included)
Size	Remote control(antenna not included): 175mm*150mm*68mm SBUS Receiver (antenna not included): 28mm*15mm*3mm PWM Receiver (antenna not included): 37.8mm*23.7mm*13.5mm
Transmit power	≈120MA
Modulation pattern	GFSK
Responding speed	PWM≤20MS
Receive sensitivity	-96dbm
Receiver power supply range	DC 3.5V-9V
Transmitter power supply range	DC 3.7V-9V
Power supply method	AA battery*4 or lithium battery

Function Buttons

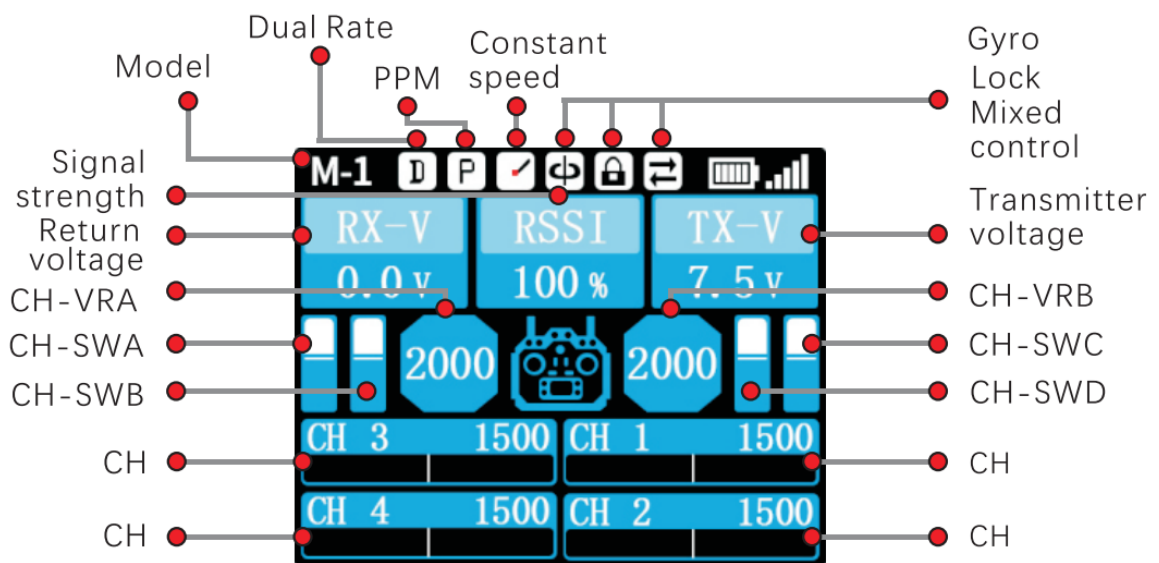


①

Default Channels

HT-10A Remote Controller	Default Channels: No channel mapping on the remote
CH1	Right Joystick: Left/Right
CH2	Right Joystick: Up/Down
CH3	Left Joystick: Up/Down
CH4	Left Joystick: Left/Right
CH5	SWA Channel
CH6	SWB Channel
CH7	SWC Channel
CH8	SWD Channel
CH9	VRA Channel
CH10	VRB Channel

SBUS Receiver

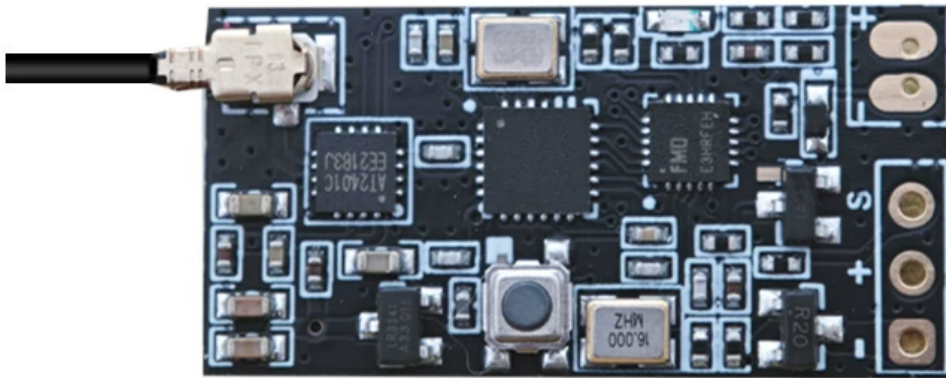

SBUS Receiver	Function
S	Signal Line (SIG)
+	Power Positive (VCC): 5V
-	Power Negative (GND)

Pairing Steps

SBUS Receiver LED Status	Meaning
LED Slow Flash	Device not connected
LED Fast Flash	Pairing mode
LED Solid On	Device connected

1. Power on the SBUS receiver. The LED on the SBUS receiver will be in slow flash mode;
2. Press and hold the button on the SBUS receiver for 1 second. The LED will fast flash, indicating the SBUS receiver has entered pairing mode;


- Turn on the HT-10A remote controller's power switch. On the main interface, press the "OK button" to enter settings, then use the "Up button", "Down button", "Back button", and "OK button" to navigate different options:



- After successful connection, the LED on the SBUS receiver will be solid on: When connected, it cannot enter pairing mode.

Note: The HT-10A remote controller and SBUS receiver only need to be paired once. They will automatically connect on next power-on. No need to pair again!

PWM Receiver

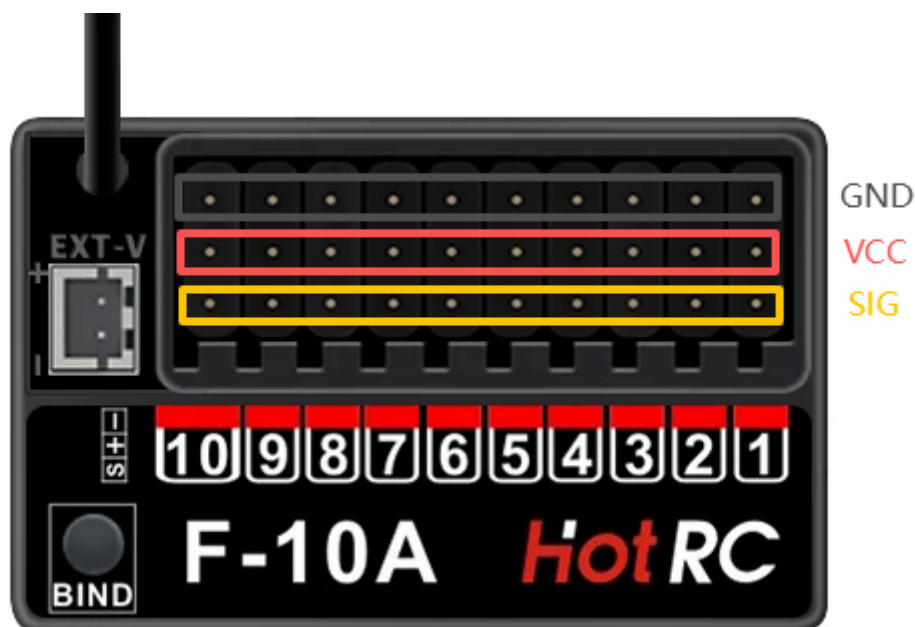

PWM Receiver	Pin Function
S (Signal)	SIG (Yellow)
+ (Positive)	VCC (Red): 5V
- (Negative)	GND (Black)

Pairing Steps

PWM Receiver LED Status	Meaning
LED Slow Flash	Device not connected
LED Fast Flash	Pairing mode
LED Solid On	Device connected

1. Power on the PWM receiver. The LED on the PWM receiver will be in slow flash mode;
2. Press and hold the button on the PWM receiver for 1 second. The LED will fast flash, indicating the PWM receiver has entered pairing mode;
3. Turn on the HT-10A remote controller's power switch. The HT-10A remote controller will automatically pair with the PWM receiver;
4. After successful pairing, the LED on the PWM receiver will be solid on: When connected, it cannot enter pairing mode.

Note: The HT-10A remote controller and PWM receiver only need to be paired once. They will automatically connect on next power-on. No need to pair again!