

PWM receiver usage process

PWM receiver usage process

- Hardware Preparation
- HT-10A Remote Controller
- PWM Receiver
- Pairing Steps
- Controlling the PWM Servo

Hardware Preparation

- HT-10A Remote Controller
- PWM Receiver
- PWM Servo: 180°

HT-10A Remote Controller

Install 4 AA batteries in advance to power the HT-10A remote controller:




HT-10A Remote Controller	Default Channels: No channel mapping on the remote
CH1	Right Joystick: Left/Right
CH2	Right Joystick: Up/Down
CH3	Left Joystick: Up/Down
CH4	Left Joystick: Left/Right
CH5	SWA Channel
CH6	SWB Channel
CH7	SWC Channel
CH8	SWD Channel
CH9	VRA Channel
CH10	VRB Channel

PWM Receiver

Diagram showing the connection between the PWM receiver and the 180° PWM servo: Users can use other devices to provide 5V power to the PWM receiver

PWM Receiver	180° Servo	ROS Control Board (Power for PWM Receiver)
S (Signal)	SIG (Yellow)	
+ (Positive)	VCC (Red)	5V
- (Negative)	GND (Brown)	GND

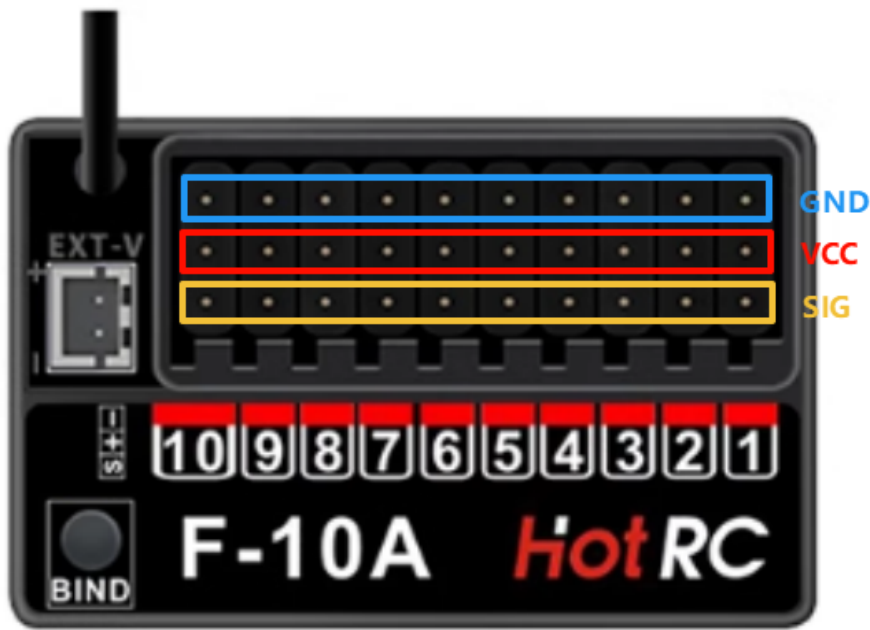

The two 180° PWM servos in the image are connected to CH1 and CH2 respectively. The ROS control board powers the PWM receiver through CH10's VCC and GND!

Pairing Steps

Use a 12V T-type battery pack or MicroUSB cable to power the ROS control board. The ROS control board powers the PWM receiver through the VCC (5V) and GND interfaces.

PWM Receiver LED Status	Meaning
LED Slow Flash	Device not connected
LED Fast Flash	Pairing mode
LED Solid On	Device connected

1. Power on the PWM receiver. The LED on the PWM receiver will be in slow flash mode;
2. Press and hold the button on the PWM receiver for 1 second. The LED will fast flash, indicating the PWM receiver has entered pairing mode;

- 3. Turn on the HT-10A remote controller's power switch. The HT-10A remote controller will automatically pair with the PWM receiver;
- 4. After successful pairing, the LED on the PWM receiver will be solid on: When connected, it cannot enter pairing mode.

Note: The HT-10A remote controller and PWM receiver only need to be paired once. They will automatically connect on next power-on. No need to pair again!


Controlling the PWM Servo

The HT-10A remote controller can set the servo frequency and rotation angle through the display screen and its surrounding buttons:

HT-10A Remote Controller	Function
①	Up Button
②	Down Button
③	Back Button
④	OK Button

On the main interface, press the "OK button" to enter settings, then use the "Up button", "Down button", "Back button", and "OK button" to navigate different options. The tutorial controls a 180° PWM servo:

Recommended settings: Servo frequency: 50Hz, Servo angle: 180°

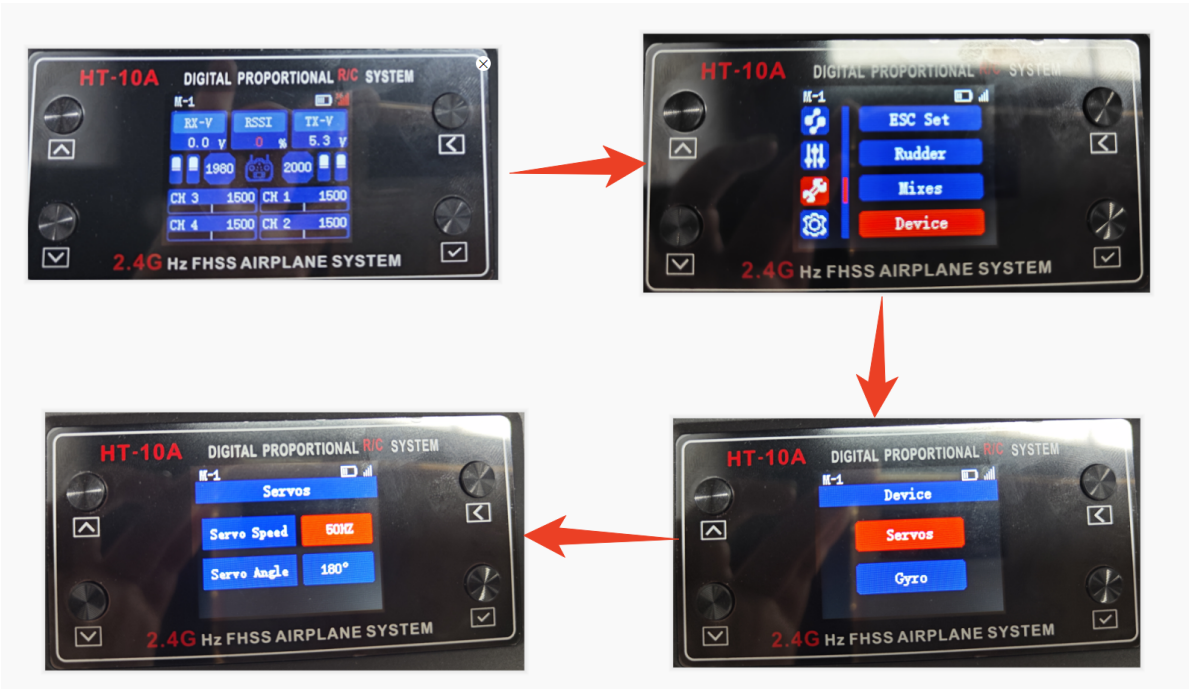

After completing the above settings, you can control the servo on the corresponding channel using the joystick!