Serial Communication Function

Serial Communication Function
- 1. GPIO Pin Diagram
- 2. Serial Port Testing
  - 2.1 Installing cutecom
  - 2.2 Using cutecom
- 3. Experimental Results

1. GPIO Pin Diagram

GPIO.BOARD pin 8 corresponds to GPIO.BCM 14, GPIO.BOARD pin 10 corresponds to GPIO.BCM 15:

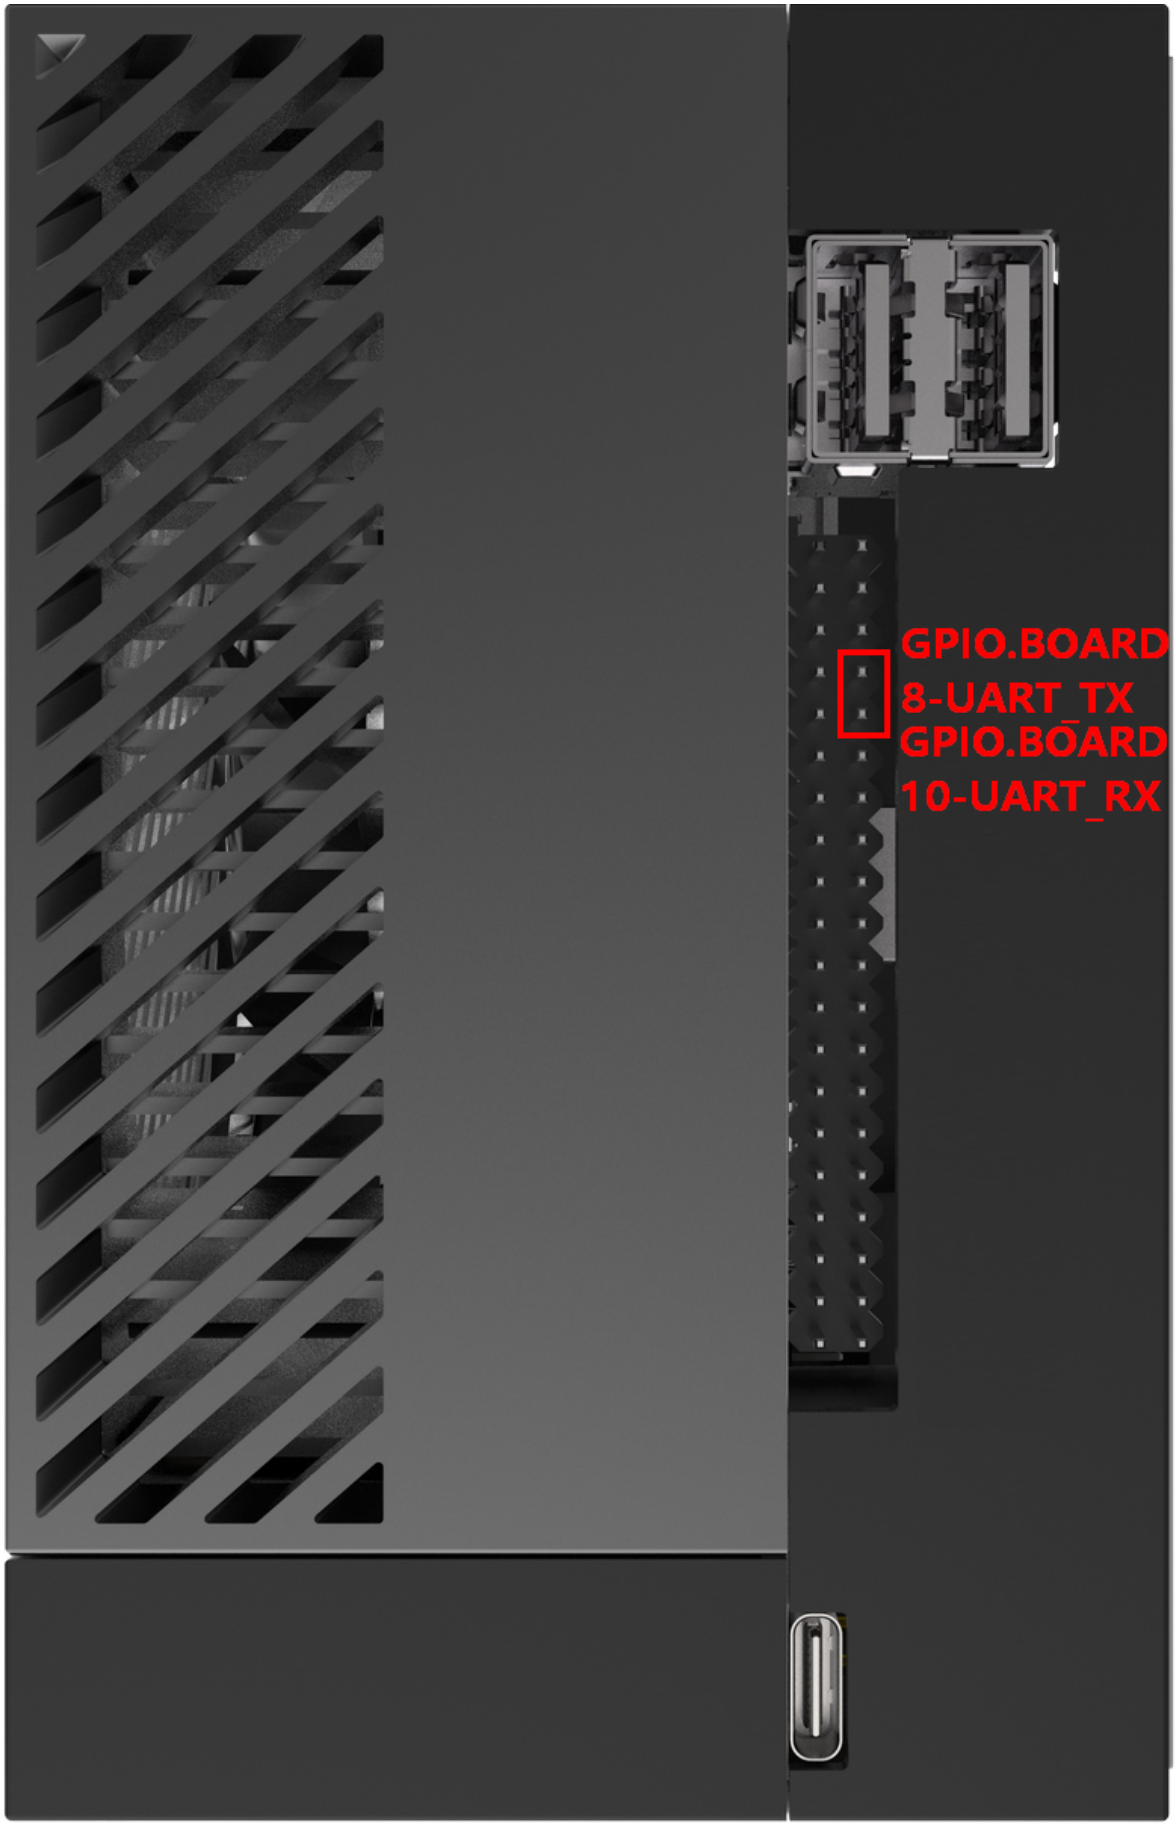

2. Serial Port Testing

2.1 Installing cutecom

```
sudo apt update
sudo apt install cutecom -y
```

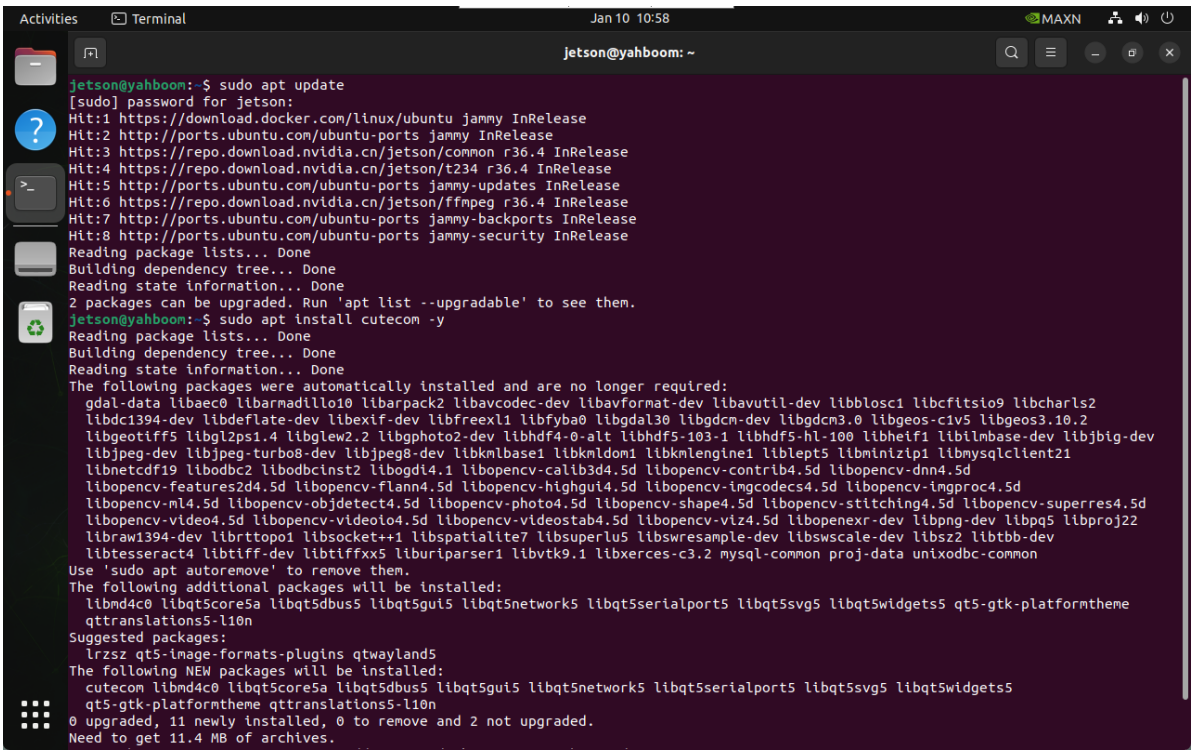

2.2 Using cutecom

Start `cutecom` in the terminal:

```
sudo cutecom
```

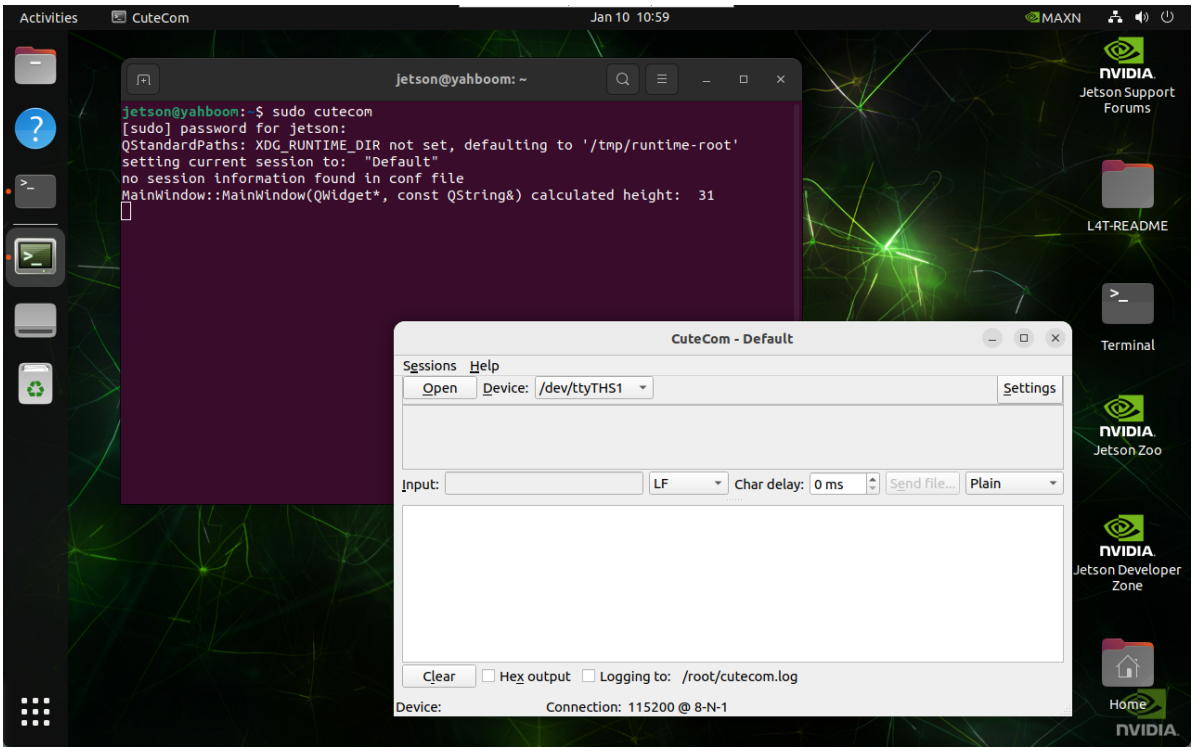

3. Experimental Results

Short-circuit GPIO.BOARD 8 and GPIO.BOARD 10 pins using jumper caps or DuPont wires.

Open the `/dev/ttyTHS1` serial port using `cutecom`: Enter the data to be sent via the serial port in `Input`. The upper window displays the data sent via `/dev/ttyTHS1`, and the lower window displays the data received via `/dev/ttyTHS1`:
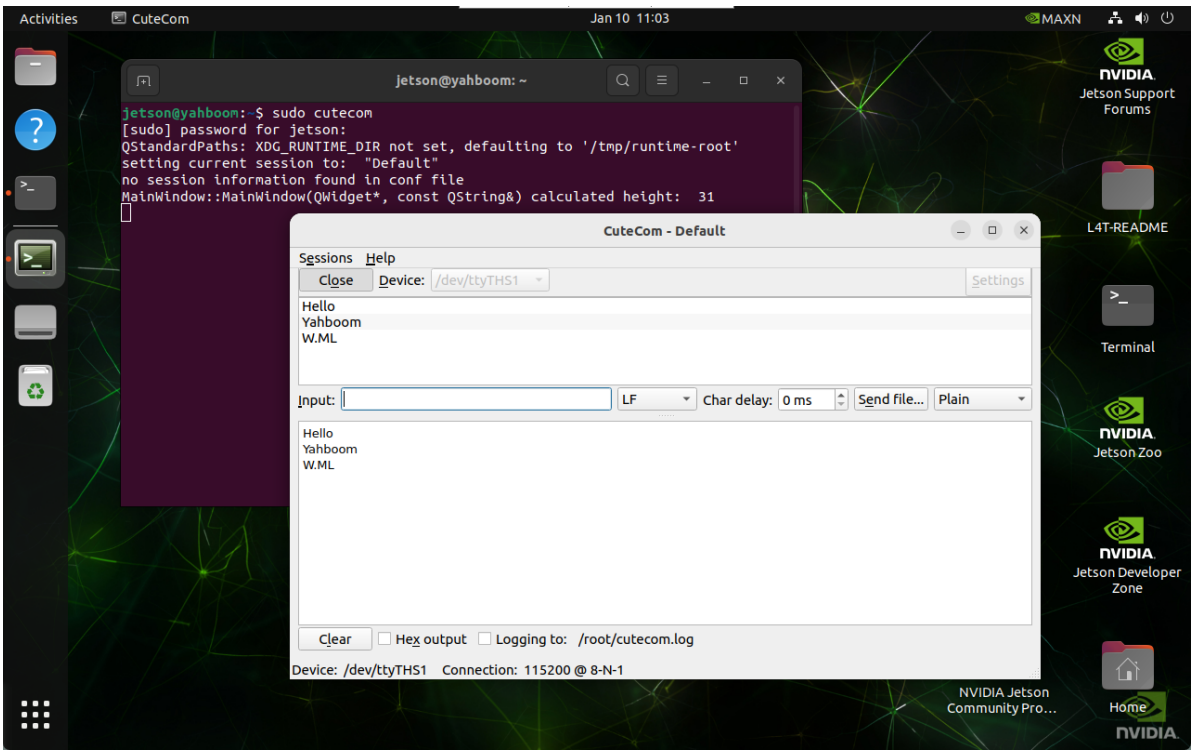
Caution: Do not connect incorrectly or cause a short circuit. Errors may damage the motherboard hardware!