
SSH remote login

1. MobaXterm

MobaXterm is a powerful remote tool that integrates SHH, VNC, FTP and other remote tools.


2. MobaXterm installation


Official website: https://mobaxterm.mobatek.net/

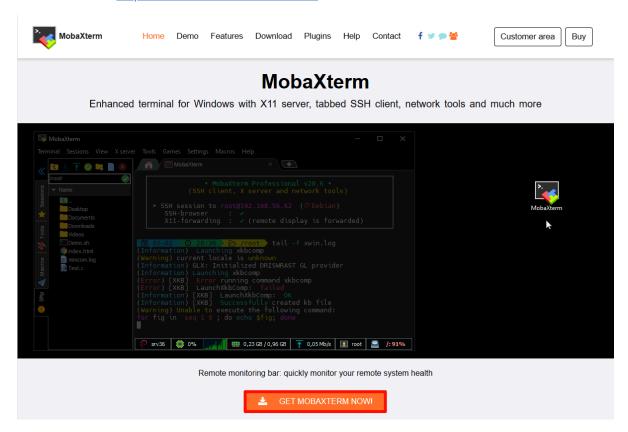


2.1. Download MobaXterm

Select the free version to download:

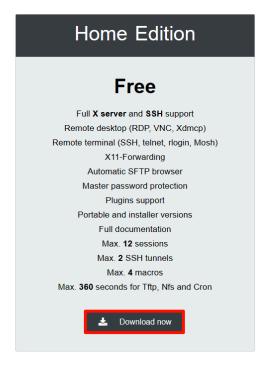

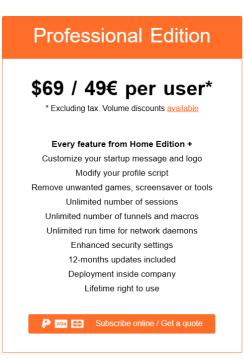


Select the installation version to download:

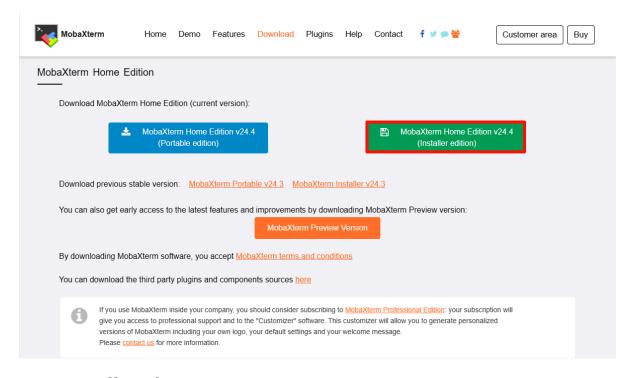


2.2. Install MobaXterm


Unzip the compressed package downloaded from the official website, open the Mobaxterm_installer_24.4.msi file to install:

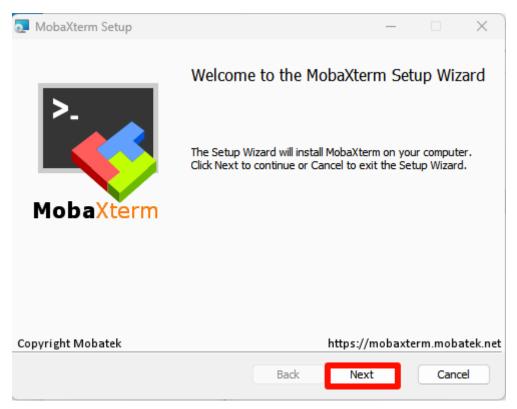


Agree to the agreement:

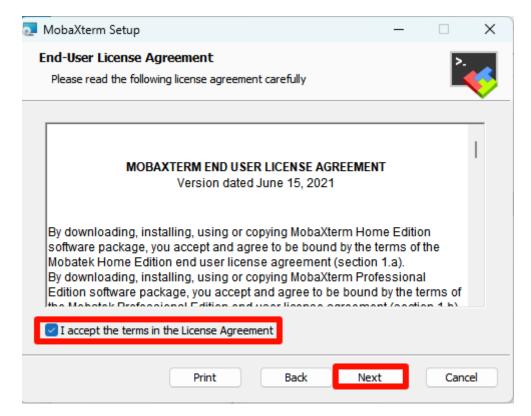


Select the software installation location: the default location is recommended

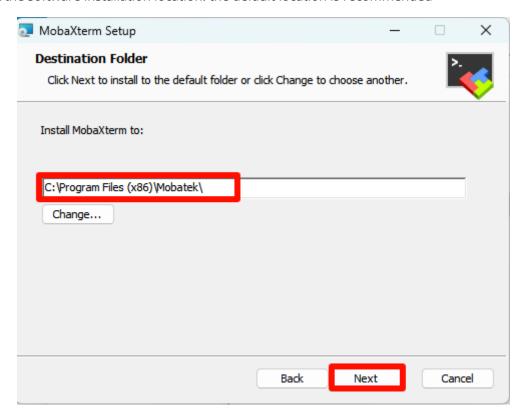

Official installation:

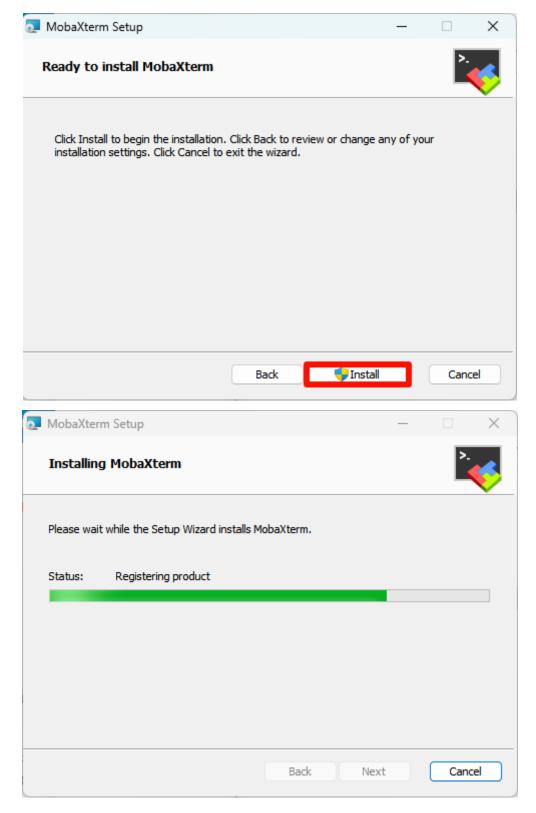


Complete installation:

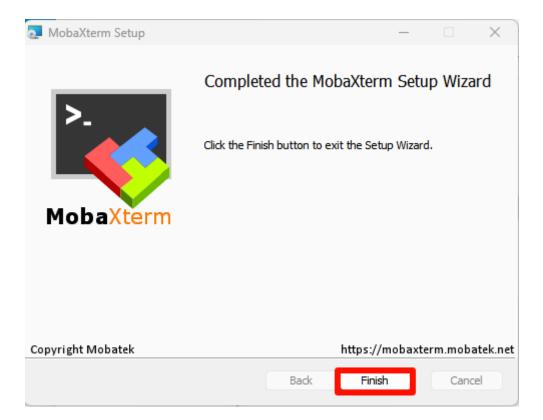

3. Use MobaXterm

Find the Mobaxterm icon on the desktop and open it:



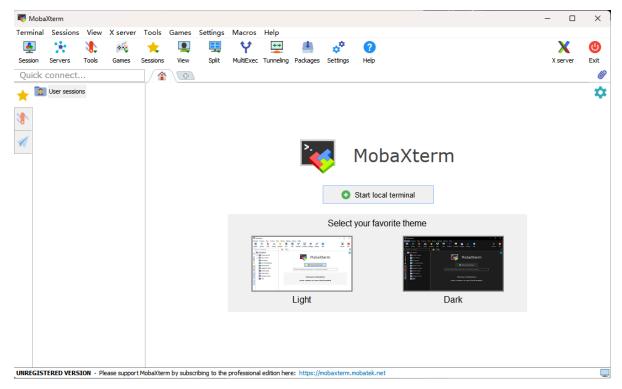


4. MobaXterm: SSH remote

Select $Session \rightarrow SSH$: Fill in the remote device IP and username


Default information of Jetson motherboard:

Username: jetson Password: yahboom


Note: When MobaXterm uses SSH remote, it will automatically use SFTP remote login in the sidebar

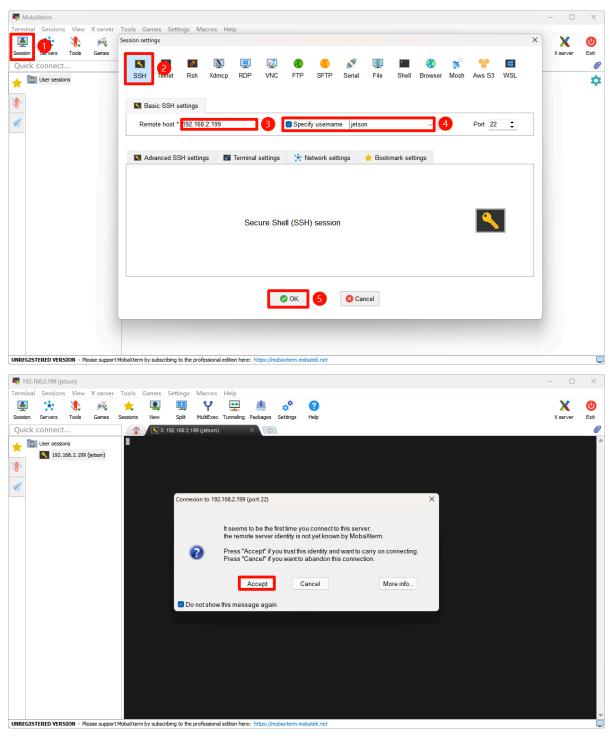

Enter the user password: The password session window will not be displayed. Press Enter after entering the password!

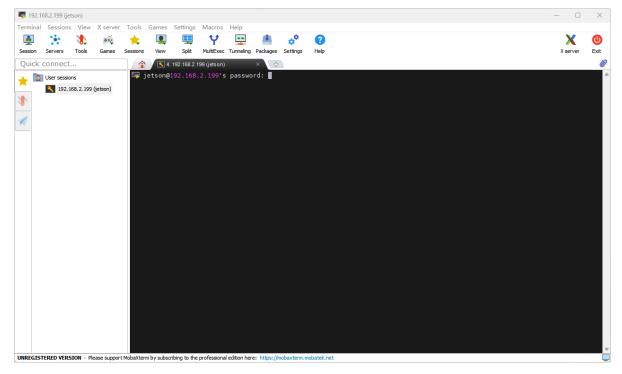

Save password: It is recommended not to save

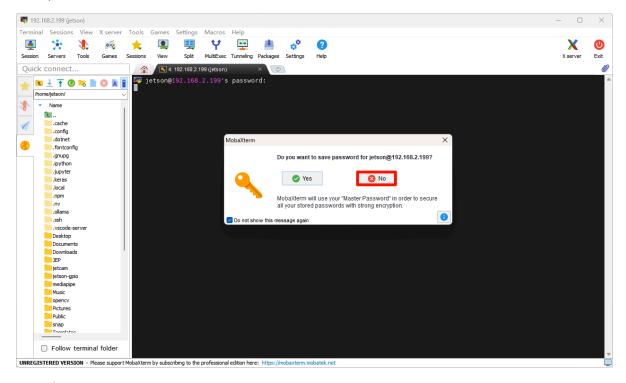

Complete SSH remote:

