


Network configuration


Wired network connection

Wired network does not need to be configured. You can access the Internet by plugging in the network cable and connecting it to the LAN port of the router or switch.

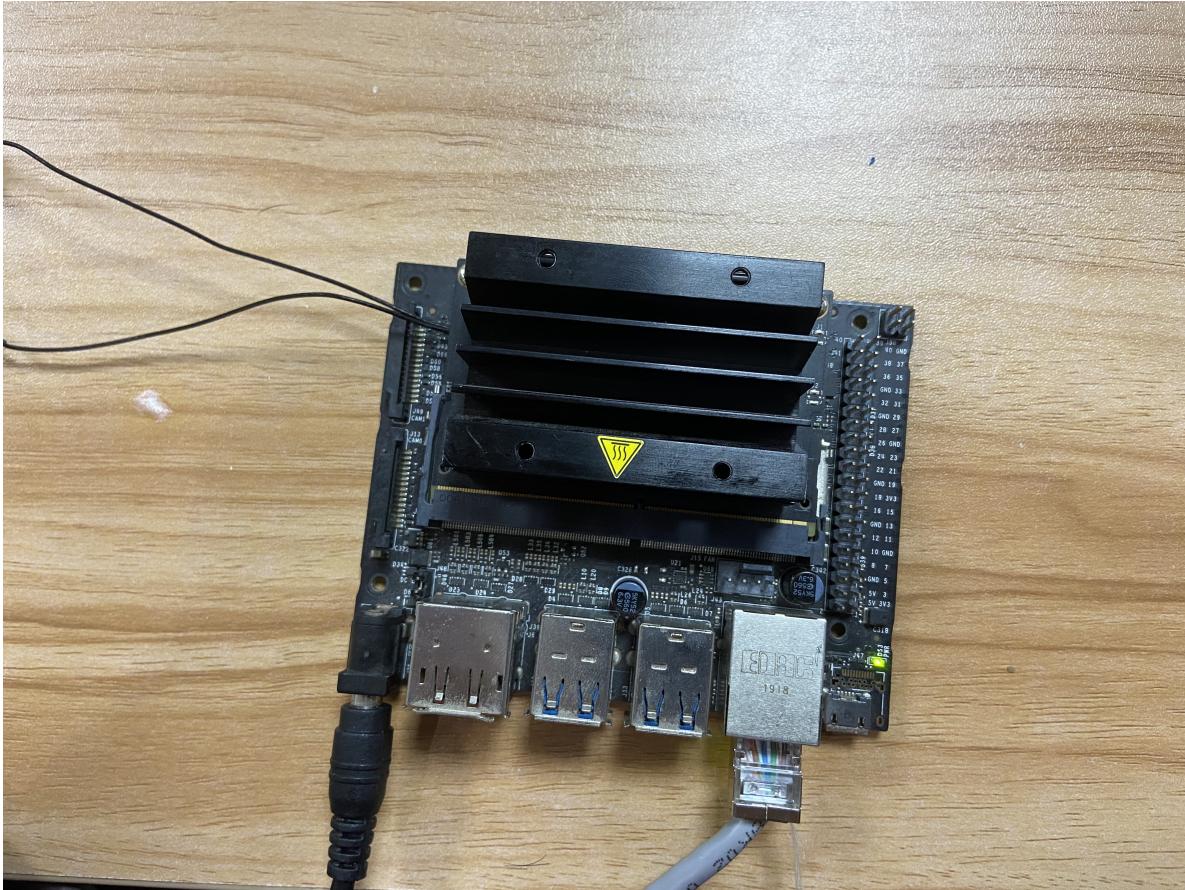

Wireless network connection

Desktop connection to wifi

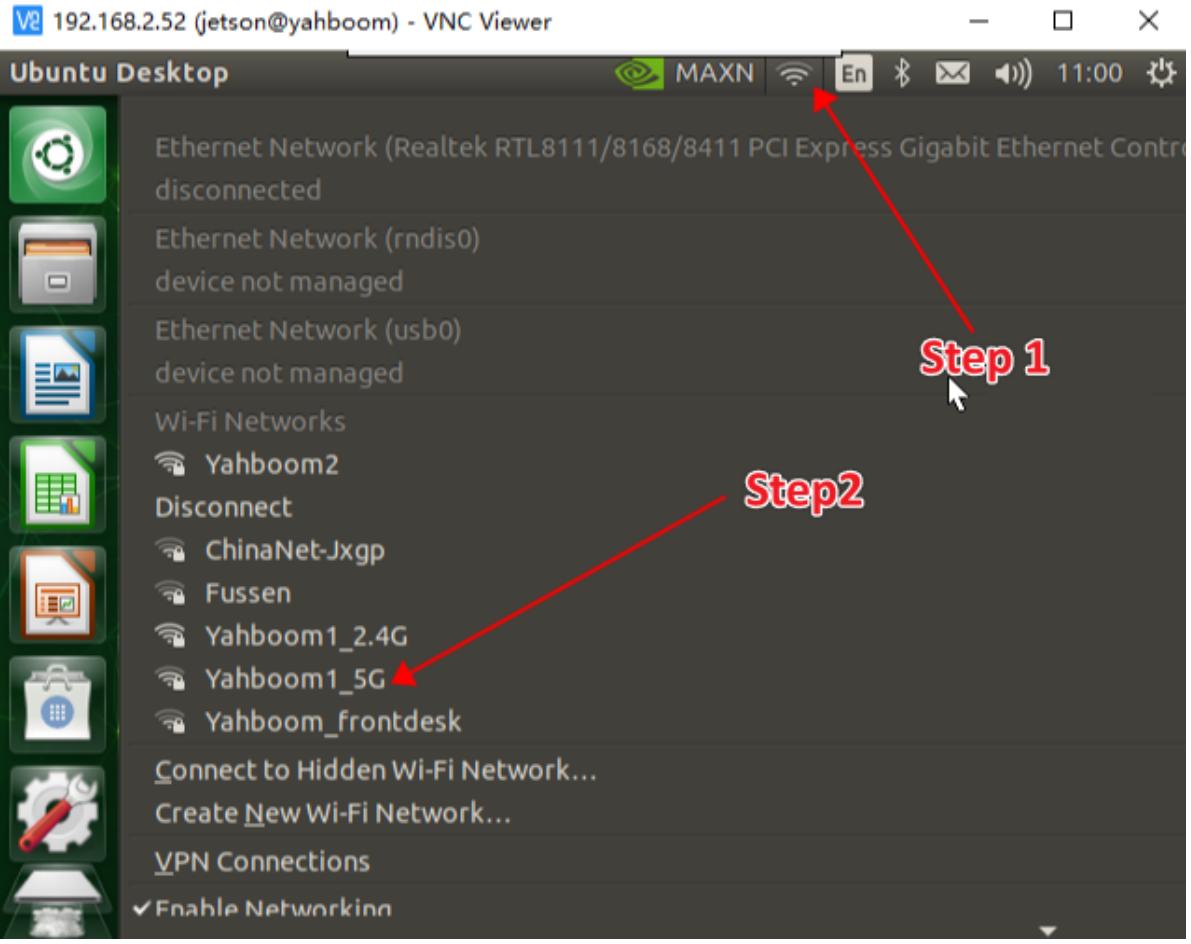

The first step is to click the network symbol above, and the second step is to select the network we need to connect to and enter the password. I have already connected to the yahboom2 network here

Get the IP address of the motherboard

```
ifconfig
```

```
jetson@yahboom: ~
ns 0

usb0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
      ether 4a:4c:3a:fd:ea:eb txqueuelen 1000 (Ethernet)
        RX packets 0 bytes 0 (0.0 B)
        RX errors 0 dropped 0 overruns 0 frame 0
        TX packets 0 bytes 0 (0.0 B)
        TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
ns 0 Jetson
Developer
nvidia
nvidia-zoo
Suppor
Forum
jetson-zoo
Other Tutorials
jetson@yahboom:~$
```

Because wifi is used, look at the IP in the wlan0 line and you can find that the IP address is 192.168.2.52. If it is connected to a network cable, check the IP address on the eth0 line.