

Firmware Flashing (Must Read)


1. Firmware Upgrade

Since the original firmware does not include spam voice recognition commands, you need to upgrade the firmware to use the subsequent voice control spam voice recognition function. The firmware and firmware upgrade tool can be obtained from the download section of the official website's tutorial link.


- Connect the module to the computer
- Open the "PACK_UPDATE_TOOL.exe" application
- Select CI1302 chip, then click "Update"




- Click to select the factory firmware you just obtained,

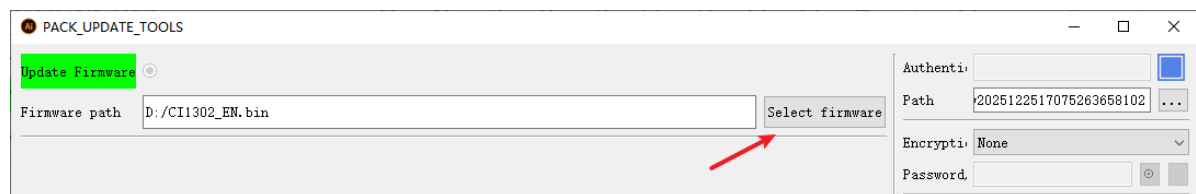

- Find the corresponding serial port number and check the blue box

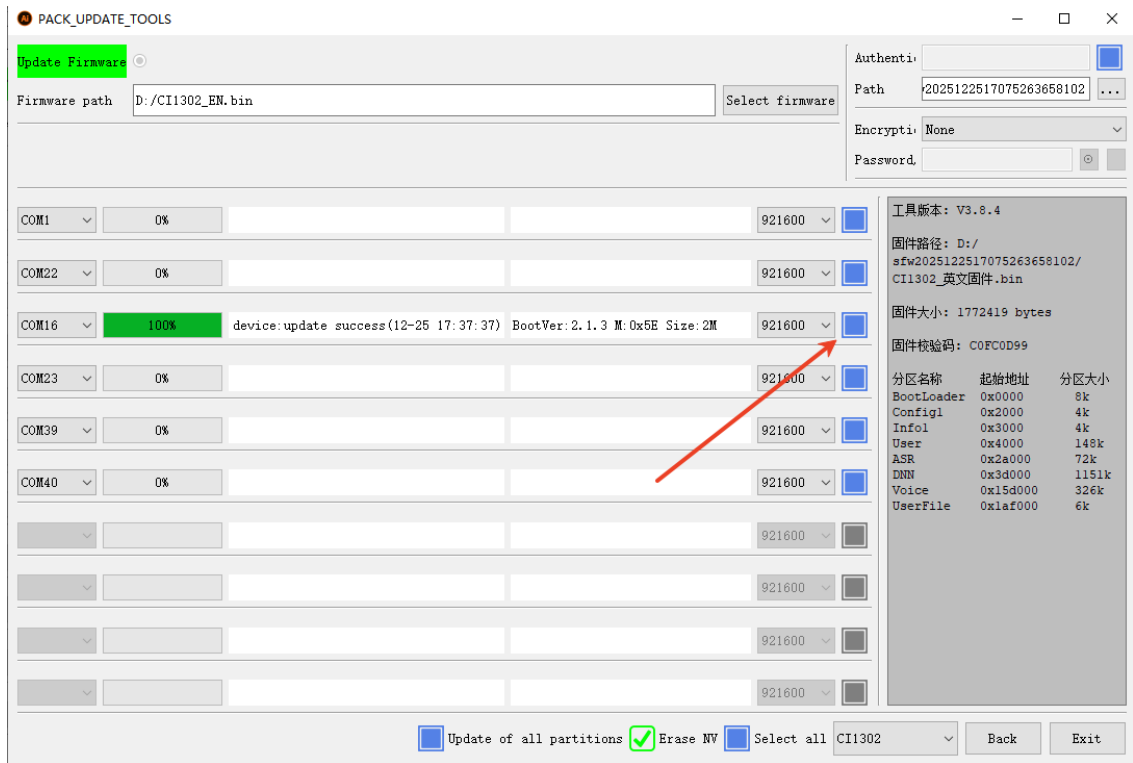

- Press the RST key (the only button) on the module to enter flashing mode, wait for the flashing to complete successfully.




2. Install English Driver Library

Download the py_install_v0.0.3 file provided in the source code, located in [Code] -> [Firmware] -> [Voice module firmware], and place it in the /home/yahboom directory.

Open file path: /home/yahboom/py_install_v0.0.3/Speech_Lib

File name: Speech_Lib.py

Change line 14 to "en"

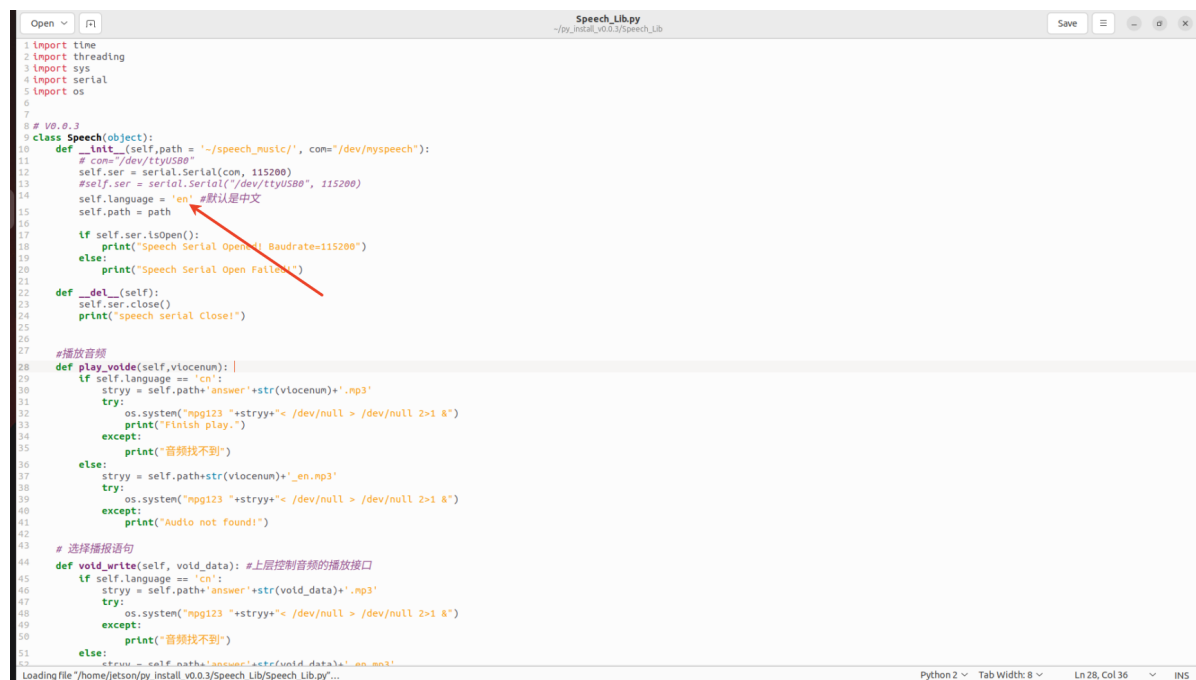

Install python driver library

```
cd /home/yahboom/py_install_v0.0.3  
sudo python3 setup.py install
```

Import the speech_ID.xlsx file (pre-placed at the factory)

Open the program source code path and import the file: speech_ID into the /home/yahboom path.