

Switching AI Vision Mode


Switching AI Vision Mode

- The module needs to be connected to the usb-ttl module
- Serial port configuration
- Instructions for AI mode operation
 - 3. Configure wifi mode
 - Virtual keys in mode

This document mainly explains how to switch AI recognition mode. The recognition mode needs to be configured with the WiFi mode according to the instructions in **Serial Port WiFi Configuration Instructions**, and then enter the web page or the mobile phone remote control app to open the screen before starting the recognition. Otherwise, there will be no output results.

The module needs to be connected to the usb-ttl module

usbttl	wifi camera
RX	TX
TX	RX
GND	GND
VCC	VCC

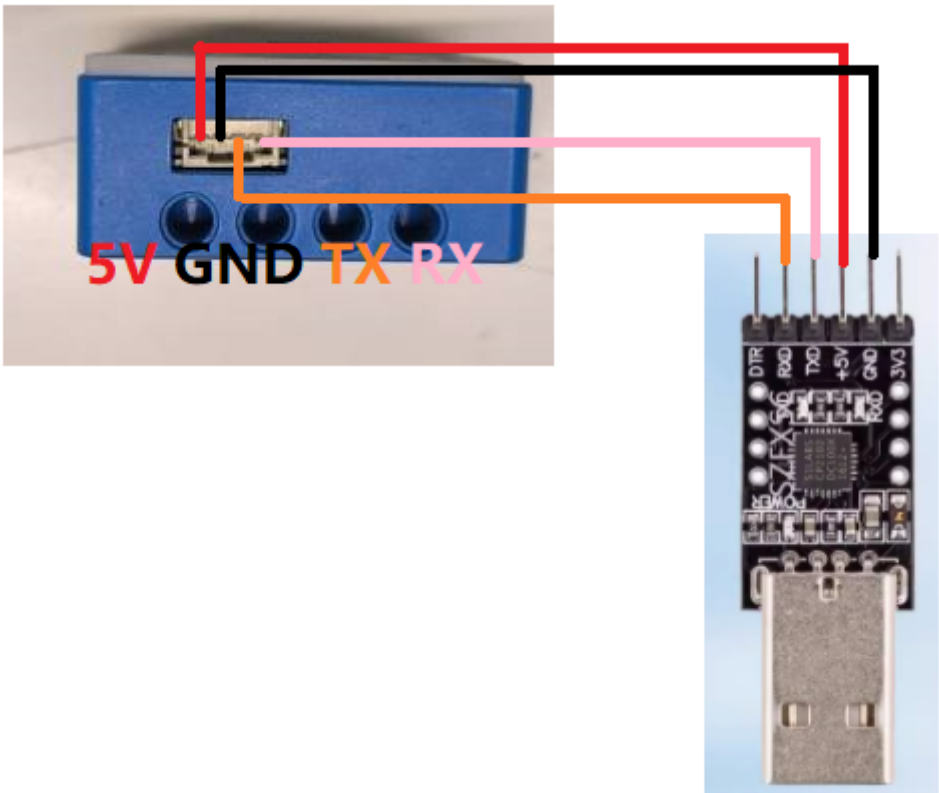


Serial port configuration

Baud rate 115200, no parity, no hardware flow control, 1 stop bit

If you use the serial port assistant configuration, when sending instructions, you need to **remove** the automatic sending of new lines (additional bits)

As shown in the figure:

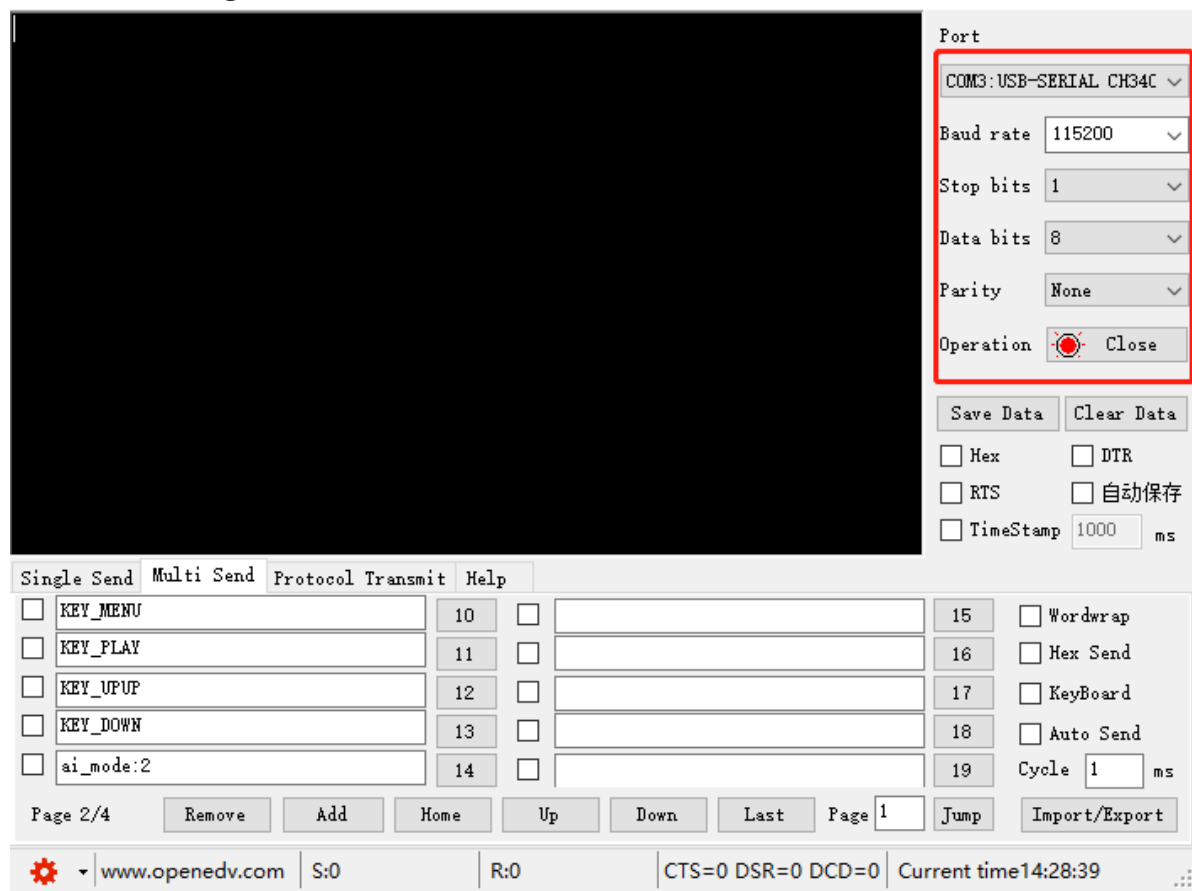

Instructions for AI mode operation

3. Configure wifi mode

Instructions	Description	Example	Notes
ai_mode:	Configure AI recognition mode	ai_mode:0	0: Normal mode 1: Cat and dog detection 2: Face detection 3: Color recognition 4: Face recognition 5: QR code recognition

Notes

1. ai_mode must be followed by an English character such as **comma (,), colon (:), period (.), etc.**
2. ai_mode can only set 5 modes in total. If an illegal number is passed in, the default is normal mode.
3. After each mode change, the image transmission module will automatically restart. After the module restarts successfully, **refresh the web page or mobile app to re-enter**
4. ai_mode: You can also use all-capital English AI_MODE:
5. Factory firmware mode: The default is normal mode.

Virtual keys in mode

Some AI recognition modes require human-computer interaction. The module itself does not have keys, so virtual keys are simulated through the serial port protocol

Key name	Mode	Corresponding function
KEY_MENU	Color recognition	Input color/detect color mode switching function
KEY_PLAY	Color recognition	Confirm input color/delete color function
KEY_UPUP	Color recognition	Increase the input/detection color range of the frame
KEY_DOWN	Color recognition	Reduce the input/detection color range of the frame
KEY_MENU	Face recognition	Save the detected face
KEY_PLAY	Face recognition	Identify whether the face is in the system that saves the face
KEY_DOWN	Face recognition	Delete the last saved face

The function of virtual keys only works in color recognition and face recognition** modes, and other AI vision modes are invalid. **