

QR Code Recognition

QR Code Recognition

1. Install Dependencies
2. Create a QR Code
3. Parse the QR Code
 - 3.1 USB Camera
 - 3.2 CSI Camera


FAQ

'PIL.Image' has no attribute 'Resampling'

A QR code (Quick Response Code) is a matrix barcode made up of squares that can be used to store various types of information.

1. Install Dependencies

```
sudo apt install libzbar-dev -y
sudo pip3 install qrcode pyzbar
```

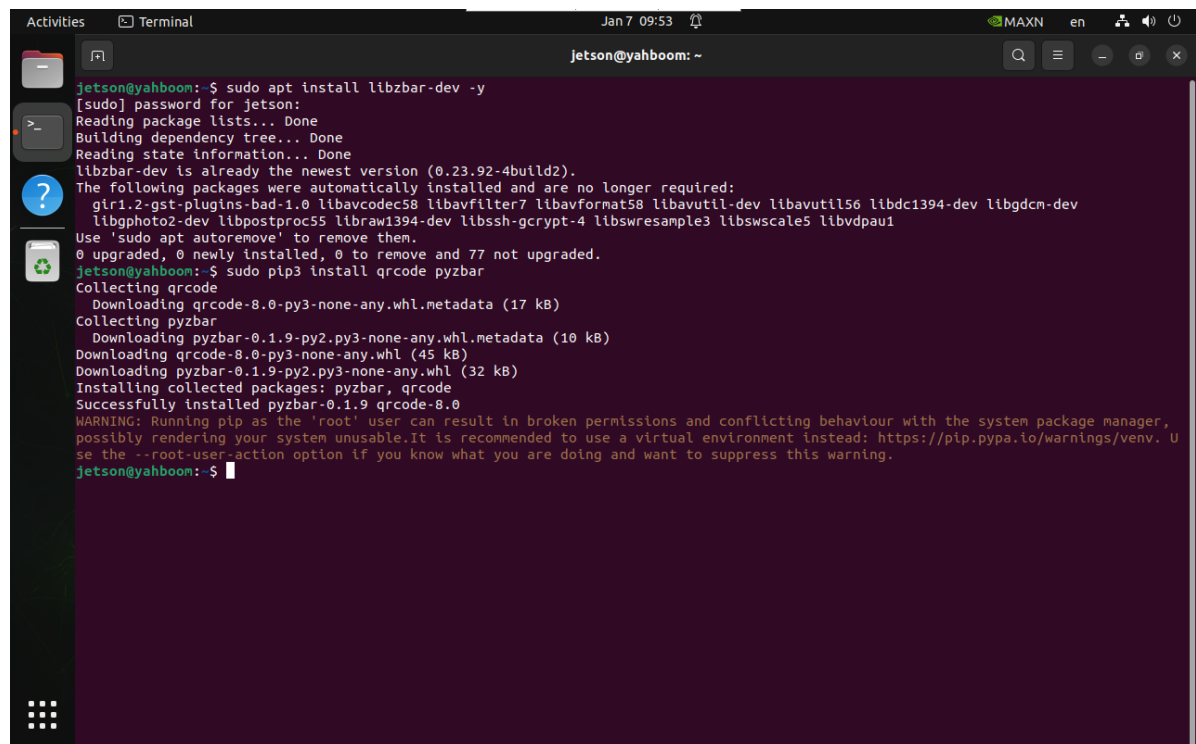
A terminal window on a Jetson Nano device. The user runs 'sudo apt install libzbar-dev -y'. The terminal shows that libzbar-dev is already installed and lists several packages that were automatically installed and are no longer required. Then, the user runs 'sudo pip3 install qrcode pyzbar'. The terminal shows the collection and installation of qrcode and pyzbar packages. A warning message is displayed at the bottom: 'WARNING: Running pip as the 'root' user can result in broken permissions and conflicting behaviour with the system package manager, possibly rendering your system unusable. It is recommended to use a virtual environment instead: https://pip.pypa.io/warnings/venv. Use the --root-user-action option if you know what you are doing and want to suppress this warning.'

2. Create a QR Code

```
cd ~/qr_code_recognition
```

```
python3 qrcode_create.py
```

After running the command, enter the hidden information of the QR code: the generated image is located in the /home/jetson/qr_code_recognition/figures folder

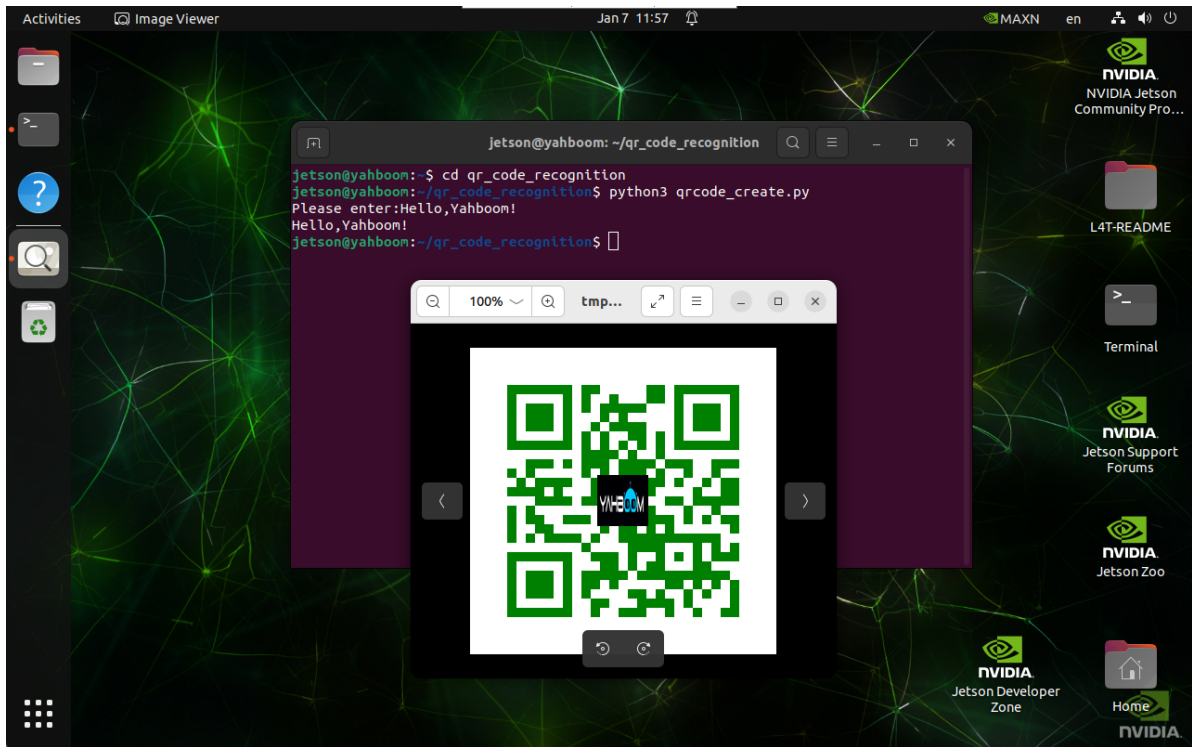


3. Parse the QR Code

3.1 USB Camera

```
cd ~/qr_code_recognition
```


```
python3 qrcode_parsing_usb.py
```

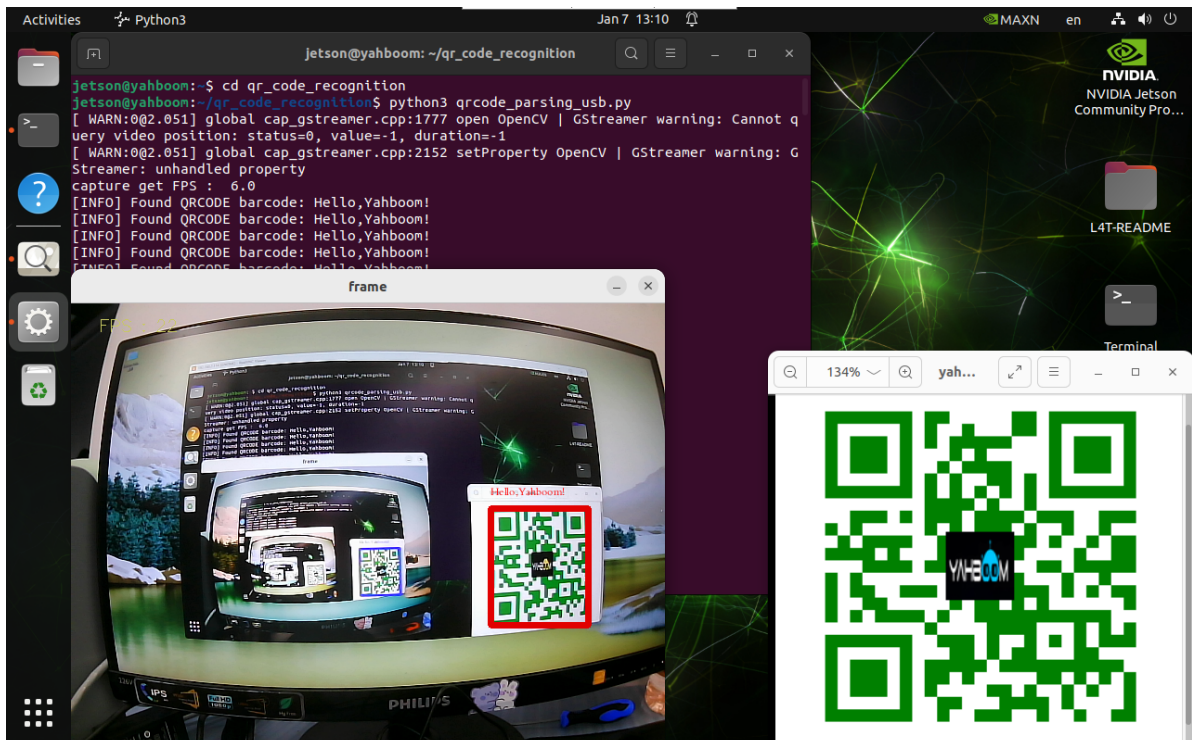

3.2 CSI Camera

```
cd ~/qr_code_recognition
```

```
python3 qrcode_parsing_csi.py
```

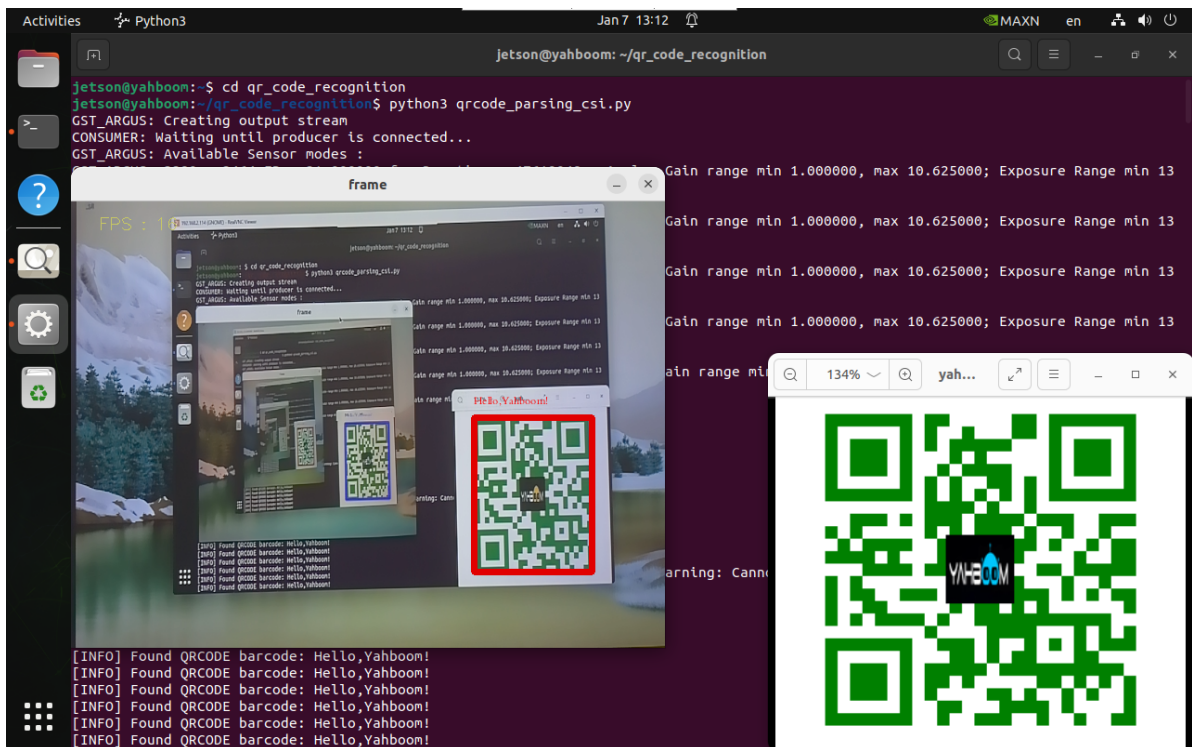

FAQ

'PIL.Image' has no attribute 'Resampling'

```
sudo pip3 install --upgrade pillow
```