Network Configuration

Network Configuration
- 1. WiFi Mode
  - 1.1 Connecting to WiFi
  - 1.2. Viewing WiFi Information
  - 1.3. Setting a Static IP
- 2. Hotspot Mode
  - 2.1. Creating a Hotspot
  - 2.2. Hotspot Information

WiFi and hotspot modes require a wireless network card. Before proceeding with the following settings, please check that the wireless network card and antenna are installed correctly!

```
It is recommended to switch networks using a monitor. Once the network is
switched to a new network, the system needs to re-enable network sharing on the
new network before VNC remote access can be performed.
```

1. WiFi Mode

1.1 Connecting to WiFi

Click the application icon in the lower left corner of the system desktop and find 【Settings】

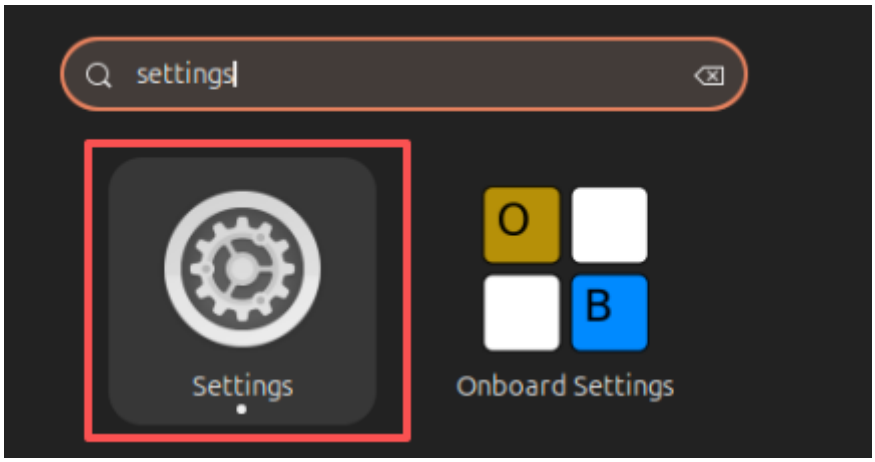

Click the 【Wi-Fi】 option

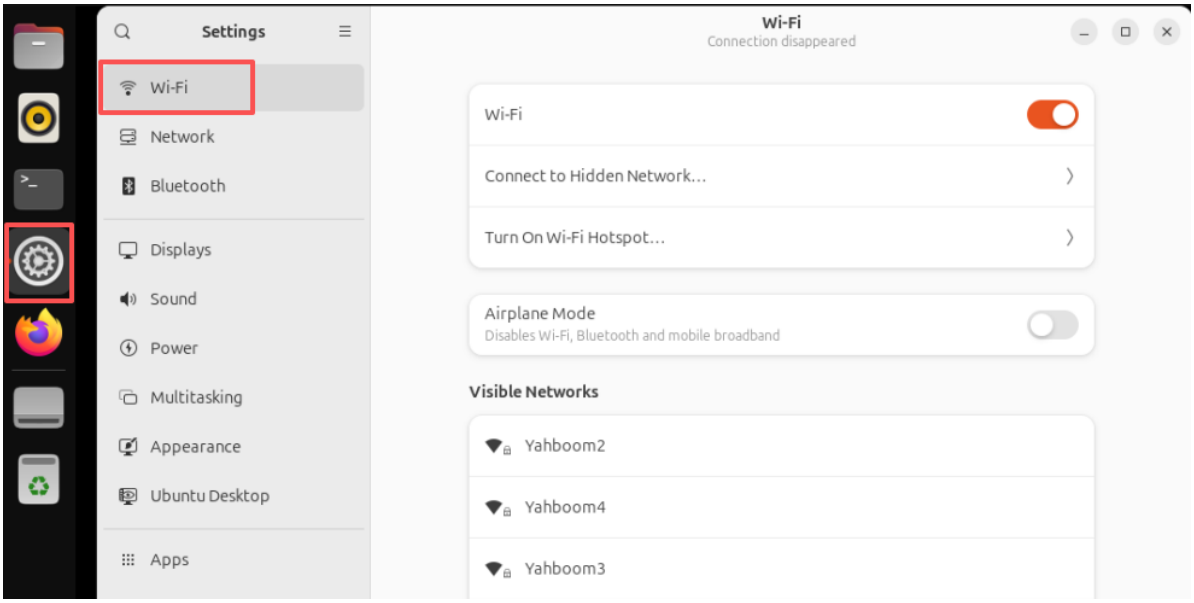

Select the WiFi network you want to connect to: If the WiFi signal is weak, check if the antenna is not installed or... The user's environment has poor signal.

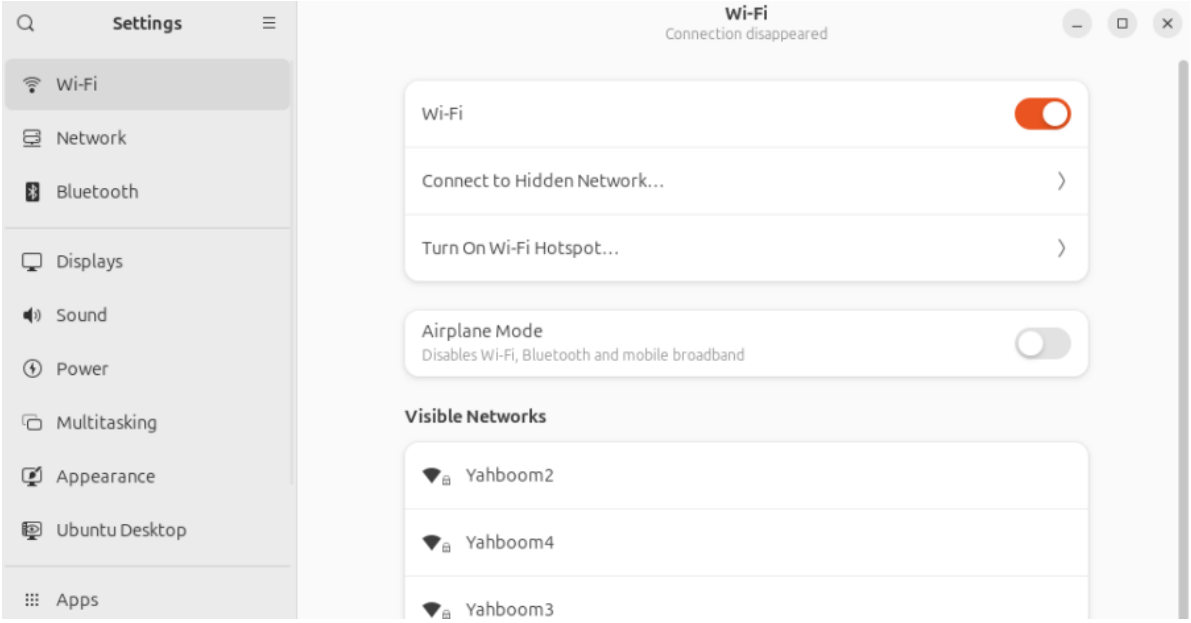

After entering the password, click Connect:

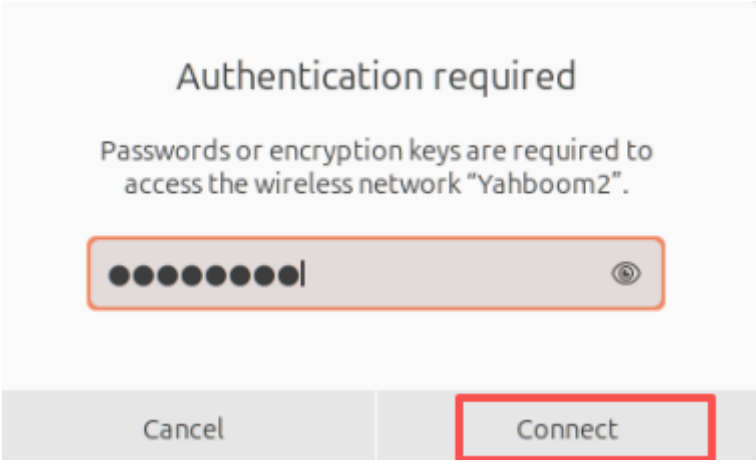

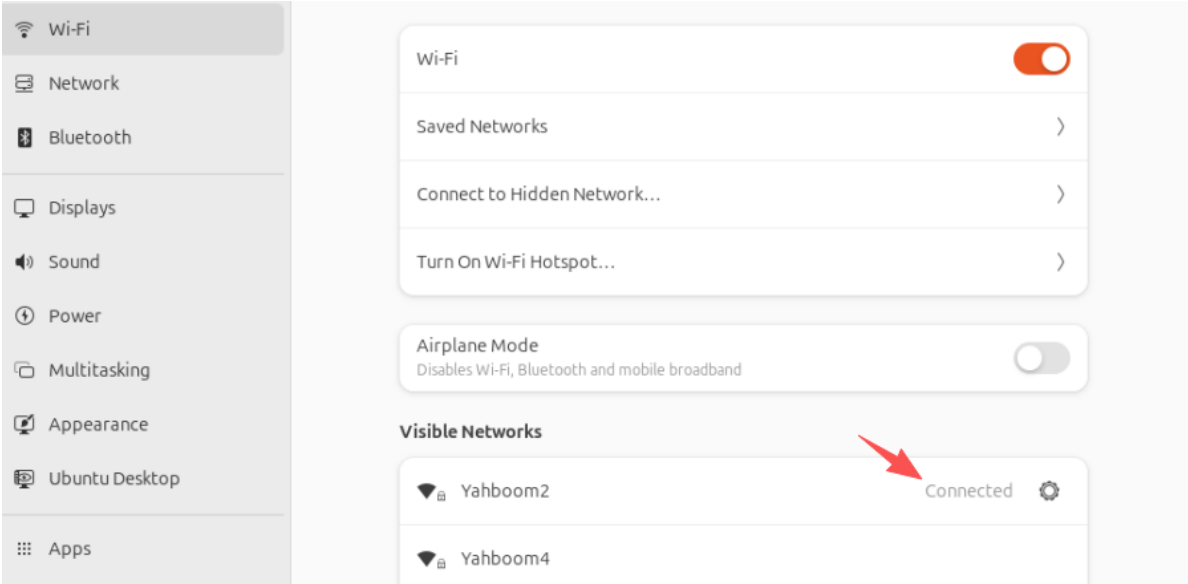

1.2. Viewing WiFi Information

Click the settings icon for the currently connected WiFi network:

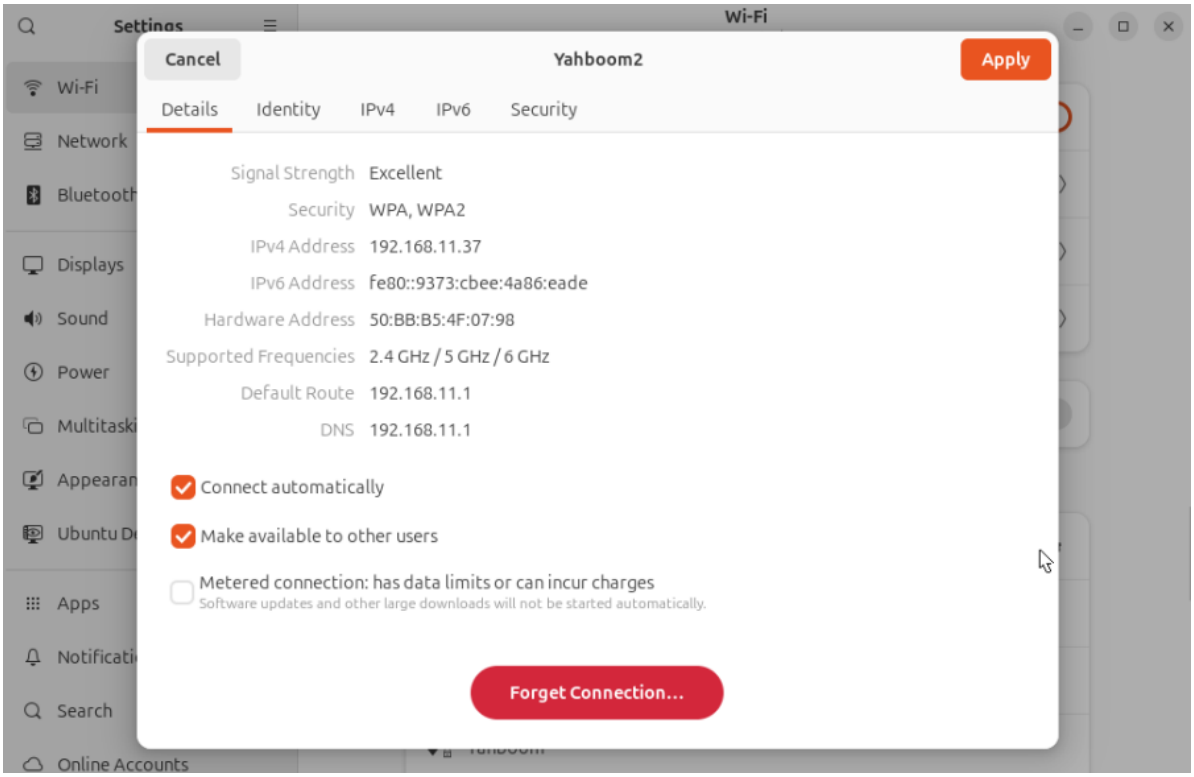

You can use the following command in the terminal to view the IP addresses for all networks; `enP2p1s0` corresponds to the IP address for the wired (Ethernet) connection, while `wlP1p1s0` corresponds to the IP address for the WiFi connection:

```
ifconfig
```

```
jetson@ubuntu:~$
jetson@ubuntu:~$ ifconfig
docker0: flags=4099<UP,BROADCAST,MULTICAST>  mtu 1500
        inet 172.17.0.1  netmask 255.255.0.0  broadcast 172.17.255.255
        inet6 fe80::88cd:fcff:fe95:2d4e  prefixlen 64  scopeid 0x20<link>
        ether 8a:cd:fc:95:2d:4e  txqueuelen 0  (Ethernet)
        RX packets 553  bytes 989305 (989.3 KB)
        RX errors 0  dropped 0  overruns 0  frame 0
        TX packets 553  bytes 187004 (187.0 KB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0

enP2p1s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST>  mtu 1500
        inet 192.168.11.120  netmask 255.255.255.0  broadcast 192.168.11.255
        inet6 fe80::65d8:618:5131:f67c  prefixlen 64  scopeid 0x20<link>
        ether 4c:bb:47:3a:3d:ee  txqueuelen 1000  (Ethernet)
        RX packets 120  bytes 31307 (31.3 KB)
        RX errors 0  dropped 0  overruns 0  frame 0
        TX packets 201  bytes 37048 (37.0 KB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
        device interrupt 65

l4tbr0: flags=4099<UP,BROADCAST,MULTICAST>  mtu 1500
        inet 192.168.55.1  netmask 255.255.255.0  broadcast 0.0.0.0
```

```
        ether da:94:cc:51:c8:0d  txqueuelen 1000  (Ethernet)
        RX packets 0  bytes 0 (0.0 B)
        RX errors 0  dropped 0  overruns 0  frame 0
        TX packets 0  bytes 0 (0.0 B)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0

usb1: flags=4099<UP,BROADCAST,MULTICAST>  mtu 1500
        ether da:94:cc:51:c8:0f  txqueuelen 1000  (Ethernet)
        RX packets 0  bytes 0 (0.0 B)
        RX errors 0  dropped 0  overruns 0  frame 0
        TX packets 0  bytes 0 (0.0 B)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0

wlP1p1s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST>  mtu 1500
        inet 192.168.12.38  netmask 255.255.255.0  broadcast 192.168.12.255
        inet6 fe80::9c38:8677:dc18:5471  prefixlen 64  scopeid 0x20<link>
        ether 50:bb:b5:4f:07:98  txqueuelen 1000  (Ethernet)
        RX packets 116690  bytes 34036156 (34.0 MB)
        RX errors 0  dropped 0  overruns 0  frame 0
        TX packets 1615603  bytes 2453390189 (2.4 GB)
        TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
        device interrupt 164

jetson@ubuntu:~$
```

1.3. Setting a Static IP

Click the settings icon for the currently connected WiFi network to modify the IPv4 options:

Address: Enter the specific IP address you wish to assign (static IP); this address must fall within the available range of assignable IP addresses.

Netmask: Enter `255.255.255.0`.

Gateway: Enter the default gateway address for your WiFi network.

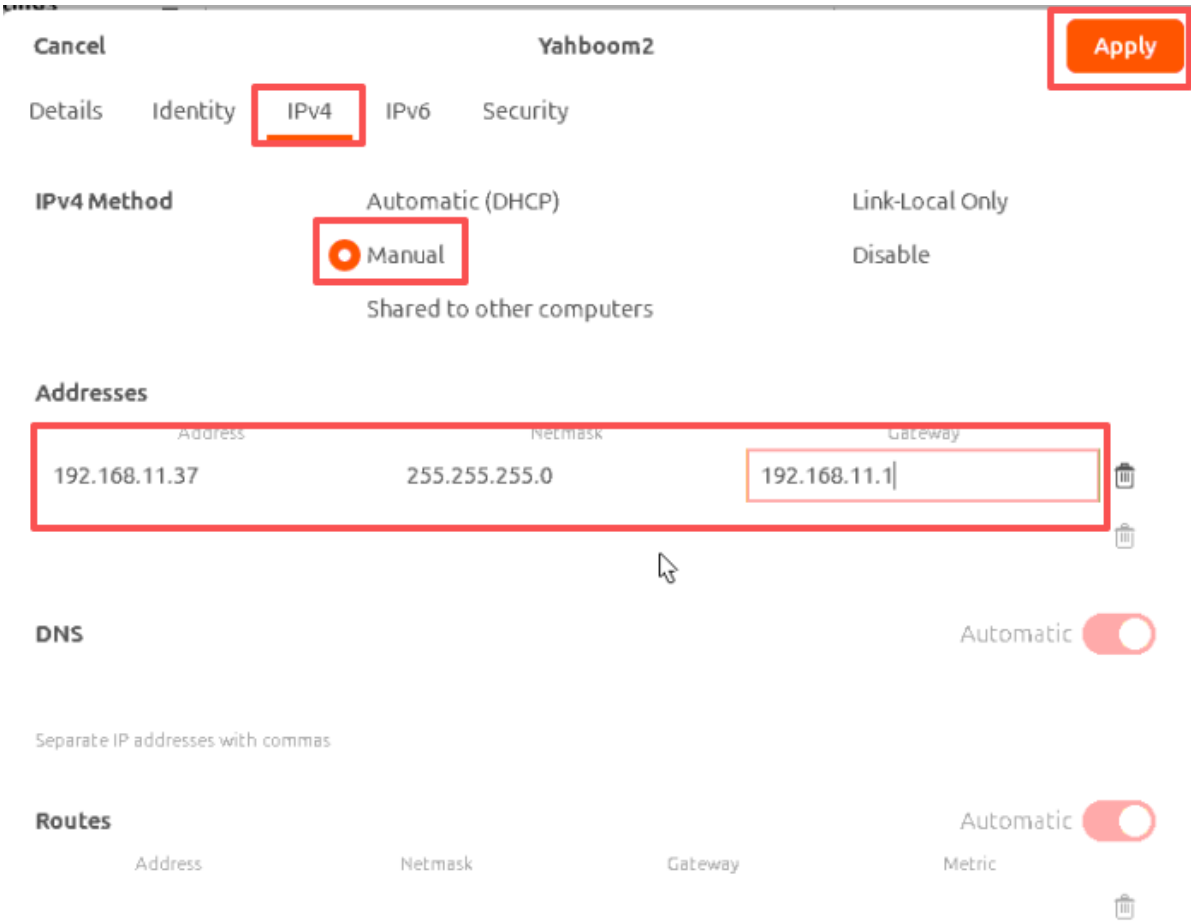

Once finished, reconnect to the WiFi network for the configuration changes to take effect:

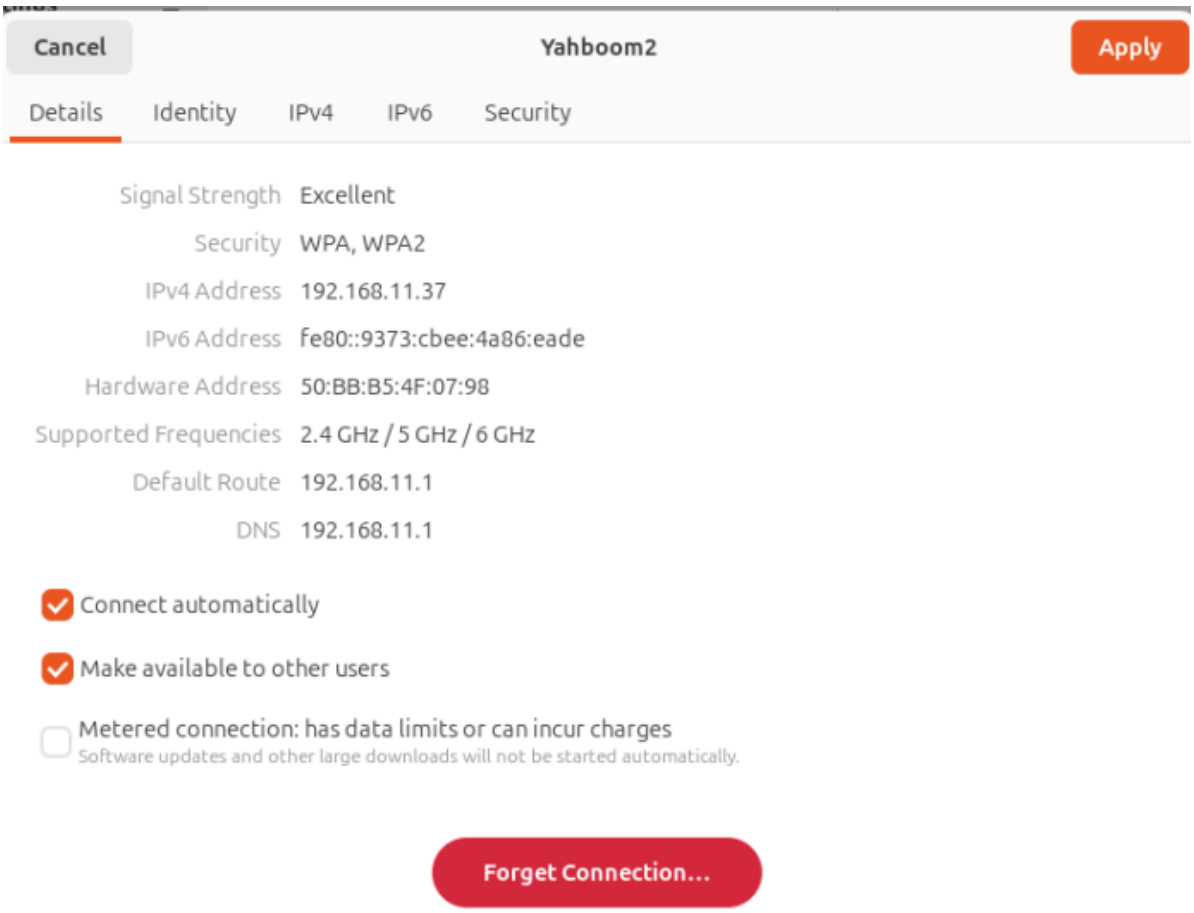

2. Hotspot Mode

Note: Your wireless network card must support hotspot functionality to enable Hotspot Mode. Enabling the hotspot will automatically disconnect the device from any currently connected WiFi network.

```
When the desktop system is configured in Hotspot mode, the hotspot will
automatically turn off after the system restarts. Users who require the hotspot
to start automatically upon boot-up can search online for tutorials on how to
configure an Ubuntu hotspot for automatic startup.
```

2.1. Creating a Hotspot

Navigate to the Wi-Fi settings and select `Turn On Wi-Fi Hotspot...`.

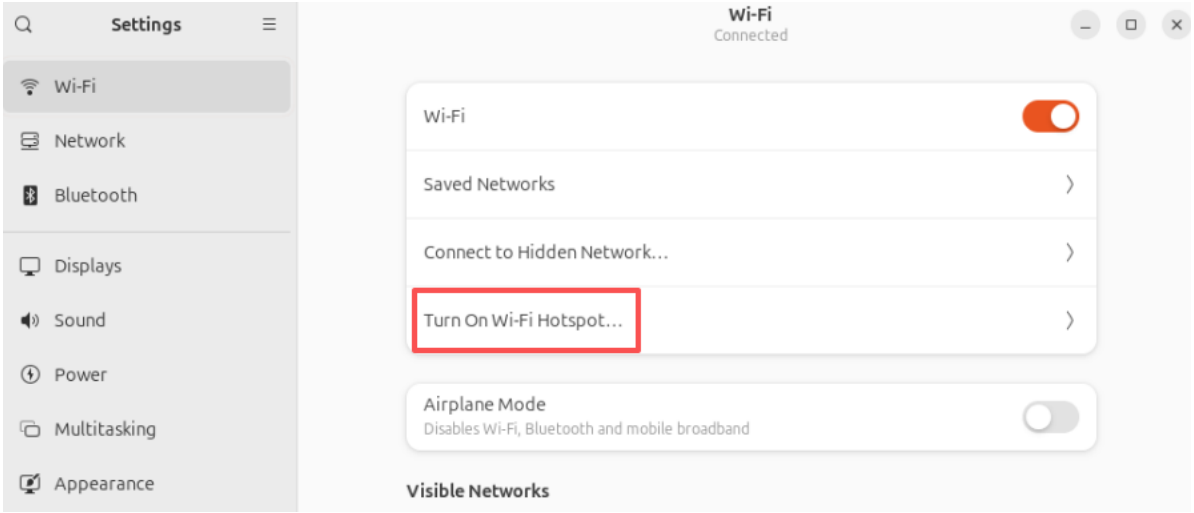

2.2. Hotspot Information

Hotspot Name: Jetson_Hotspot (Customizable)

Hotspot Password: 12345678 (Customizable)

Default IP Address (Hotspot Mode): 10.42.0.1

Once you have entered the hotspot details, click the [Turn On] button to activate the hotspot signal. You can then use your mobile phone to scan for Wi-Fi networks; you should see the "Jetson_Hotspot" signal appear. Simply enter the hotspot password to connect.

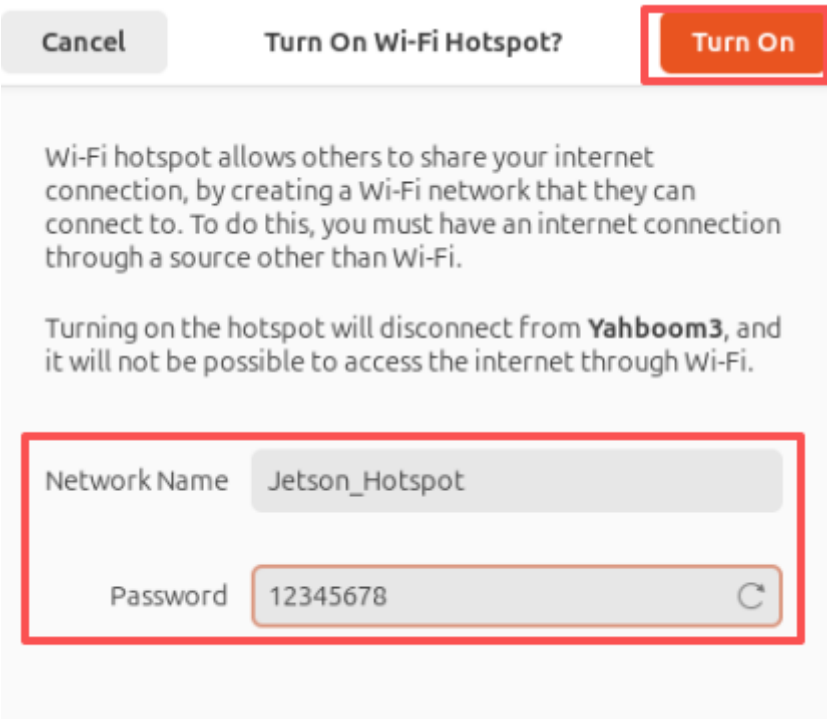

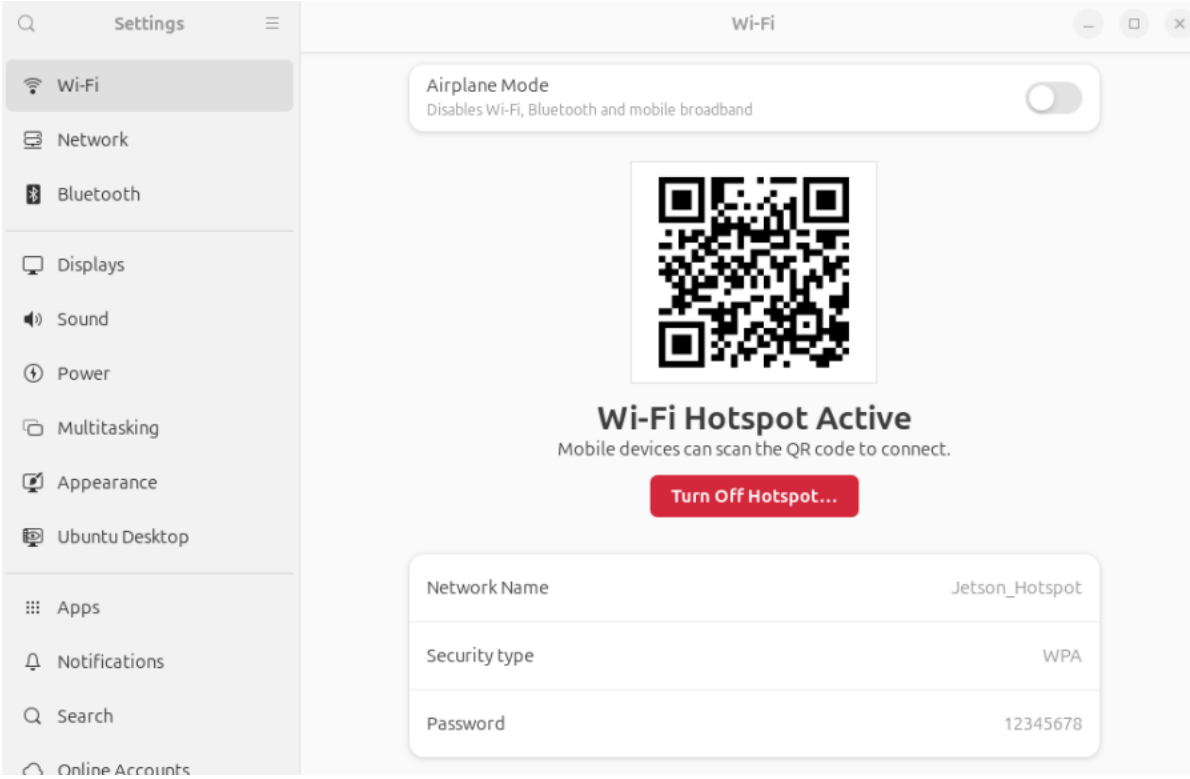

To turn off the hotspot signal, click the [Turn Off Hotspot] button, and then click [Turn Off] to confirm the shutdown.

Turn Off Hotspot?
Turning off will disconnect any devices that are using the hotspot.
Cancel
Turn Off
Wi-Fi Hotspot Active
Mobile devices can scan the QR code to connect.
Turn Off Hotspot...