Voice Interaction Hardware Connection (Must Read)

To enable the voice interaction functionality in the following steps, you must use the AI Large Model Voice Module included in the AI Large Model Package bundled with your Jetson series mainboard.
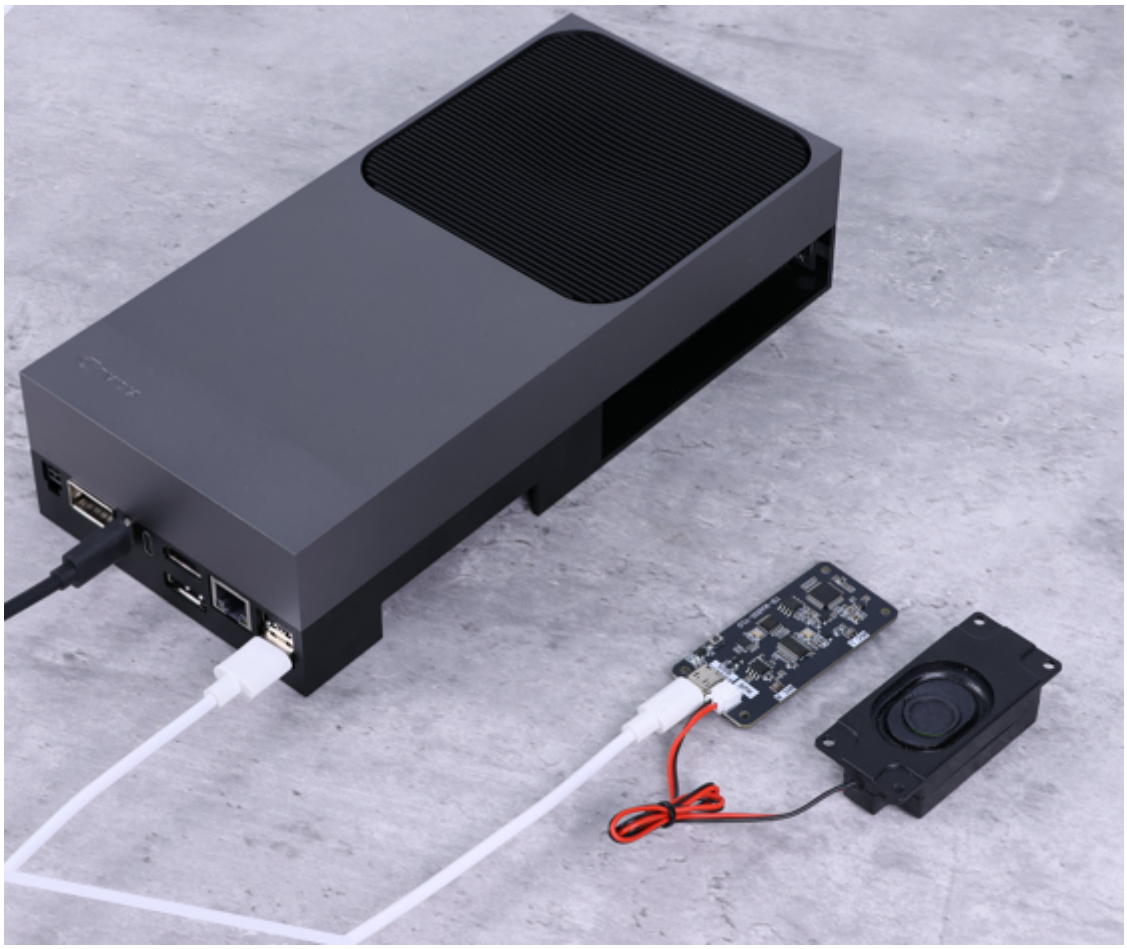
Wiring Diagram: