Voice Interaction Hardware Connection (ReadMe)

To enable the voice interaction functionality, you must utilize the AI large model voice module included in the AI large model package bundled with the motherboard.
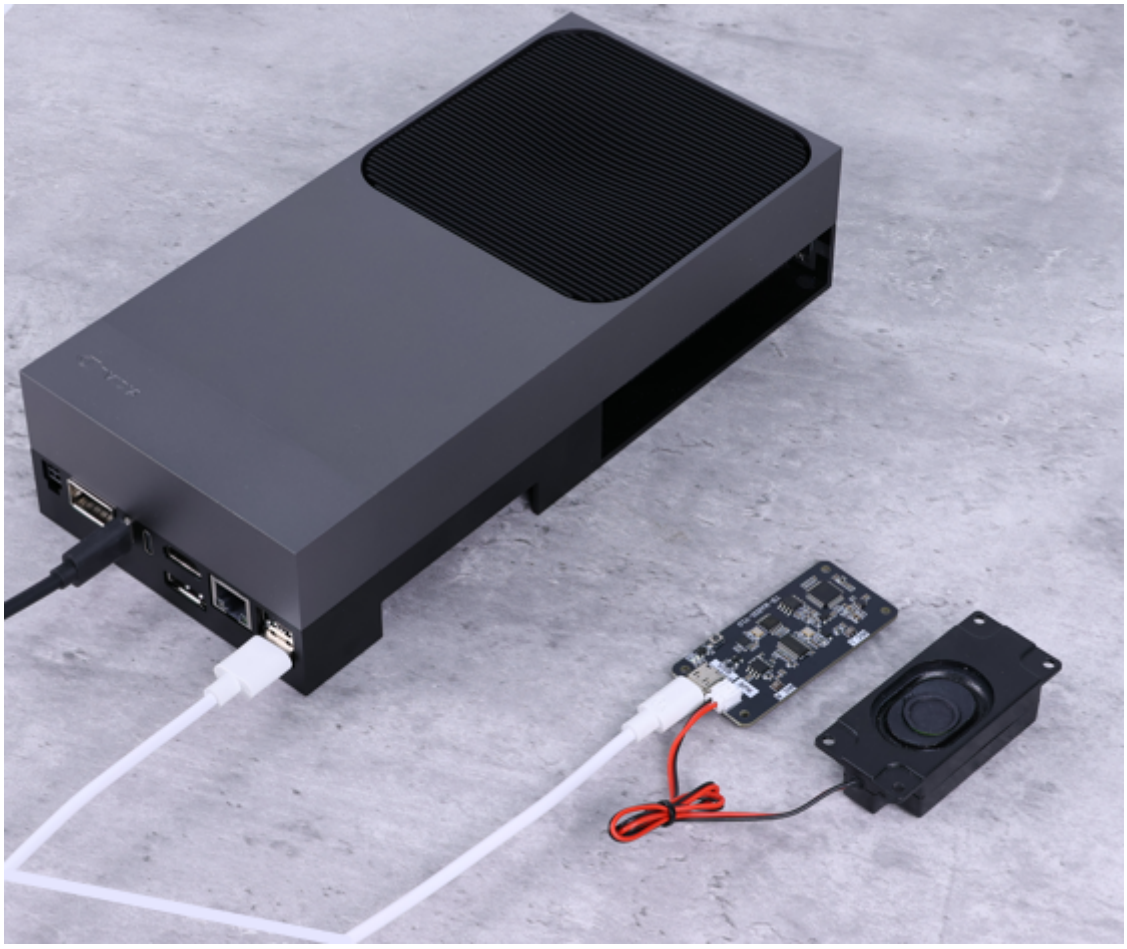
Wiring Diagram: