Remote file transfer

Remote file transfer


- 1. MobaXterm
- 2. MobaXterm installation
 - 2.1. Download MobaXterm
 - 2.2. Install MobaXterm
- 3. Use MobaXterm
- 4. MobaXterm: SFTP remote

1. MobaXterm

MobaXterm is a powerful remote tool that integrates SHH, VNC, FTP and other remote tools.

2. MobaXterm installation


Official website: https://mobaxterm.mobatek.net/

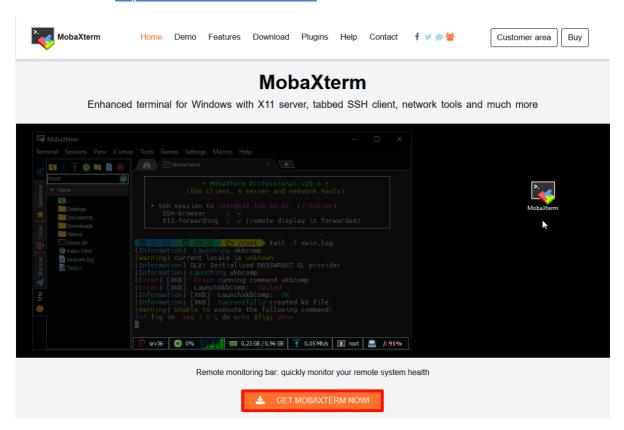

2.1. Download MobaXterm


Select the free version to download:

Select the installation version to download:

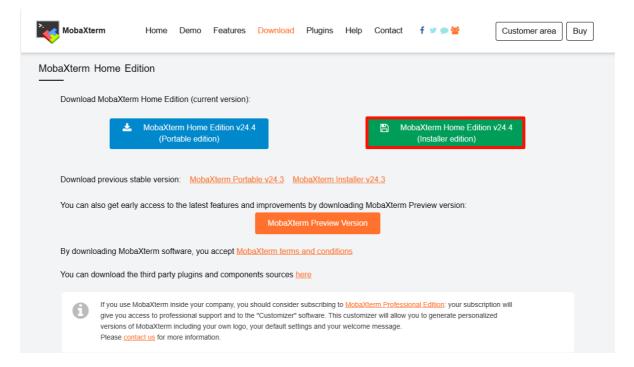


2.2. Install MobaXterm


Unzip the compressed package downloaded from the official website, open the Mobaxterm_installer_24.4.msi file to install:

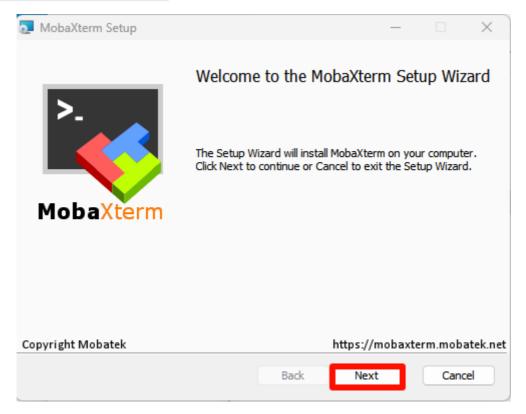


Agree to the agreement:

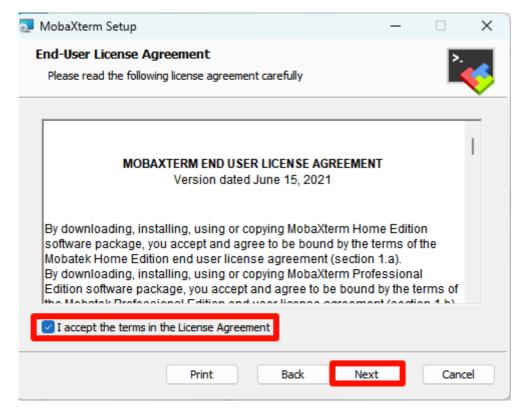


Select the software installation location: the default location is recommended

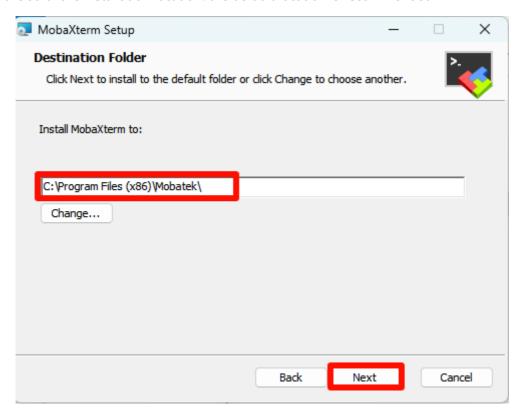

Official installation:

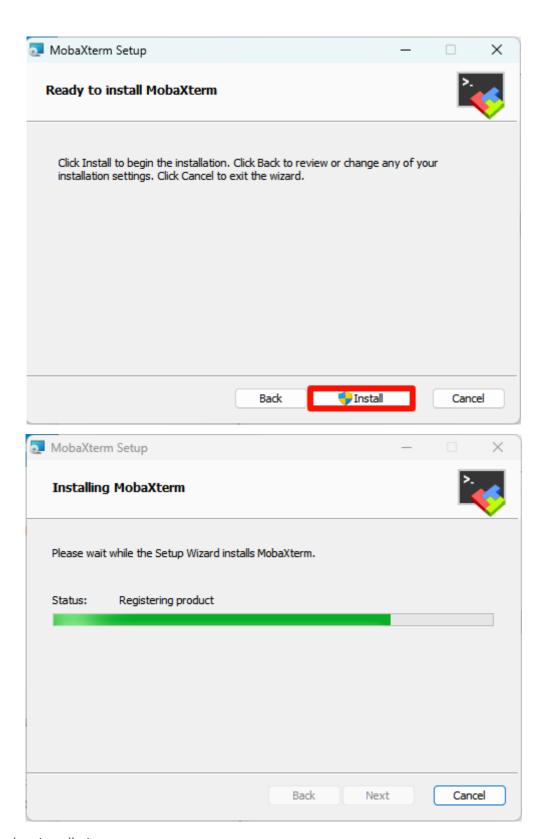


Complete installation:

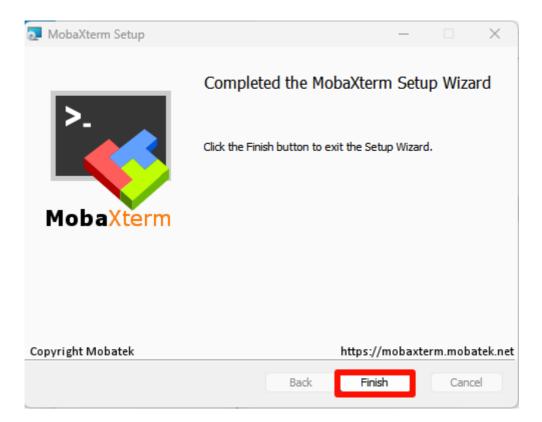

3. Use MobaXterm

Find the Mobaxterm icon on the desktop and open it:



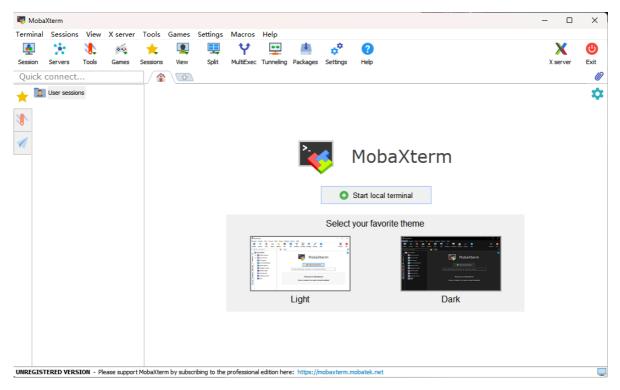

4. MobaXterm: SFTP remote

Select Session \rightarrow FTP: Fill in the remote device IP and username

Default information of Jetson motherboard:

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: https://mobaxterm.mobatek.net

Username: jetson Password: yahboom

Note: If MobaXterm uses SSH remotely, it will automatically use SFTP remote login in the sidebar

