

OpenClaw AI Voice Interaction Configuration

OpenClaw AI Voice Interaction Configuration

1. Course Overview
2. Voice Interaction Overall Pipeline
3. Voice Configuration File Description
 - 3.1 Configuration File Location
 - 3.2 Minimum Configuration to Check Before Startup
4. Key Parameter Description
 - 4.1 Voice Recognition Engine
 - 4.2 Microphone and Speaker Devices
 - 4.3 DashScope Authentication and ASR Model
 - 4.4 TTS Voice Broadcast Configuration
 - 4.5 OpenClaw Gateway Configuration Reference
 - 4.6 Serial Wake Configuration
 - 4.7 Chinese-English Switching Steps
5. Start Voice Interaction
 - 5.1 Prepare Virtual Environment
 - 5.2 Startup Method
 - 5.3 If Other Interaction Methods Need Broadcast
6. Configuration Verification Methods
 - 6.1 Verify Voice Program Can Start
 - 6.2 Verify Recognition and Publishing Process
 - 6.4 Verify TTS [Optional]
7. Common Issues
 - 7.1 Program Startup Failure
 - 7.2 No Recognition Result After Wake
 - 7.3 Recognition Successful But OpenClaw Not Responding
 - 7.4 Can Recognize But No Voice Broadcast
 - 7.5 Serial Wake Failure
8. Recommended Debugging Order

1. Course Overview

This course will introduce how to configure OpenClaw's AI voice interaction pipeline, including voice configuration file location, key parameter descriptions, startup methods, and common troubleshooting.

After completing this course, you will be able to:

- Know which configuration file is used for AI voice interaction
- Understand the meaning of key parameters in `.env`
- Correctly start the voice program

2. Voice Interaction Overall Pipeline

OpenClaw's current voice interaction process can be simply understood as:

1. Microphone collects voice
2. Program performs silence detection and segmentation

3. ASR engine recognizes voice into text
4. Recognition results are published to OpenClaw
5. OpenClaw returns results
6. `[optional]` TTS broadcasts the returned results (reply content may be long, you can choose whether to broadcast)

The core configuration file for this pipeline is:

```
/home/jetson/voice_to_openclaw/.env
```

3. Voice Configuration File Description

3.1 Configuration File Location

```
/home/jetson/voice_to_openclaw/.env
```

If this file does not exist, you can first copy from the template:

```
cd /home/jetson/voice_to_openclaw/  
cp .env.example .env
```

3.2 Minimum Configuration to Check Before Startup

It is recommended to at least confirm the following items:

- `ASR_ENGINE`
- `DASHSCOPE_API_KEY`
- `DEVICE`
- `SPEAKER_DEVICE`
- `OPENCRAW_CONFIG_PATH`
- `ENABLE_SERIAL_WAKE`

4. Key Parameter Description

4.1 Voice Recognition Engine

```
ASR_ENGINE=dashscope
```

Currently supports two modes:

- `dashscope`: Tongyi Bailian native voice recognition interface, suitable for direct online use

For most beginners, it is recommended to keep:

```
ASR_ENGINE=dashscope
```

4.2 Microphone and Speaker Devices

```
DEVICE=0  
SPEAKER_DEVICE=0
```

These two parameters determine which audio input device and output device the program uses.

Scenarios suitable for modification:


- Multiple microphone devices
- USB microphone is not the system default device
- Speaker output is on the wrong device

If the voice program can start but cannot hear sound or record sound, check here first.

4.3 DashScope Authentication and ASR Model

Please log in to Alibaba Cloud Bailian to apply for an API key yourself

Link: [Large Model Service Platform Bailian Console](#)

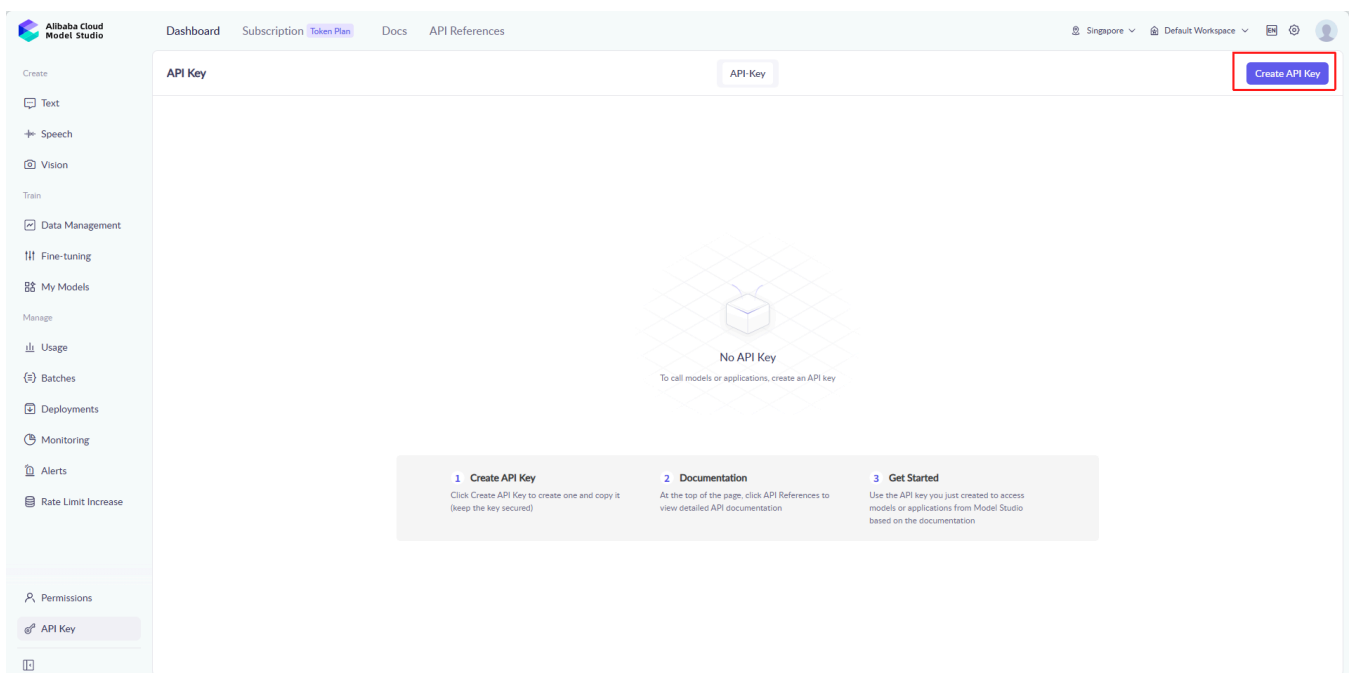

```
DASHSCOPE_API_KEY=  
DASHSCOPE_API_URL=https://dashscope.aliyuncs.com/api/v1/services/aigc/multimodal-  
generation/generation  
DASHSCOPE_ASR_MODEL=qwen3-asr-flash
```

Where:

- `DASHSCOPE_API_KEY`: Must be filled with a valid API-KEY
- `DASHSCOPE_API_URL`: Default is already provided
- `DASHSCOPE_ASR_MODEL`: Default voice recognition model

If this is not configured correctly, common symptoms are:

- Recognition failure after program startup
- Authentication error return
- Voice recognition request timeout or model error

4.4 TTS Voice Broadcast Configuration

```
ENABLE_TTS=false
WAKE_ACK_TEXT=I am here。
```

If you want voice broadcast after voice recognition, you can enable:

```
ENABLE_TTS=true
```

Current common TTS parameters include:

- `DASHSCOPE_TTS_MODEL`
- `DASHSCOPE_TTS_VOICE`
- `DASHSCOPE_TTS_VOLUME`
- `DASHSCOPE_TTS_SPEECH_RATE`

It is recommended to first get ASR working, then consider enabling TTS.

4.5 OpenClaw Gateway Configuration Reference

```
OPENCLAW_CONFIG_PATH=~/.openc1aw/openc1aw.json
OPENCLAW_TIMEOUT=70 #Maximum retry time, waiting for OpenClaw reply. For long tasks, this
time should be increased
OPENCLAW_RETRY=1
```

This part of the configuration determines how the voice program sends recognition results to OpenClaw.

By default:

- The program will read `openc1aw.json`
- Automatically derive local gateway port
- Automatically read gateway authentication token

Therefore, if voice recognition is successful but OpenClaw does not execute commands, check here first.

4.6 Serial Wake Configuration

```
ENABLE_SERIAL_WAKE=true
MIC_SERIAL_PORT=/dev/ttyUSB0
MIC_SERIAL_BAUDRATE=115200
SERIAL_WAKE_REQUIRED=true
```

If you use the matching voice module, it usually adopts serial wake mode.

Main functions are:

- Normally wait for wake signal
- Start collecting next voice segment after receiving wake signal
- Return to waiting state after processing is complete

If there is no matching serial wake module, you can adjust as needed:

```
ENABLE_SERIAL_WAKE=false
```

4.7 Chinese-English Switching Steps

If you need to switch voice interaction from Chinese to English, it is recommended to directly modify the language parameters in `.env`, then restart the program.

Currently `voice_to_openc1aw/.env` enables the **domestic version (Bailian)** by default.

Method 1: Overseas version (iFlytek International)

Main configuration items:

```
XUNFEI_ASR_LANGUAGE=en_cn
XUNFEI_ASR_ACCENT=mandarin
# Terminal log language: zh / en
UI_LANGUAGE=en
```

- Chinese recognition: `XUNFEI_ASR_LANGUAGE=zh_cn`
- English recognition: `XUNFEI_ASR_LANGUAGE=en_us`
- When recognition language is changed to English, `XUNFEI_ASR_ACCENT` is no longer needed; it can be commented out or kept with original value without being used

Example:

```
# Chinese recognition
XUNFEI_ASR_LANGUAGE=zh_cn
XUNFEI_ASR_ACCENT=mandarin

# English recognition
XUNFEI_ASR_LANGUAGE=en_us
# XUNFEI_ASR_ACCENT=mandarin
```

If TTS is also enabled and you want English broadcast, you also need to change `TTS_VOICE` to an English voice tone you have activated; if you only want to verify English recognition first, just change the ASR language.

Method 2: Domestic version (Bailian)

Main configuration items:

```
DASHSCOPE_LANGUAGE=zh
```

- Chinese recognition: `DASHSCOPE_LANGUAGE=zh`
- English recognition: `DASHSCOPE_LANGUAGE=en`

Example:

```
# Chinese recognition
DASHSCOPE_LANGUAGE=zh
# Terminal log language: zh / en
UI_LANGUAGE=zh
```

If the Baillian solution also enables TTS, it is recommended to switch to the corresponding English voice tone simultaneously, otherwise it may happen that English recognition is normal but the broadcast still sounds like Chinese voice.

After modification is complete, re-execute the following startup command to take effect.

5. Start Voice Interaction

5.1 Prepare Virtual Environment

This step is not needed for factory images. If dependencies have not been installed, first execute:

```
cd /home/jetson/voice_to_openclaw
python3 -m venv .venv
source .venv/bin/activate
pip install -r requirements.txt
```

5.2 Startup Method

```
cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
```

If startup is successful, the program will enter waiting for wake or waiting for voice input state.

```
jetson@yahboom:~/Language$ cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
2026-05-29 18:58:43 [INFO] voice_to_openclaw:run:29 - voice_to_openclaw 启动中
[系统] voice_to_openclaw 已启动
[系统] ASR=dashscope/qwen3-asr-flash | 发布=gateway_chat | TTS=开/cosyvoice_http | 唤醒=串口
[系统] 串口唤醒已启用: /dev/ttyUSB0@115200
[提示] 说“清空上下文”或“/reset”可以重置当前会话
```

If you start English log, it will look like this,

```
# Terminal log language: zh / en
UI_LANGUAGE=en
```

```
(.venv) jetson@yahboom:~/voice_to_openclaw$ python -m src.main
2026-05-29 18:59:32 [INFO] voice_to_openclaw:run:29 - voice_to_openclaw starting
[System] voice_to_openclaw started
[System] ASR=dashscope/qwen3-asr-flash | publish=gateway_chat | TTS=on/cosyvoice_http | wake=serial
[System] Serial wake enabled: /dev/ttyUSB0@115200
[Hint] Say "清空上下文" or "/reset" to reset the current session
```


5.3 If Other Interaction Methods Need Broadcast

- Change broadcast parameter configuration to True

```
ENABLE_TTS=true
```

- Additionally start an independent listener, terminal input

```
cd ~/voice_to_openclaw
source .venv/bin/activate
python -m src.openclaw_session_tts
```

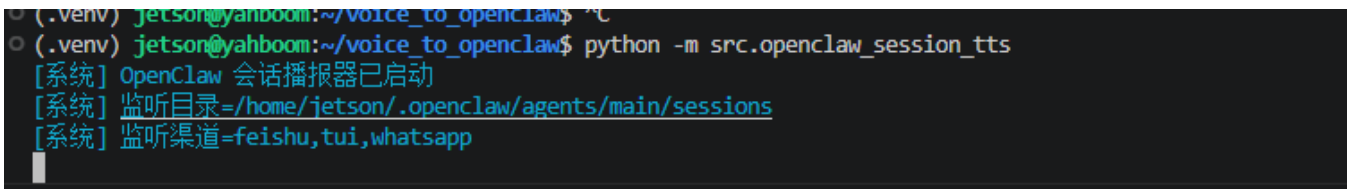

```
(.venv) jetson@yahboom:~/voice_to_openclaw$ python -m src.openclaw_session_tts
[系统] OpenClaw 会话播报器已启动
[系统] 监听目录=/home/jetson/.openclaw/agents/main/sessions
[系统] 监听渠道=feishu,tui,whatsapp
```

6. Configuration Verification Methods

6.1 Verify Voice Program Can Start

Execute:

```
cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
```

If the program starts successfully and does not report errors immediately, it indicates that the basic environment is probably normal.

6.2 Verify Recognition and Publishing Process

Say "Hello, yahboom" to wake up, then you can try saying:

- Tell me a joke
- Display hello on OLED

If you can see OpenClaw returning text, it indicates:

- Microphone collection is normal
- ASR is normal
- OpenClaw gateway publishing is normal

```
2026-05-13 20:00:29 [INFO] voice_to_openclaw:run:26 - voice_to_openclaw starting
[系统] voice_to_openclaw 已启动
[系统] ASR=xunfei_ws/iat/en_us | 发布=gateway_chat | TTS=开/xunfei_ws | 唤醒=串口
[系统] 串口唤醒已启用: /dev/ttyUSB0@115200
[提示] 说“清空上下文”可以重置当前会话
[唤醒] 检测到串口信号, 开始新一轮对话
[听取] 请开始说话
[听取] 正在收音
[识别] 已捕获 2820 ms 语音, 正在转写

[你] Tell me a joke.
[发送] 正在交给 OpenClaw
[完成] OpenClaw 返回 200

[OpenClaw] Why did the robot go to therapy?

Because it had too many *bugs* in
its code! 🐛

...Don't worry, I'm working through my issues one debug
at a time. 😊
[信息] 回复已裁剪为播报文本: 149 -> 90 字
```

It has a cropping function; if it's too short, you can tell it a joke via voice.

6.4 Verify TTS [Optional]

If enabled:

```
ENABLE_TTS=true
```

Then after OpenClaw returns results, you should be able to hear voice broadcast.

7. Common Issues

7.1 Program Startup Failure

Check first:

- Whether `.venv` exists
- Whether dependencies have been installed
- Whether `.env` exists

7.2 No Recognition Result After Wake

Check first:

- Whether `ASR_ENGINE` is configured correctly
- Whether `DASHSCOPE_API_KEY` is valid
- Whether microphone device number `DEVICE` is correct

7.3 Recognition Successful But OpenClaw Not Responding

Check first:

- Whether `OPENCLAW_CONFIG_PATH` is correct
- Whether the gateway port in `openc1aw.json` is normal
- Whether OpenClaw gateway has been started

7.4 Can Recognize But No Voice Broadcast

Check first:

- Whether `ENABLE_TTS` is `true`
- Whether `SPEAKER_DEVICE` is correct
- Whether speaker is properly connected

7.5 Serial Wake Failure

Check first:

- Whether `ENABLE_SERIAL_WAKE` is `true`
- Whether `MIC_SERIAL_PORT` is correct
- Whether `MIC_SERIAL_BAUDRATE` is correct
- Whether voice module serial device has been recognized by the system

8. Recommended Debugging Order

It is recommended to troubleshoot the voice pipeline in the following order:

1. First confirm the `.env` file exists
2. Then confirm `DASHSCOPE_API_KEY` has been filled in
3. Start the program and confirm no immediate errors
4. Check if wake is effective
5. Check if recognition is effective
6. Check if OpenClaw receives text
7. Finally check TTS broadcast