

OpenClaw AI Voice Interaction Configuration

OpenClaw AI Voice Interaction Configuration

1. Course Overview
2. Voice Interaction Overall Pipeline
3. Voice Configuration File Description
 - 3.1 Configuration File Location
 - 3.2 Minimum Configuration to Check Before Starting
4. Key Parameter Descriptions
 - 4.1 Speech Recognition Engine
 - 4.2 Microphone and Speaker Devices
 - 4.3 DashScope Authentication and ASR Model
 - 4.4 TTS Voice Broadcast Configuration
 - 4.5 OpenClaw Gateway Configuration Reference
 - 4.6 Serial Wake Configuration
 - 4.7 Chinese-English Switching Steps
5. Starting Voice Interaction
 - 5.1 Prepare Virtual Environment
 - 5.2 Startup Method
 - 5.3 If Other Interaction Methods Need Broadcast
6. Configuration Verification Methods
 - 6.1 Verify Voice Program Can Start
 - 6.2 Verify Recognition and Publishing Process
 - 6.3 Verify TTS [Optional]
7. Common Issues
 - 7.1 Program Startup Failure
 - 7.2 No Recognition Result After Wake
 - 7.3 Recognition Succeeds but OpenClaw Does Not Respond
 - 7.4 Can Recognize but No Voice Broadcast
 - 7.5 Serial Wake Failure
8. Recommended Debugging Order

1. Course Overview

This course walks you through configuring the AI voice interaction pipeline in OpenClaw, including voice configuration file locations, key parameter descriptions, startup methods, and common troubleshooting steps.

After completing this course, you will be able to:

- Know which configuration file is used for AI voice interaction
- Understand the meaning of key parameters in `.env`
- Correctly start the voice program

2. Voice Interaction Overall Pipeline

The current voice interaction process in OpenClaw can be simply understood as:

1. Microphone captures voice
2. Program performs silence detection and segmentation

3. ASR engine converts speech to text
4. Recognition results are published to OpenClaw
5. OpenClaw returns results
6. [optional] TTS reads out the returned results (the reply content may be long, you can choose whether to read it out)

The core configuration file for this pipeline is:

```
/home/jetson/voice_to_openclaw/.env
```

3. Voice Configuration File Description

3.1 Configuration File Location

```
/home/jetson/voice_to_openclaw/.env
```

If this file does not exist, you can first copy it from the template:

```
cd /home/jetson/voice_to_openclaw/  
cp .env.example .env
```

3.2 Minimum Configuration to Check Before Starting

It is recommended to at least confirm the following items:

- ASR_ENGINE
- DASHSCOPE_API_KEY
- DEVICE
- SPEAKER_DEVICE
- OPENCLAW_CONFIG_PATH
- ENABLE_SERIAL_WAKE

4. Key Parameter Descriptions

4.1 Speech Recognition Engine

```
ASR_ENGINE=dashscope
```

Two modes are currently supported:

- dashscope: Tongyi Bailian native speech recognition API, suitable for direct online use
- faster_whisper: Local Whisper recognition, suitable for local operation (not supported on Raspberry Pi)

For most beginners, we recommend keeping the default:

```
ASR_ENGINE=dashscope
```

4.2 Microphone and Speaker Devices

```
DEVICE=pulse  
SPEAKER_DEVICE=pulse
```

These two parameters determine which audio input and output devices the program uses.

Scenarios suitable for modification:


- Multiple microphone devices
- USB microphone is not the system default device
- The speaker output goes to the wrong device

If the voice program starts but you cannot hear or record audio, check these settings first.

4.3 DashScope Authentication and ASR Model

To obtain an API key, log in to Alibaba Cloud Bailian:

Link: [Large Model Service Platform Bailian Console](#)

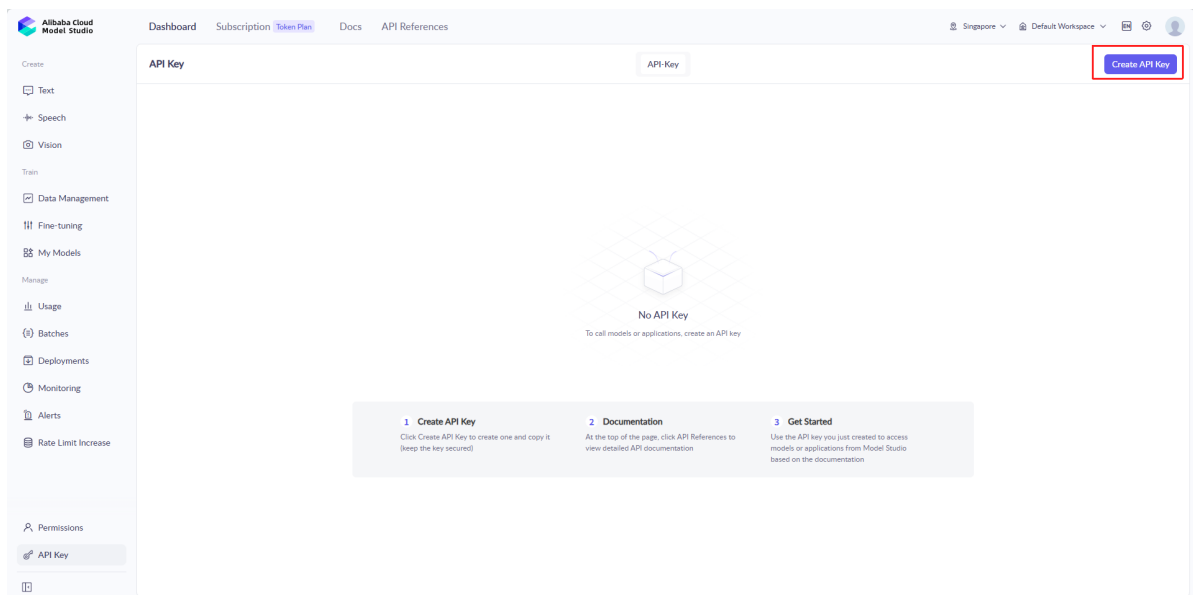

```
DASHSCOPE_API_KEY=  
DASHSCOPE_API_URL=https://dashscope.aliyuncs.com/api/v1/services/aigc/multimodal-  
generation/generation  
DASHSCOPE_ASR_MODEL=qwen3-asr-flash
```

Where:

- `DASHSCOPE_API_KEY`: A valid API-KEY must be filled in
- `DASHSCOPE_API_URL`: A default value is already provided
- `DASHSCOPE_ASR_MODEL`: Default speech recognition model

If this is not configured correctly, common symptoms are:

- Recognition fails after the program starts
- An authentication error is returned
- Speech recognition request timeout or model error

4.4 TTS Voice Broadcast Configuration

```
ENABLE_TTS=false  
WAKE_ACK_TEXT='I'm here.'
```

If you want voice broadcast after speech recognition, you can enable it:

```
ENABLE_TTS=true
```

Current common TTS parameters include:

- `DASHSCOPE_TTS_MODEL`
- `DASHSCOPE_TTS_VOICE`
- `DASHSCOPE_TTS_VOLUME`
- `DASHSCOPE_TTS_SPEECH_RATE`

It is recommended to first get ASR working, then consider enabling TTS.

4.5 OpenClaw Gateway Configuration Reference

```
OPENCLAW_CONFIG_PATH=~/.openclaw/openclaw.json  
OPENCLAW_TIMEOUT=70 # Maximum retry time, waiting for OpenClaw reply. For long  
tasks, consider increasing this value  
OPENCLAW_RETRY=1
```

This part of the configuration determines how the voice program sends recognition results to OpenClaw.

By default:

- The program will read `openclaw.json`
- Automatically determine the local gateway port
- Automatically read the gateway authentication token

Therefore, if speech recognition has already succeeded but OpenClaw is not executing commands, check here first.

4.6 Serial Wake Configuration

```
ENABLE_SERIAL_WAKE=true  
MIC_SERIAL_PORT=/dev/ttyUSB0  
MIC_SERIAL_BAUDRATE=115200  
SERIAL_WAKE_REQUIRED=true
```

If you are using the bundled voice module, serial wake mode is usually used.

The main functions are:

- Wait for the wake signal by default
- Start capturing the next voice segment after receiving the wake signal
- Return to waiting state after processing is complete

If you do not have the bundled serial wake module, you can adjust as needed:

```
ENABLE_SERIAL_WAKE=false
```

4.7 Chinese-English Switching Steps

If you need to switch voice interaction from Chinese to English, it is recommended to directly modify the language parameter in `.env`, then restart the program.

The current `voice_to_openc1aw/.env` defaults to the **Domestic Version (Bailian)**.

Method 1: Overseas Version (iFlytek International)

Main configuration items:

```
XUNFEI_ASR_LANGUAGE=en_cn
XUNFEI_ASR_ACCENT=mandarin
# Terminal log language: zh / en
UI_LANGUAGE=en
```

- Chinese recognition: `XUNFEI_ASR_LANGUAGE=zh_cn`
- English recognition: `XUNFEI_ASR_LANGUAGE=en_us`
- When the recognition language is changed to English, `XUNFEI_ASR_ACCENT` is no longer needed and can be commented out or left as-is

Example:

```
# Chinese recognition
XUNFEI_ASR_LANGUAGE=zh_cn
XUNFEI_ASR_ACCENT=mandarin

# English recognition
XUNFEI_ASR_LANGUAGE=en_us
# XUNFEI_ASR_ACCENT=mandarin
```

If TTS is also enabled and you want English broadcast, you also need to change `TTS_VOICE` to an English voice tone you have activated; if you are just verifying English recognition first, only change the ASR language.

Method 2: Domestic Version (Bailian)

Main configuration items:

```
DASHSCOPE_LANGUAGE=zh
```

- Chinese recognition: `DASHSCOPE_LANGUAGE=zh`
- English recognition: `DASHSCOPE_LANGUAGE=en`

Example:

```
# Chinese recognition
DASHSCOPE_LANGUAGE=zh
# Terminal log language: zh / en
UI_LANGUAGE=zh
```

If the Bailian solution also has TTS enabled, it is recommended to simultaneously switch to the corresponding English voice tone, otherwise English recognition may work normally but the broadcast may still use a Chinese voice.

After making the changes, re-run the startup command below for the changes to take effect.

5. Starting Voice Interaction

5.1 Prepare Virtual Environment

This step is not needed for the factory image. If dependencies are not yet installed, first execute:

```
cd /home/jetson/voice_to_openclaw
python3 -m venv .venv
source .venv/bin/activate
pip install -r requirements.txt
```

5.2 Startup Method

```
cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
```

If startup is successful, the program will wait for wake or voice input.

```
jetson@yahboom:~/Language$ cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
2026-05-29 18:58:43 [INFO] voice_to_openclaw:run:29 - voice_to_openclaw 启动中
[系统] voice_to_openclaw 已启动
[系统] ASR=dashscope/qwen3-asr-flash | 发布=gateway_chat | TTS=开/cosyvoice_http | 唤醒=串口
[系统] 串口唤醒已启用: /dev/ttyUSB0@115200
[提示] 说“清空上下文”或“/reset”可以重置当前会话
```

If English log is enabled, it will look like this:

```
# Terminal log language: zh / en
UI_LANGUAGE=en
```

```
(.venv) jetson@yahboom:~/voice_to_openclaw$ python -m src.main
2026-05-29 18:59:32 [INFO] voice_to_openclaw:run:29 - voice_to_openclaw starting
[System] voice_to_openclaw started
[System] ASR=dashscope/qwen3-asr-flash | publish=gateway_chat | TTS=on/cosyvoice_http | wake=serial
[System] Serial wake enabled: /dev/ttyUSB0@115200
[Hint] Say "清空上下文" or "/reset" to reset the current session
```

5.3 If Other Interaction Methods Need Broadcast

- Change the broadcast parameter to True

```
ENABLE_TTS=true
```

- Additionally, start a separate listener by entering the following in the terminal:

```
cd ~/voice_to_openclaw
source .venv/bin/activate
python -m src.openclaw_session_tts
```

```
(.venv) jetson@yahboom:~/voice_to_openclaw$ python -m src.openclaw_session_tts
[系统] OpenClaw 会话播报器已启动
[系统] 监听目录=/home/jetson/.openclaw/agents/main/sessions
[系统] 监听渠道=feishu,tui,whatsapp
```

6. Configuration Verification Methods

6.1 Verify Voice Program Can Start

Execute:

```
cd /home/jetson/voice_to_openclaw
source .venv/bin/activate
python -m src.main
```

If the program starts successfully and does not immediately report errors, the environment is most likely set up correctly.

6.2 Verify Recognition and Publishing Process

After saying "Hi, yahboom" to wake up, you can try saying:

- Tell me a joke
- Display hello on the OLED

If you can see OpenClaw returning text, it means:

- Microphone capture is normal
- ASR is normal
- OpenClaw gateway publishing is normal

```
2026-05-13 20:00:29 [INFO] voice_to_openclaw:run:26 - voice_to_openclaw starting
[系统] voice_to_openclaw 已启动
[系统] ASR=xunfei_ws/iat/en_us | 发布=gateway_chat | TTS=开/xunfei_ws | 唤醒=串口
[系统] 串口唤醒已启用: /dev/ttyUSB0@115200
[提示] 说“清空上下文”可以重置当前会话
[唤醒] 检测到串口信号, 开始新一轮对话
[听取] 请开始说话
[听取] 正在收音
[识别] 已捕获 2820 ms 语音, 正在转写

[你] Tell me a joke.
[发送] 正在交给 OpenClaw
[完成] OpenClaw 返回 200

[OpenClaw] why did the robot go to therapy?

Because it had too many *bugs* in
its code! 🐛

...Don't worry, I'm working through my issues one debug
at a time. 😊
[信息] 回复已裁剪为播报文本: 149 -> 90 字
```

6.3 Verify TTS [Optional]

If enabled:

```
ENABLE_TTS=true
```

After OpenClaw returns results, you should be able to hear voice broadcast.

7. Common Issues

7.1 Program Startup Failure

Check first:

- Whether `.venv` exists
- Whether dependencies are installed
- Whether `.env` exists

7.2 No Recognition Result After Wake

Check first:

- Whether `ASR_ENGINE` is configured correctly
- Whether `DASHSCOPE_API_KEY` is valid
- Whether the microphone device number `DEVICE` is correct

7.3 Recognition Succeeds but OpenClaw Does Not Respond

Check first:

- Whether `OPENCLAW_CONFIG_PATH` is correct
- Whether the gateway port in `openclaw.json` is normal
- Whether the OpenClaw gateway has started

7.4 Can Recognize but No Voice Broadcast

Check first:

- Whether `ENABLE_TTS` is `true`
- Whether `SPEAKER_DEVICE` is correct
- Whether the speaker is properly connected

7.5 Serial Wake Failure

Check first:

- Whether `ENABLE_SERIAL_WAKE` is `true`
- Whether `MIC_SERIAL_PORT` is correct
- Whether `MIC_SERIAL_BAUDRATE` is correct
- Whether the voice module serial device has been recognized by the system

8. Recommended Debugging Order

It is recommended to troubleshoot the voice pipeline in the following order:

1. First confirm the `.env` file exists

2. Then confirm `DASHSCOPE_API_KEY` has been filled in
3. Start the program and confirm no immediate errors
4. Check if wake is working
5. Check if recognition is working
6. Check if OpenClaw has received the text
7. Finally check TTS broadcast