
GPIO Reading Function

GPIO Reading Function
1. GPIO Pin Diagram
2. Run the Program
3. Program Effect

1. GPIO Pin Diagram

GPIO.BOARD pin 12 corresponds to GPIO.BCM pin 18:

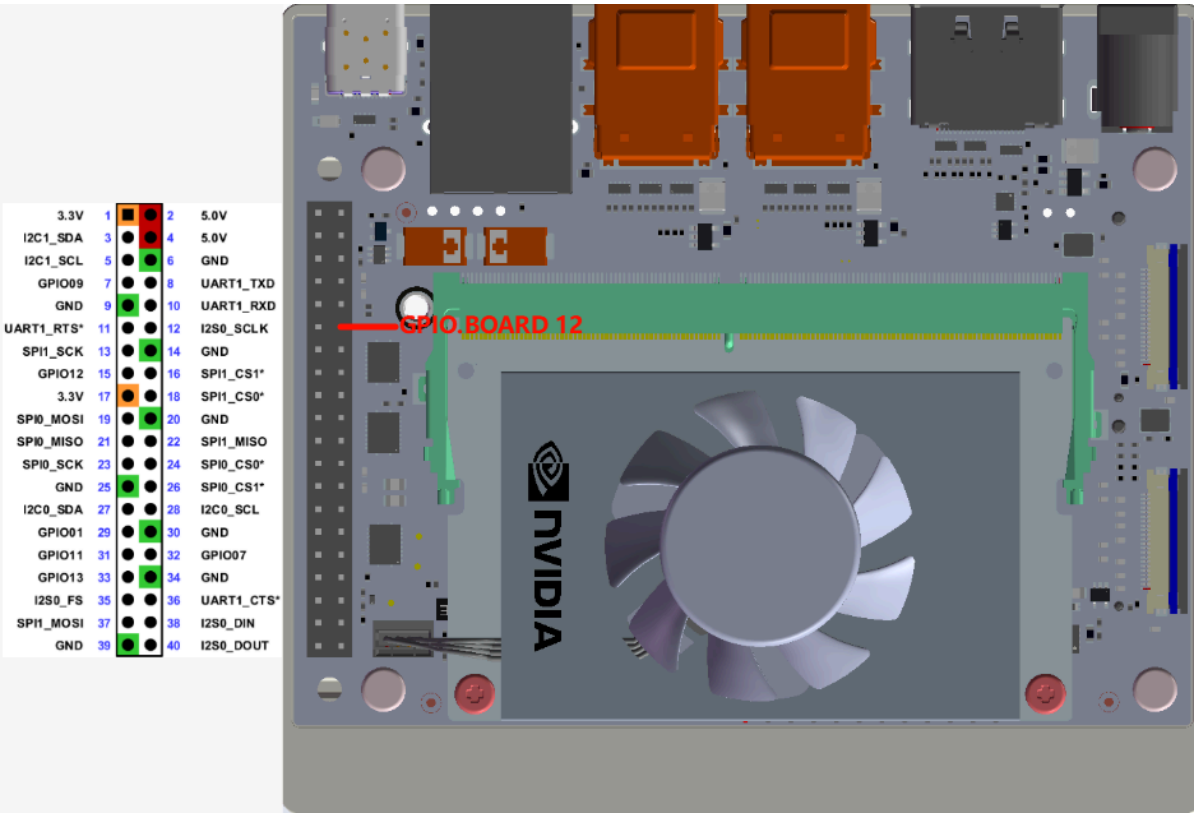

2. Run the Program

```
cd ~/jetson-gpio/samples
```


```
export JETSON_MODEL_NAME=JETSON_ORIN_NANO
```

```
python3 simple_input.py
```

3. Program Effect

Use a jumper wire to connect GPIO.BOARD pin 12 to the GND pin or the 3.3V pin on the mainboard to test the reading of high and low levels:

Note: Do not connect the pins incorrectly or cause a pin short circuit; a mistake may damage the mainboard hardware!

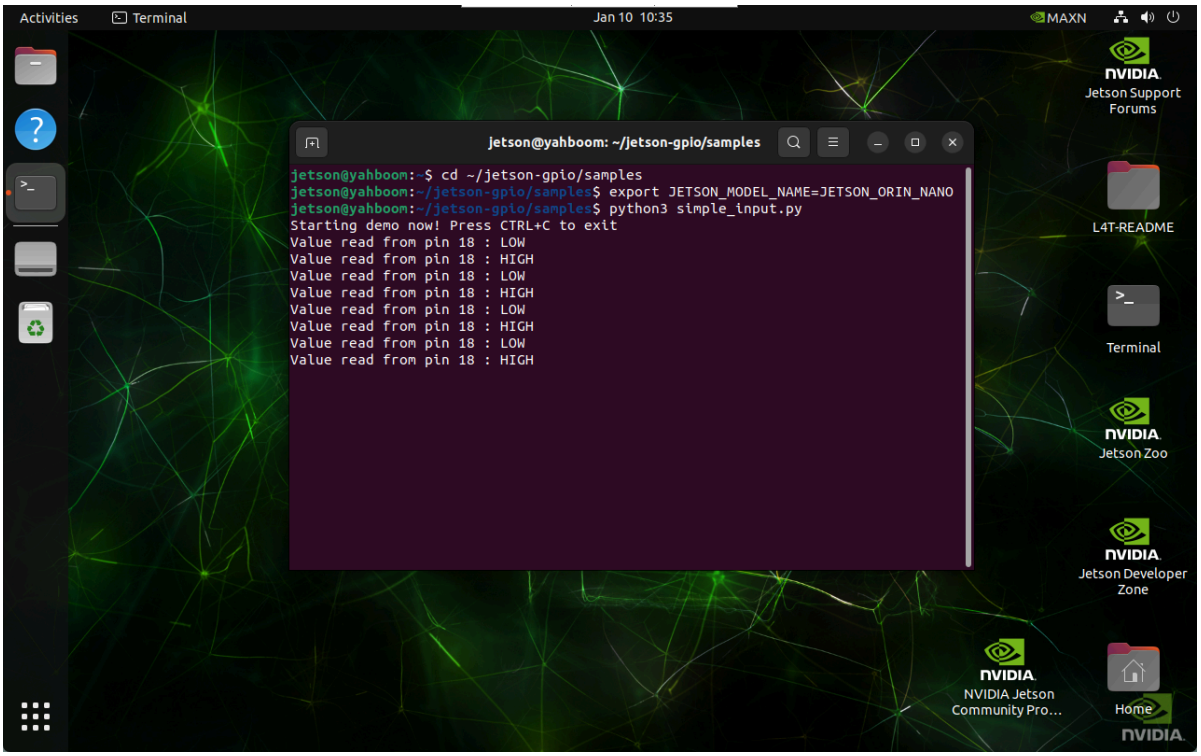
Activities
Terminal
Jan 10 10:35
MAXN
jetson@yahboom: ~/jetson-gpio/samples
jetson@yahboom:~$ cd ~/jetson-gpio/samples
jetson@yahboom:~/jetson-gpio/samples$ export JETSON_MODEL_NAME=JETSON_ORIN_NANO
jetson@yahboom:~/jetson-gpio/samples$ python3 simple_input.py
Starting demo now! Press CTRL+C to exit
Value read from pin 18 : LOW
Value read from pin 18 : HIGH
Value read from pin 18 : LOW
Value read from pin 18 : HIGH
Value read from pin 18 : LOW
Value read from pin 18 : HIGH
Value read from pin 18 : LOW
Value read from pin 18 : HIGH
NVIDIA Jetson Support Forums
L4T-README
Terminal
NVIDIA Jetson Zoo
NVIDIA Jetson Developer Zone
NVIDIA NVIDIA Jetson Community Pro...
Home
NVIDIA