
Serial Communication

Serial Communication

1. GPIO Pin Diagram
2. Serial Port Test
    2.1. Install cutecom
    2.2. Use cutecom
3. Experiment Effect

1. GPIO Pin Diagram


GPIO.BOARD pin 8 corresponds to GPIO.BCM 14, and GPIO.BOARD pin 10 corresponds to GPIO.BCM 15:

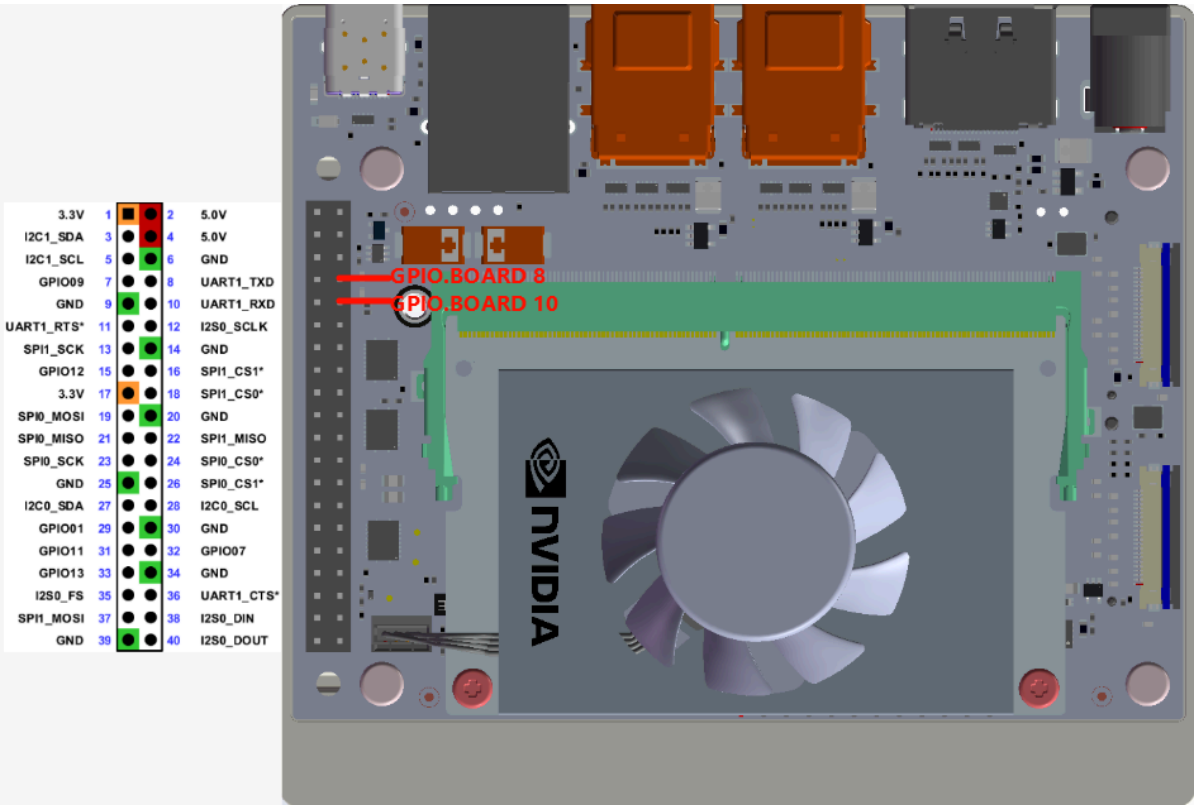

2. Serial Port Test

2.1. Install cutecom


```
sudo apt update
sudo apt install cutecom -y
```

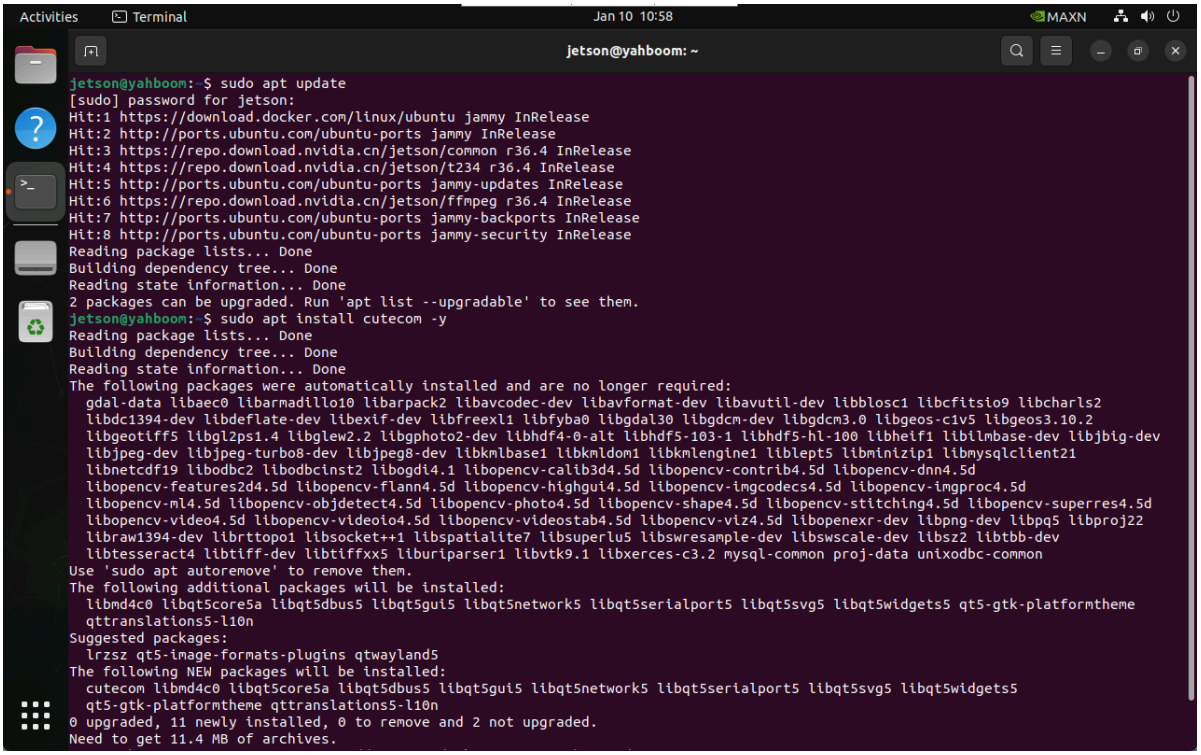

2.2. Use cutecom

Start `cutecom` in the terminal:

```
sudo cutecom
```

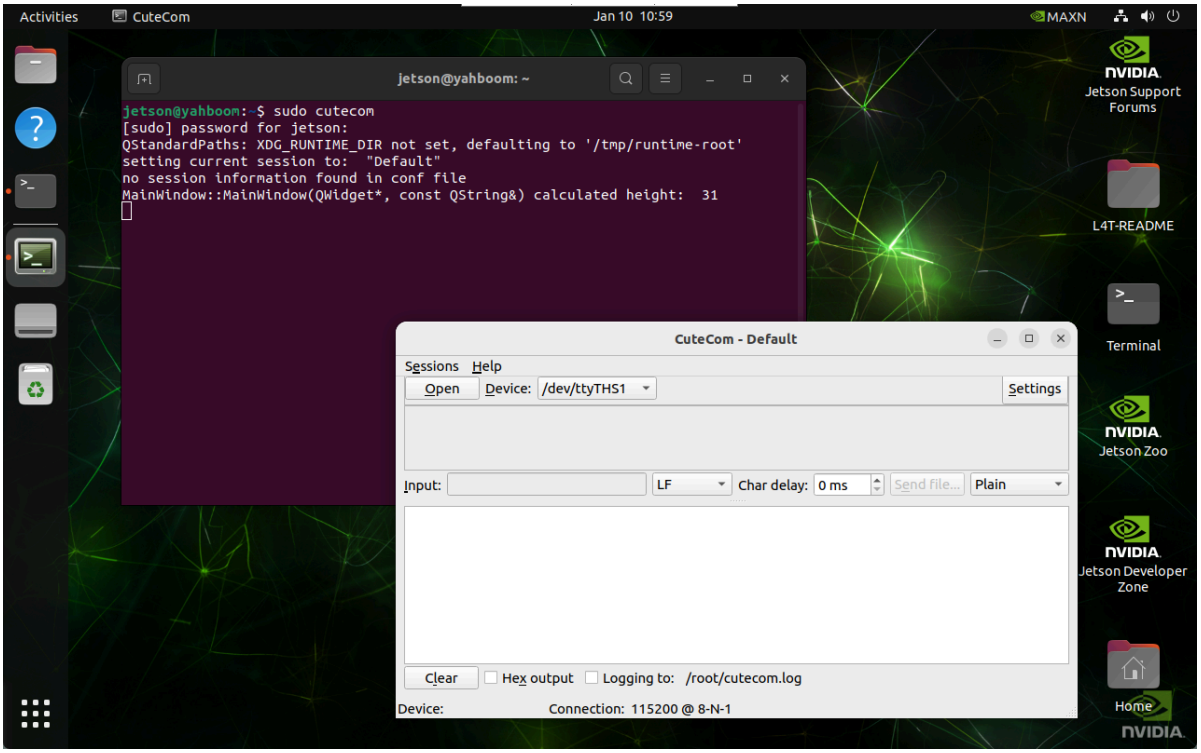

3. Experiment Effect

Use a jumper cap or a DuPont wire to short GPIO.BOARD pin 8 and GPIO.BOARD pin 10.

Use `cutecom` to open the `/dev/ttyTHS1` serial port: enter the data to be sent by the serial port in `Input`. The upper window displays the data sent by the `/dev/ttyTHS1` serial port, and the lower window displays the data received by `/dev/ttyTHS1`:

Note: Do not connect the pins incorrectly or cause a pin short circuit; a mistake may damage the mainboard hardware!

