Quick start

Quick start
1. First boot
    1.1. Prerequisites
        Before first use: update the mainboard bootloader first
    1.2. Boot the system
2. System environment
    2.1. Basic information
    2.2. Jupyter Lab
    2.3. Label Studio
    2.4. Open WebUI
3. Precautions

1. First boot

Boot the factory image: suitable for beginners, no need to set up the environment yourself to try out all the cases!

1.1. Prerequisites

Before first use: update the mainboard bootloader first


Factory mainboards boot with **JetPack 6.2** by default. The SSD bundled with the product currently runs the **JetPack 7.2.1** system, so after receiving the mainboard you must not install the bundled SSD and power it up directly; the QSPI/UEFI bootloader of the mainboard has to be updated first to the version matching JetPack 7.2.1, otherwise the SSD may not be detected, the board may reboot repeatedly, or it may stop at the boot screen.

First complete the corresponding **JetPack 7.2.1 / SUPER bootloader update** in Chapter 2, and after confirming that the bootloader update has succeeded, install the bundled SSD and boot the system. The current tutorial entry is "Chapter 2 Mainboard basics → 07. Write SUPER boot (Must read)", which contains the QSPI/UEFI update instructions for JetPack 7.2.1;


Recommended order:

1. Check the mainboard module, the carrier board model and the current JetPack version.
2. Update the QSPI/UEFI bootloader following the **JetPack 7.2.1 / SUPER bootloader update** tutorial in Chapter 2.
3. Shut down and disconnect the power, install the bundled SSD, and then boot the mainboard.
4. After entering the system, configure the display, the network and VNC according to the rest of this chapter.

Differences in appearance between versions:

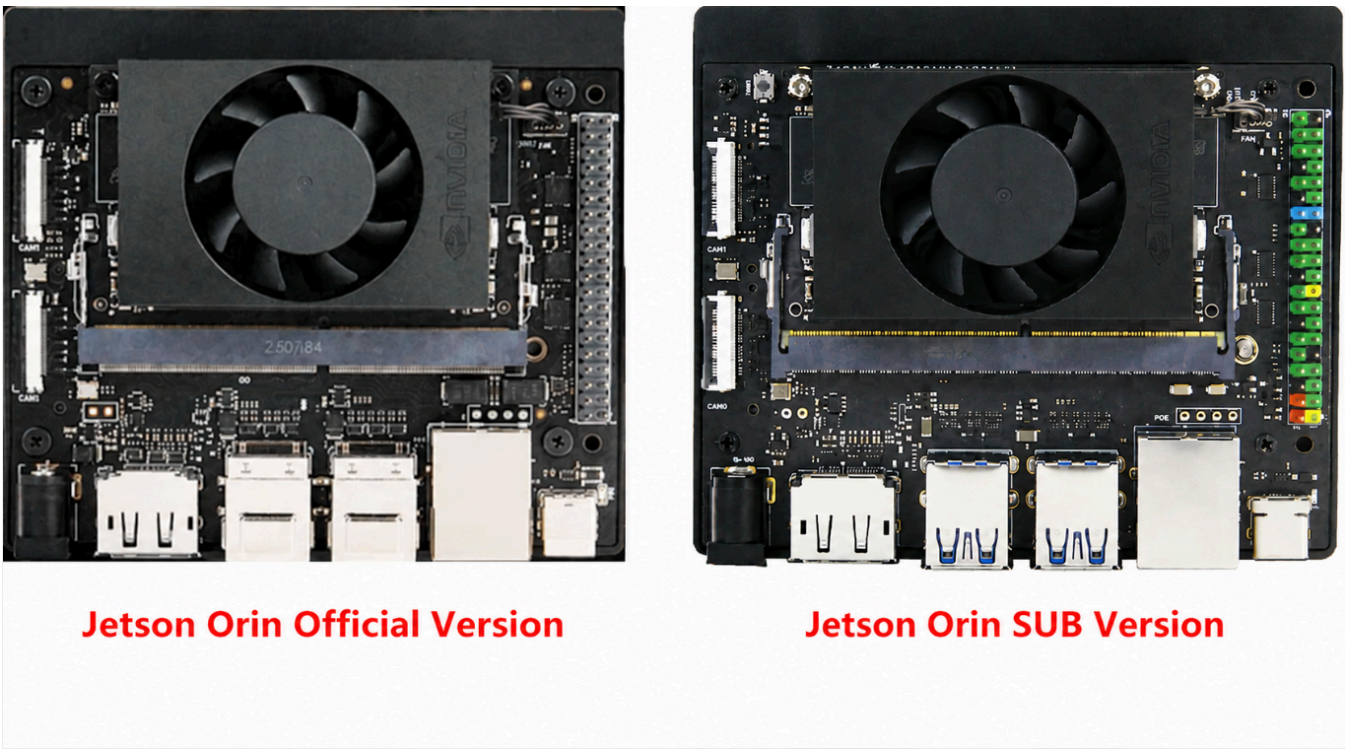

Steps:

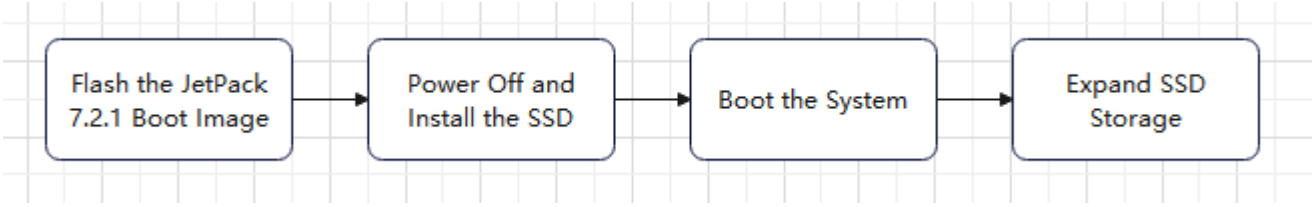

Note:

1. Flashing the JP7.2.1 bootloader: the corresponding tutorial is [Chapter 2 Mainboard basics: 07. Write SUPER boot (Must read)]
2. SSD expansion: the corresponding tutorial is [Chapter 2 Mainboard basics: SSD expansion]

1.2. Boot the system

Once the SSD, the network card, the antennas and the DP cable (connected to the display) are installed on the mainboard, you can boot the mainboard system with the bundled DC power adapter.

The Jetson Orin series mainboards require a display to show the system desktop properly; for the first use it is recommended to connect an external display and set up the VNC remote configuration.

Note: According to user feedback, some users can achieve VNC remote access with a graphics card emulator and a virtual desktop; that content is out of the scope of this tutorial!

2. System environment

2.1. Basic information

System user name: jetson

System password: yahboom

2.2. Jupyter Lab

Access from the host: http://localhost:8888/

LAN access: http://mainboardIP:8888/

Access password: yahboom

2.3. Label Studio

Access from the host: http://localhost:8080/

LAN access: http://mainboardIP:8080/

Access account: yahboom

Access password: yahboom@163.com

2.4. Open WebUI

Access from the host: http://localhost:8080/

LAN access: http://mainboardIP:8080/

Access user name: yahboom
Access email: yahboom@163.com
Access password: yahboom

3. Precautions

- Label Studio and Open WebUI use the same port, so if one of the two containers is running, make sure the other one is stopped!
- For the factory image, Jupyter Lab can be used directly without a password.
- Because software versions keep being updated and every user's environment is different, we cannot guarantee that everyone can successfully set up the environment. The one thing we can provide is a complete system image. If you run into environment problems and cannot solve them on your own, please use our factory image to follow the tutorials.