I2C communication

The I2C pin of the Jetson Orin NX is shown in the figure, and the I2C service needs to be enabled before use.

GPIO和BCM双照表

BCM编码	功能名	物理引脚		功能名	BCM编码
	3V3	1	2	5V	
2	SDA	3	4	5V	
3	SCL	5	6	GND	
4	D4	7	8	D14(TXD)	14
	GND	9	10	D15(RXD)	15
17	D17	11	12	D18	18
27	D27	13	14	GND	
22	D22	15	16	D23	23
	3V3	17	18	D24	24
10	D10	19	20	GND	
9	D9	21	22	D25	25
11	D11	23	24	D8	8
	GND	25	26	D7	7
0	D0(ID_SD)	27	28	D1(ID_SC)	1
5	D5	29	30	GND	
6	D6	31	32	D12	12
13	D13	33	34	GND	
19	D19	35	36	D16	16
26	D26	37	38	D20	20
	GND	39	40	D21	21

First, install I2Ctool and input the terminal：

```
sudo apt-get update
sudo apt-get install -y i2c-tools
```

Check installation status, terminal input：

```
apt-cache policy i2c-tools
```

The following output indicates successful installation

```
i2c-tools:
was installed：4.0-2
candidate： 4.0-2
Version List:
*** 4.0-2 500
500 http://ports.ubuntu.com/ubuntu-ports bionic/universe arm64 Packages
100 /var/lib/dpkg/status
```

Scan all i2c devices on a certain bus and print out the device i2c bus address. For example, if a device with address 0x0f is mounted on the I2C pin, the corresponding device I2C address will be displayed

```
sudo i2cdetect -y -r -a 7
```

```
jetson@yahboom:~$ sudo i2cdetect -y -r -a 7
[sudo] password for jetson:
     0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
20: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- 3c -- -- --
40: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
50: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
70: -- -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
```

Smbus is a Python library. If smbus is not installed, the terminal input:

```
sudo apt-get update
sudo apt-get install -y python3-smbus
```

The Smbus protocol has many related library functions that can be used for I2C communication

function	description	parameters	return value
SMBus Access			
write_quick (addr)	Quick transaction.	int addr	long
read_byte (addr)	Read Byte transaction.	int addr	long
write_byte (addr, val)	Write Byte transaction.	int addr, char val	long
read_byte_data (addr, cmd)	Read Byte Data transaction.	int addr, char cmd	long
write_byte_data (addr, cmd, val)	Write Byte Data transaction.	int addr, char cmd, char val	long
read_word_data (addr, cmd)	Read Word Data transaction.	int addr, char cmd	long
write_word_data (addr, cmd, val)	Write Word Data transaction.	int addr, char cmd, int val	long
process_call (addr, cmd, val)	Process Call transaction.	int addr, char cmd, int val	long
read_block_data (addr, cmd)	Read Block Data transaction.	int addr, char cmd	long [ ]
write_block_data (addr, cmd, vals)	Write Block Data transaction.	int addr, char cmd, long [ ]	None
block_process_call (addr, cmd, vals)	Block Process Call transaction.	int addr, char cmd, long [ ]	long [ ]
I2C Access			
read_i2c_block_data (addr, cmd)	Block Read transaction.	int addr, char cmd	long [ ]
write_i2c_block_data (addr, cmd, vals)	Block Write transaction.	int addr, char cmd, long [ ]	None

The following is a program case of our store's OLED module. If testing is needed, the corresponding OLED module should be used (you can choose to change the OLED module in our store)
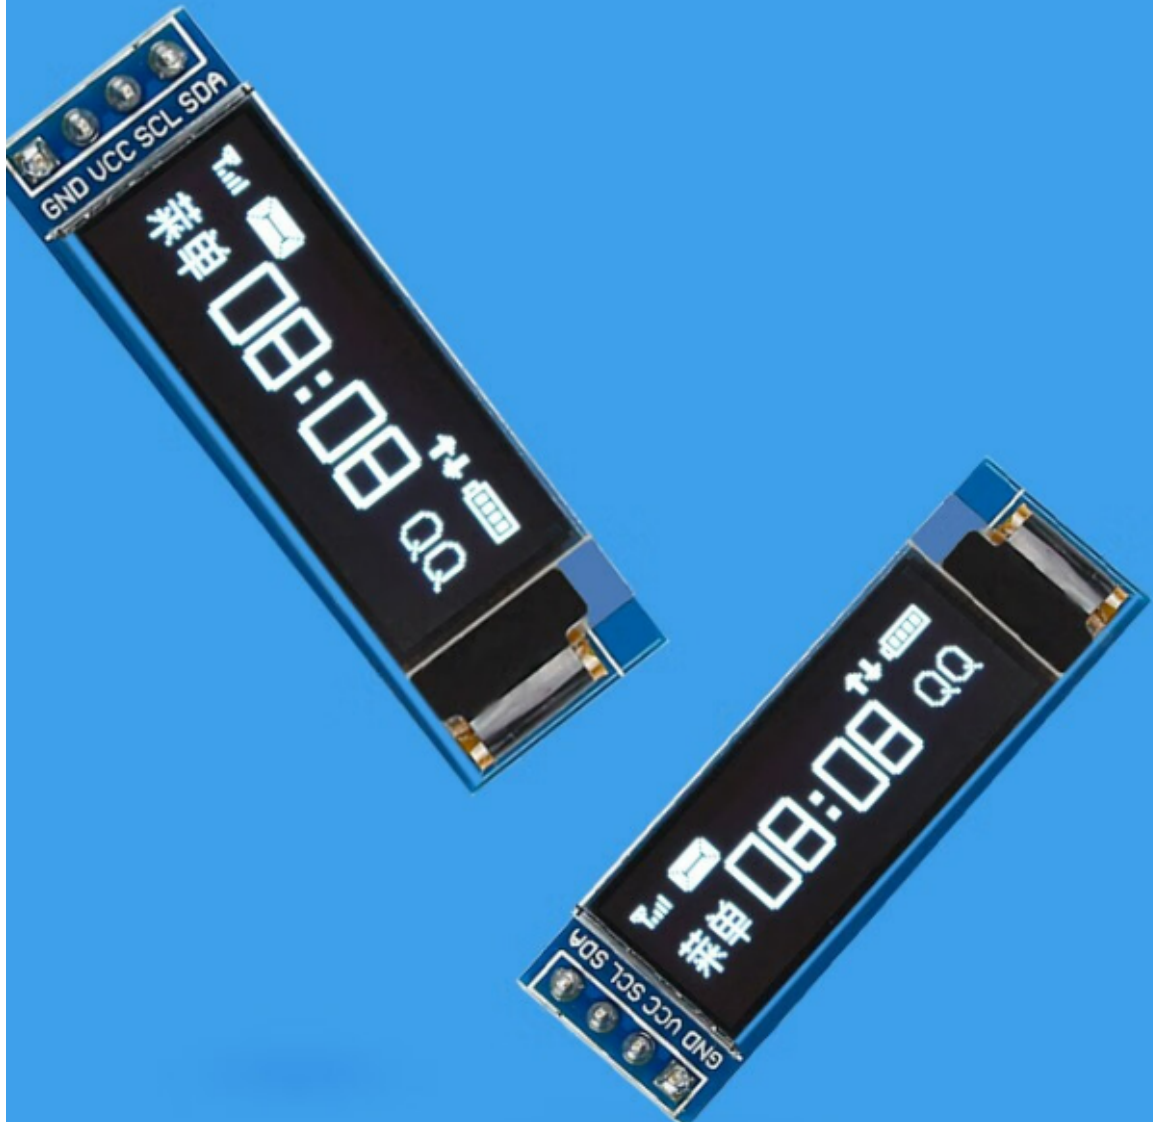
wire:

Jetson Orin NX pin 3（SDA）→oled SDA

Jetson Orin NX pin 5（SCL）→oled SCL

Jetson Orin NX pin 2（5V）→oled VCC

Jetson Orin NX pin 6（GND）→oled GND

Import Adafruit_ SSD1306 library This is the OLED library, and you need to download this library when using your own image

```
pip install Adafruit_SSD1306
```

```python
#!/usr/bin/env python3
# coding=utf-8
import time
import os

import Adafruit_SSD1306 as SSD

from PIL import Image
from PIL import ImageDraw
from PIL import ImageFont

import subprocess

# V1.0.1
class Yahboom_OLED:
    def __init__(self, i2c_bus=1, debug=False):
        self.__debug = debug
        self.__i2c_bus = i2c_bus
        self.__top = -2
        self.__x = 0

        self.__total_last = 0
        self.__idle_last = 0
        self.__str_CPU = "CPU:0%"

    def __del__(self):
        if self.__debug:
            print("---OLED-DEL---")

    # 初始化OLED，成功返回:True，失败返回:False
    # Initialize OLED, return True on success, False on failure
```

init oled：

```python
    # 初始化OLED，成功返回:True，失败返回:False
    # Initialize OLED, return True on success, False on failure
    def begin(self):
        try:
            self.__oled = SSD.SSD1306_128_32(
                rst=None, i2c_bus=self.__i2c_bus, gpio=1)
            self.__oled.begin()
            self.__oled.clear()
            self.__oled.display()
            self.__width = self.__oled.width
            self.__height = self.__oled.height
            self.__image = Image.new('1', (self.__width, self.__height))
            self.__draw = ImageDraw.Draw(self.__image)
            self.__font = ImageFont.load_default()
            if self.__debug:
                print("---OLED begin ok!---")
            return True
        except:
            if self.__debug:
                print("---OLED no found!---")
            return False
```

Afterwards, if you are interested in reading some basic information functions of nano, you can go to this py file to learn more, which includes obtaining local IP, tf card space usage, memory usage, system time, and other information.

Terminal input:

```
cd ~/GPIO_test
sudo python3 test_i2c_oled.py
```

If it is a self built image, you can find the test in the attachment of the data_ i2c_ Transfer oled.py to Jetson orin nx
experimental phenomena：