


Drive motor and read encoder-USART

1.1 Explanation

Please read 《0. Motor introduction and usage》 first to understand the motor parameters, wiring method, and power supply voltage you are currently using. To avoid improper operation and damage to the driver board or motor.

I2C and serial communication cannot be shared, only one can be selected.

Hardware wiring:

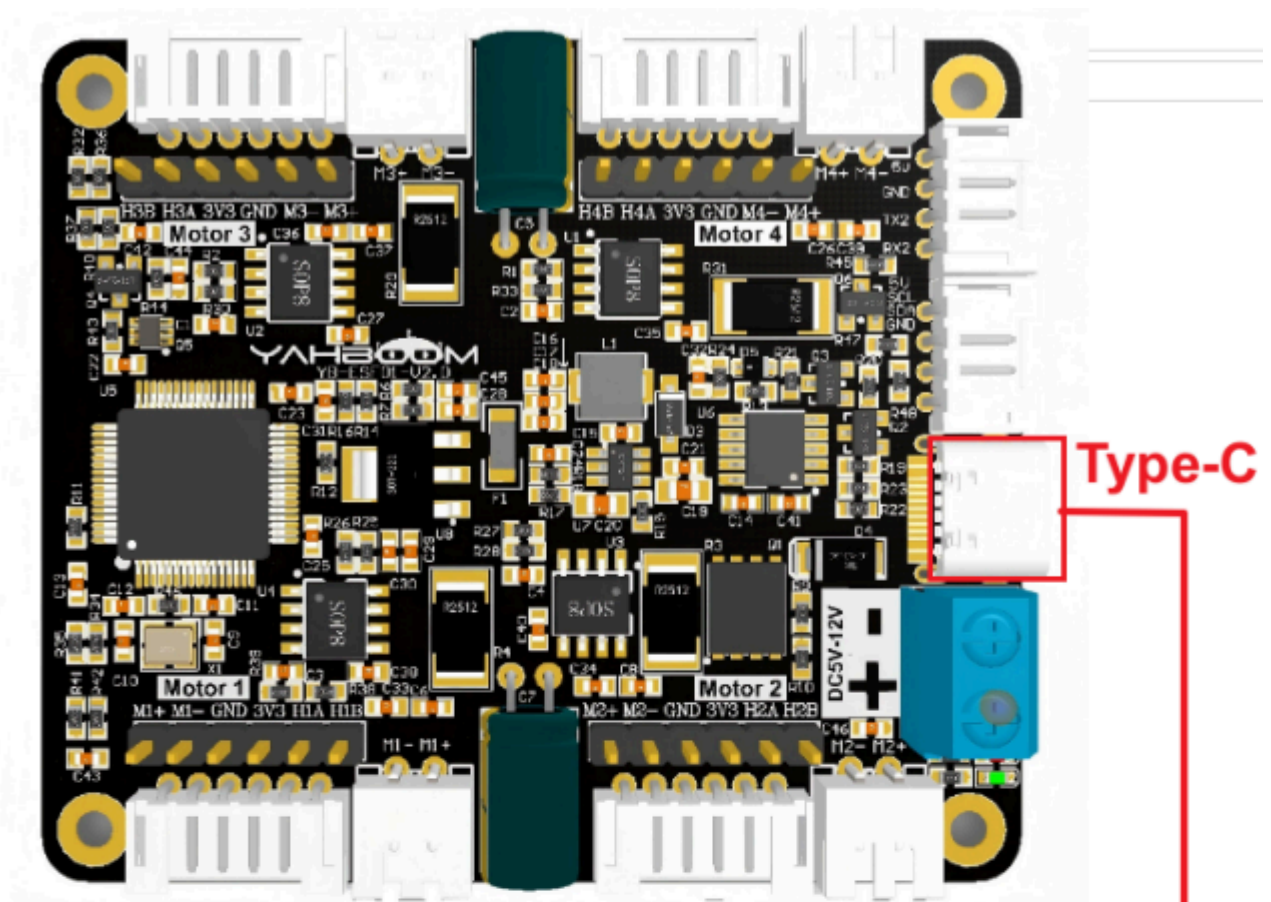

When the mainboard and driver board use serial port communication, just connect the USB port on the mainboard to the TYPE-C port on the 4-channel motor driver board.

Motor	4-channel motor drive board(Motor)
M2	M-
V	3V3
A	H1A
B	H1B
G	GND
M1	M+

1.2 Instructions

After Jetson board is connected to the USB interface of the driver board, you can use the following command to check whether the serial port is recognized.

```
ll /dev/ttyUSB*
```

Normally, `/dev/ttyUSB0` will be displayed. If there is no `ttyUSB0` but `ttyUSB1`, you need to change `port='/dev/ttyUSB0'` at the beginning of the code to `port='/dev/ttyUSB1'`

Then, use file transfer software, such as WinSCP, which needs to be searched and downloaded by yourself.

Transfer the py file to the root directory of the Jetson board through the software, then open the terminal and run the command.

```
sudo python3 ~/USART.py
```

If the system reports a missing serial module error.

```
jetson@ubuntu:~$ sudo python3 ~/USART.py
Traceback (most recent call last):
  File "/home/jetson/USART.py", line 1, in <module>
    import serial
ModuleNotFoundError: No module named 'serial'
```

After running the following two commands to install the module, try running again.

```
sudo apt update
sudo apt install python3-serial
```

1.3 Code analysis

```
UPLOAD_DATA = 3  #0:不接受数据 1:接收总的编码器数据 2:接收实时的编码器 3:接收电机当前速度 mm/s
                #0: Do not receive data 1: Receive total encoder data 2: Receive real-time
encoder 3: Receive current motor speed mm/s
```

```
MOTOR_TYPE = 1  #1:520电机 2:310电机 3:测速码盘TT电机 4:TT直流减速电机 5:L型520电机
                #1:520 motor 2:310 motor 3:speed code disc TT motor 4:TT DC reduction motor
5:L type 520 motor
```

- UPLOAD_DATA: used to set the data of the motor encoder. Set 1 to the total number of encoder pulses and 2 to the real-time pulse data of 10ms.
- MOTOR_TYPE: used to set the type of motor used. Just modify the corresponding numbers according to the comments according to the motor you are currently using. You don't need to modify the rest of the code.

If you need to drive the motor and observe the data, just modify the two numbers at the beginning of the program. No changes are required to the rest of the code.

```
def set_motor_parameter():

    if MOTOR_TYPE == 1:
        set_motor_type(1)  # 配置电机类型
        time.sleep(0.1)
        set_pluse_phase(30)  # 配置减速比，查电机手册得出
        time.sleep(0.1)
        set_pluse_line(11)  # 配置磁环线，查电机手册得出
        time.sleep(0.1)
        set_wheel_dis(67.00)  # 配置轮子直径，测量得出
        time.sleep(0.1)
        set_motor_deadzone(1900)  # 配置电机死区，实验得出
        time.sleep(0.1)

    elif MOTOR_TYPE == 2:
        set_motor_type(2)
        time.sleep(0.1)
        set_pluse_phase(20)
        time.sleep(0.1)
        set_pluse_line(13)
        time.sleep(0.1)
        set_wheel_dis(48.00)
        time.sleep(0.1)
        set_motor_deadzone(1600)
        time.sleep(0.1)

    elif MOTOR_TYPE == 3:
        set_motor_type(3)
        time.sleep(0.1)
        set_pluse_phase(45)
        time.sleep(0.1)
        set_pluse_line(13)
```

```

time.sleep(0.1)
set_wheel_dis(68.00)
time.sleep(0.1)
set_motor_deadzone(1250)
time.sleep(0.1)

elif MOTOR_TYPE == 4:
    set_motor_type(4)
    time.sleep(0.1)
    set_pluse_phase(48)
    time.sleep(0.1)
    set_motor_deadzone(1000)
    time.sleep(0.1)

elif MOTOR_TYPE == 5:
    set_motor_type(1)
    time.sleep(0.1)
    set_pluse_phase(40)
    time.sleep(0.1)
    set_pluse_line(11)
    time.sleep(0.1)
    set_wheel_dis(67.00)
    time.sleep(0.1)
    set_motor_deadzone(1900)
    time.sleep(0.1)

```

This is used to store the parameters of the Yahboom motor. By modifying the MOTOR_TYPE parameter above, one-click configuration can be achieved.

In normally, do not modify the code here when using the Yahboom motor.

If you are using your own motor, or if a certain data needs to be modified according to your needs, you can check the course 《1.2 Control command》 to understand the specific meaning of each command.

```

if __name__ == "__main__":
    try:
        t = 0
        print("please wait...")
        send_upload_command(UPLOAD_DATA)#给电机模块发送需要上报的数据 Send the data that needs
to be reported to the motor module
        time.sleep(0.1)
        set_motor_parameter()#设计电机参数 Design motor parameters

        while True:
            received_message = receive_data() # 接收消息 Receiving Messages
            if received_message: # 如果有数据返回 If there is data returned
                parsed = parse_data(received_message) # 解析数据 Parsing the data
                if parsed:
                    print(parsed) # 打印解析后的数据 Print the parsed data

            t += 10
            M1 = t

```

```

M2 = t
M3 = t
M4 = t

if MOTOR_TYPE == 4:
    control_pwm(M1*2, M2*2, M3*2, M4*2)
else:
    control_speed(M1, M2, M3, M4) #直接发送命令控制电机 Send commands directly to
control the motor

if t > 1000 or t < -1000:
    t = 0

time.sleep(0.1)

```

In the main program loop, the speed of the four motors will be slowly increased from 0 to 1000. If the motor type is 4, that is, the motor without encoder, the PWM of the motor is directly controlled.

At the same time, the data sent by the driver board is read and printed out.

```

def parse_data(data):
    data = data.strip() # 去掉两端的空格或换行符 Remove spaces or line breaks at both ends

    if data.startswith("$MAll:"):
        values_str = data[6:-1] # 去除 "$MAll:" 和 "#" Remove "$MAll:" and "#"
        values = list(map(int, values_str.split(','))) # 分割并转换为整数 Split and convert
to integer
        parsed = ', '.join([f"M{i+1}:{value}" for i, value in enumerate(values)])
        return parsed
    elif data.startswith("$MTEP:"):
        values_str = data[6:-1]
        values = list(map(int, values_str.split(',')))
        parsed = ', '.join([f"M{i+1}:{value}" for i, value in enumerate(values)])
        return parsed
    elif data.startswith("$MSPD:"):
        values_str = data[6:-1]
        values = [float(value) if '.' in value else int(value) for value in
values_str.split(',')]
        parsed = ', '.join([f"M{i+1}:{value}" for i, value in enumerate(values)])
        return parsed

```

Extract the saved original data and reconstruct it into a new printing format.

1.4 Experimental phenomenon

After connecting the type-c port on the driver board to the USB port on the motherboard, place the program in the root directory and run the command `sudo python3 ~/USART.py`. You can see that the motor will gradually speed up, then stop, and repeat.

At the same time, you can see the printed motor value in the terminal constantly changing.

M1:652.48,	M2:652.48,	M3:652.48,	M4:652.48
M1:666.98,	M2:666.98,	M3:666.98,	M4:652.48
M1:666.98,	M2:681.48,	M3:666.98,	M4:666.98
M1:695.98,	M2:695.98,	M3:681.48,	M4:681.48
M1:695.98,	M2:695.98,	M3:695.98,	M4:695.98
M1:695.98,	M2:710.48,	M3:695.98,	M4:695.98
M1:724.98,	M2:710.48,	M3:724.98,	M4:710.48
M1:724.98,	M2:710.48,	M3:724.98,	M4:724.98
M1:724.98,	M2:739.48,	M3:724.98,	M4:724.98
M1:753.98,	M2:739.48,	M3:739.48,	M4:753.98
M1:753.98,	M2:753.98,	M3:753.98,	M4:753.98
M1:768.48,	M2:768.48,	M3:768.48,	M4:768.48
M1:782.98,	M2:782.98,	M3:782.98,	M4:768.48
M1:782.98,	M2:782.98,	M3:782.98,	M4:782.98
M1:797.48,	M2:782.98,	M3:782.98,	M4:782.98
M1:811.98,	M2:797.48,	M3:811.98,	M4:811.98