

Touch to Sing

Touch to Sing

1. Experiment Purpose
2. Experiment Steps
3. Experiment Source Code
4. Program Download
5. Experiment Result


Note

This project is only applicable to Micro:bit V2. Micro:bit V1 cannot use the touch LOGO function.

1. Experiment Purpose

This section demonstrates how to use the Micro:bit's touch LOGO and buttons to control music switching based on the previous section.

If the touch LOGO does not respond, or if it plays the next song without being touched, it may be due to wear, aging, or damage of the touch LOGO.

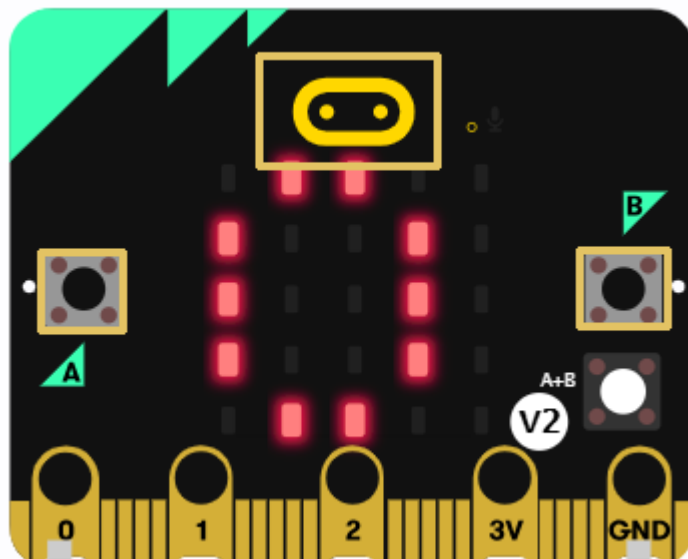


2. Experiment Steps

1. Before starting the experiment, connect the Micro:bit board to your computer using a Micro USB cable. The computer will display the MICROBIT drive letter.




2. Open MakeCode using the link below.

[Microsoft MakeCode for micro:bit](#)

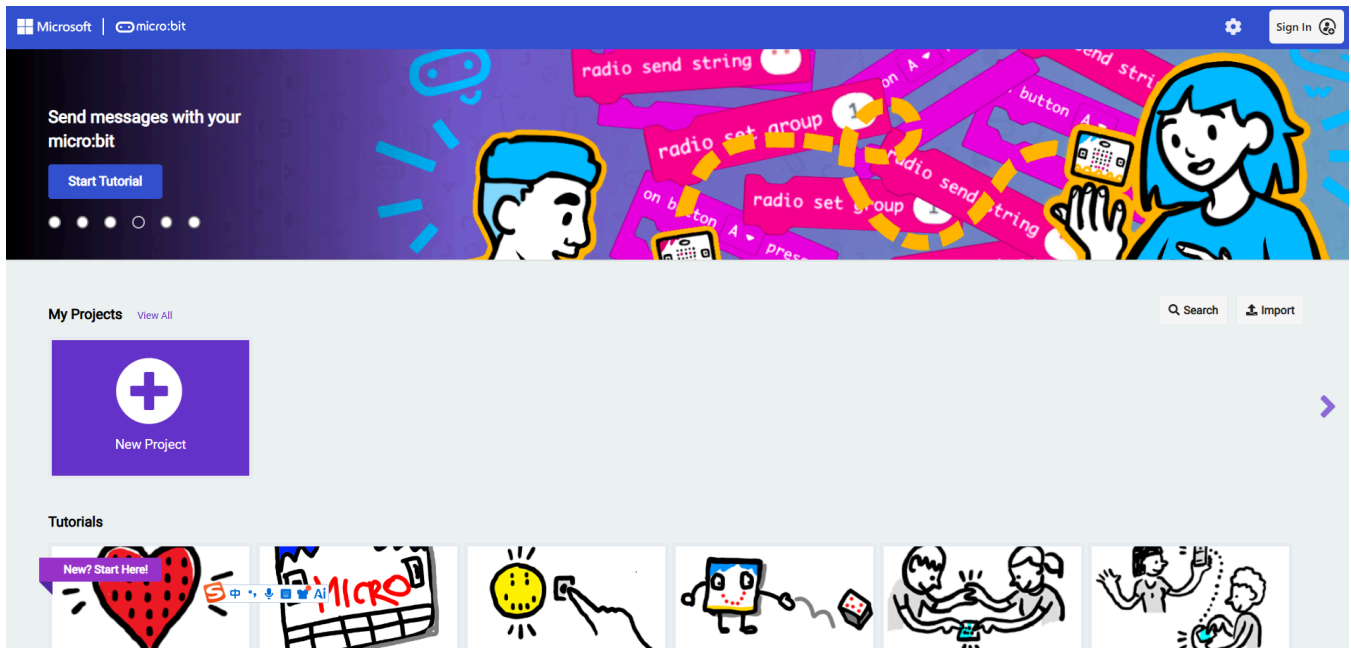

3. Drag `Touch_to_Sing.hex` to the new project page. MakeCode will automatically import and open the project.

3. Experiment Source Code

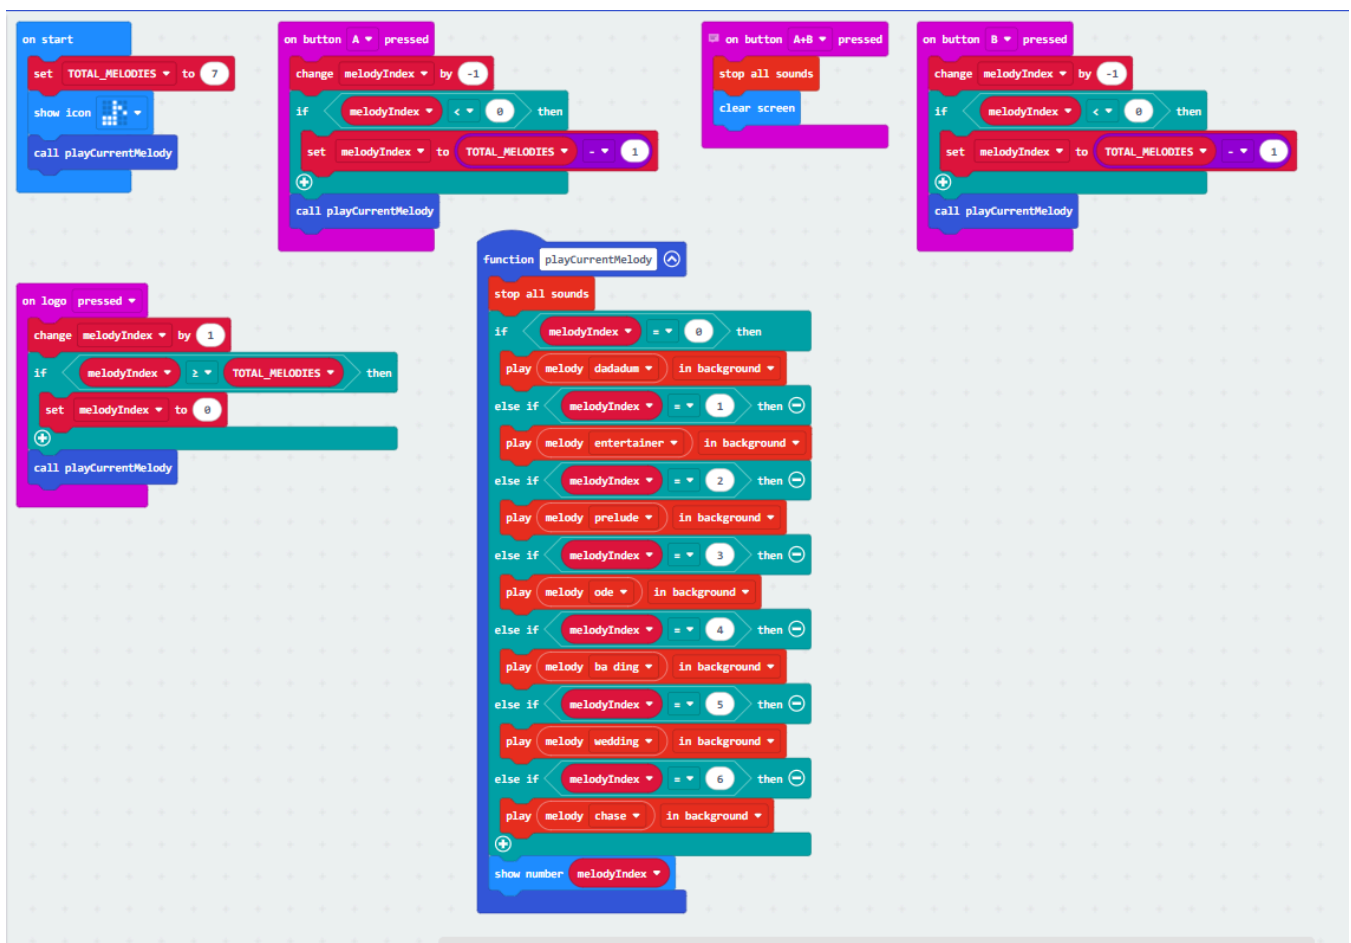

4. Program Download

Click the "Download" button in the lower left corner to download the program to the Micro:bit.

5. Experiment Result

After flashing, the screen will display a musical note icon, followed by music playing in the background. Press the touch LOGO button to play the next song, press the A or B button to play the previous song, and press both buttons simultaneously to stop playback. This project includes seven melodies in the playlist.

In addition to the music in this project, the Micro:bit offers many built-in audio melodies. You can try replacing them with different ones. After modification, click the "Download" button again to flash the program to the Micro:bit.