

Bluetooth APP Remote Control

Bluetooth APP Remote Control

1. Download Bluetooth APP
2. Download Program to Microbit
3. Connect Bluetooth
4. Bluetooth Remote Control Interface Introduction

Due to the Microbit V1.0 having significantly lower performance than Microbit V2.0, the Bluetooth control examples only include motion control. Please ensure sufficient battery level before controlling.

1. Download Bluetooth APP

Android users please use a **browser** to scan the QR code below to download and install, or directly download our [Android Remote APP] from the download section.

Apple users please use the **camera** to scan the QR code to download and install from the App Store.



IOS



Android

2. Download Program to Microbit

1. Connect the micro:bit mainboard to the computer using a data cable. At this point, you will see a MICROBIT drive appear on your computer.



2. Select the corresponding program based on your mainboard model:

- For Microbit: V2 mainboard, copy or send "1.V2_Bluetooth_Remote.hex" to the MICROBIT drive.
- For Microbit: V1 mainboard, copy or send "1.V1_Bluetooth_Remote.hex" to the MICROBIT drive.

3. Connect Bluetooth


After the Bluetooth remote control program is downloaded, power on the Lastbit car. At this time, the RGB spotlight will light up in red, which indicates the Bluetooth is not connected.

After successful Bluetooth connection, the RGB spotlight turns green.

The Bluetooth connection may vary depending on the phone model. If you cannot connect after multiple attempts, please download the attached Mbit_fix.apk.

4. Bluetooth Remote Control Interface Introduction


The music interface mainly provides motion control, including car direction control and robotic arm control.

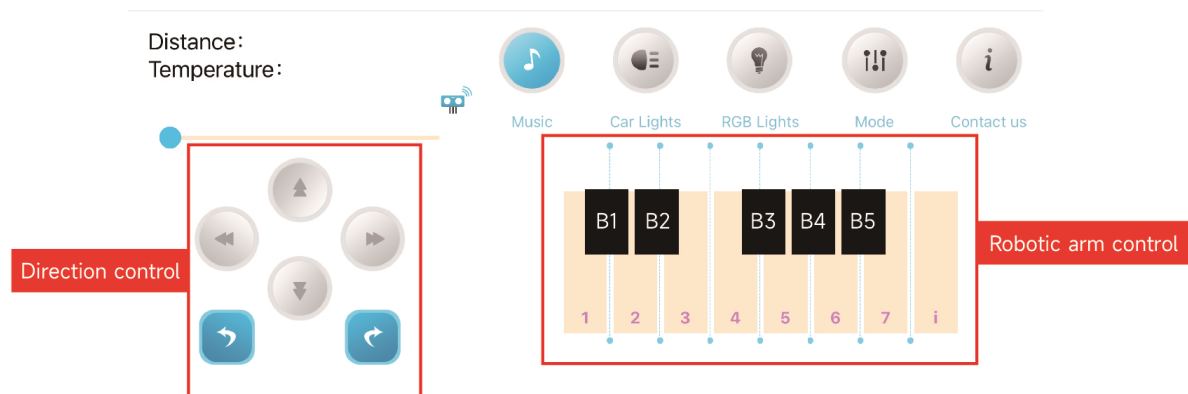

Function Description

Button	Functional Description	Button	Functional Description
1	Long press to gradually clamp the gripper	i	Decrease the movement step size of the servo
2	Long press to gradually release the gripper	B1	Return the servo to the center, lift the robotic arm, and the robotic arm is in the reset state
3	Long press to control the robotic arm upward movement	B2	Return the servo to the center, lower the robotic arm, and the robotic arm is in a gripping state
4	Long press to control the robotic arm downward movement	B3	Control the clamping of the gripper (Gripping the block)
5	Long press to control the robotic arm left movement	B4	Control the lifting of the robotic arm (Lift the robotic arm after gripping the block)
6	Long press to control the robotic arm right movement	B5	Control the descent of the robotic arm, then release it
7	Increase the movement step size of the servo		


Due to the limited performance of Microbit V1.0, Bluetooth control only supports motion direction and robotic arm control, with no other functions.

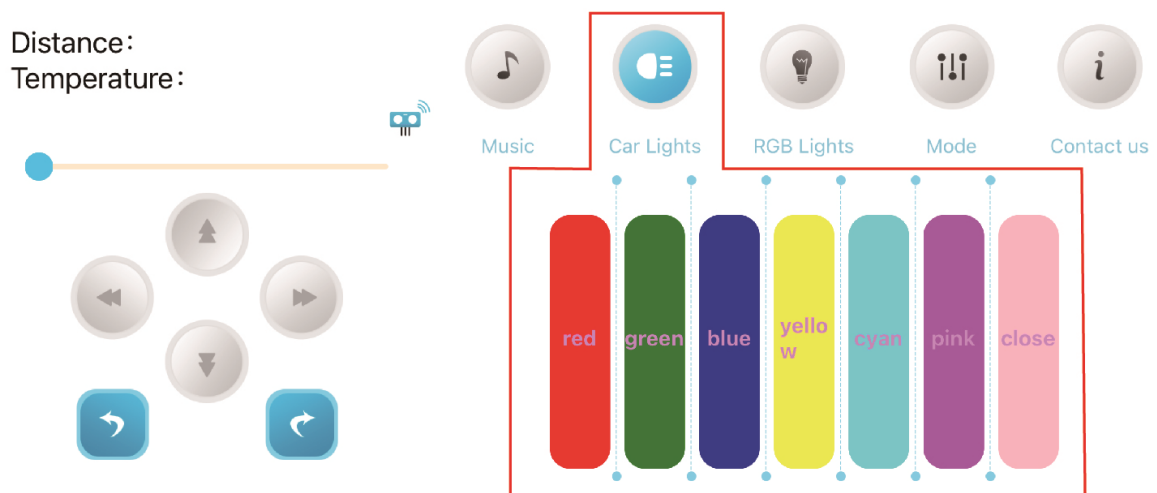

Before switching from car light control to RGB control, it is recommended to turn off all lights under car light control first.

The RGB light section mainly controls the RGB light effects on the car body, defining three light effects: water flow light, horse racing light (gradient light), and breathing light.

When controlling light effects, first click [Change Color] to select a color. At this time, the RGB lights on the car body will light up with a random color. Then click on one of the water flow light, horse racing light, or breathing light to start the effect. The light effect will continue to run until you click the selected light effect again to stop it. You can only switch to another light effect mode after the current effect has stopped.

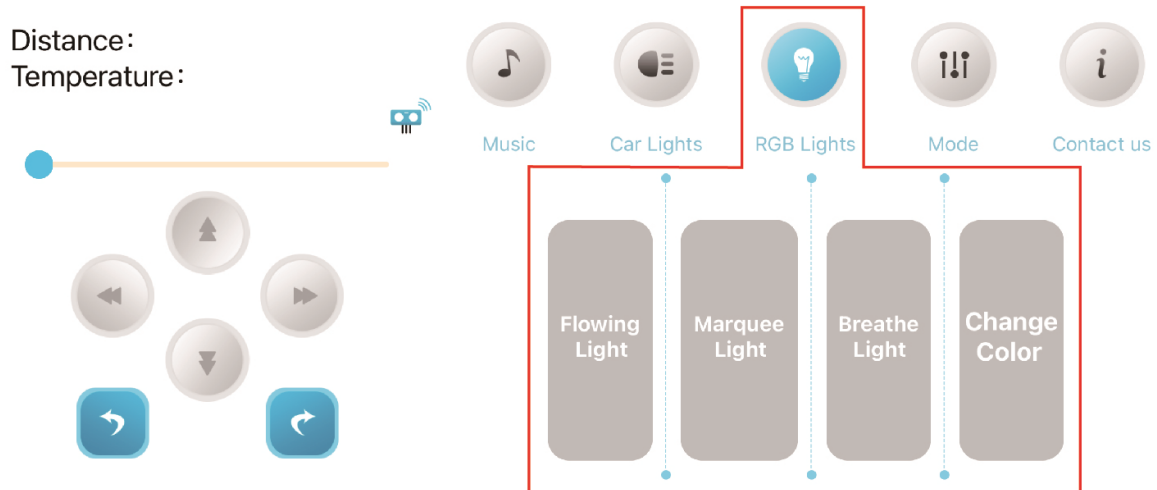

The mode control section defines three modes: Tracking Mode, Obstacle Avoidance Mode, and Following Mode.

Before using the line tracking mode, please lay the track flat on the ground first, then adjust the sensitivity of the line tracking module by turning the potentiometer knob on the four-way line tracking module. (When black line is detected, the blue light on the line tracking module probe will light up; when white is detected, it will turn off.)

Tracking Mode: Place the car on the line tracking track and click [Tracking Mode] to start automatic line tracking. Click again to turn off the function.

Obstacle Avoidance Mode: The car will use the ultrasonic sensor to detect obstacles ahead and avoid them. Click again to turn off the function.

Following Mode: The car will maintain a certain distance from the target directly in front. If the target distance becomes farther, it will move forward; if the distance becomes closer, it will move backward. Click again to turn off the function.

