

Robot Move Forward

Robot Move Forward

[Function Description](#)

[Experiment Steps](#)

[Code Implementation](#)


[Experiment Result](#)

Function Description

In this section, we introduce how to control the motors to make the car move forward.

Experiment Steps

Before flashing, make sure `LASTBIT.hex` has been flashed, otherwise an error will occur and the module cannot be imported.

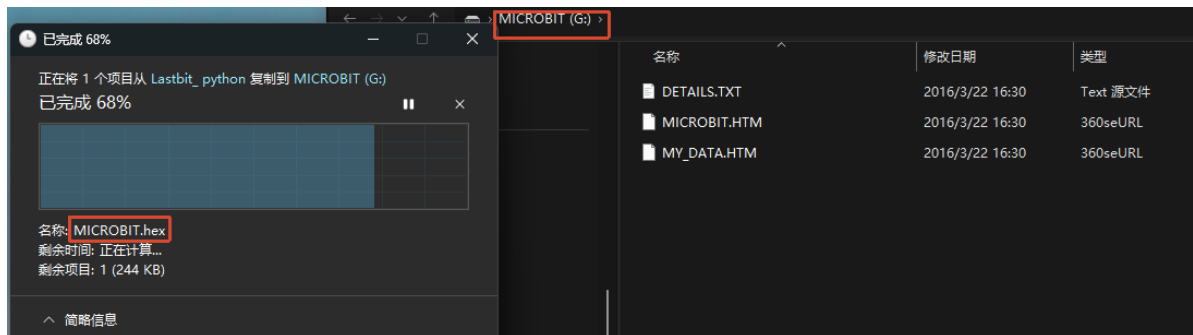

1. Before flashing, toggle the switch to the OFF position, and connect the computer to the micro:bit main board with a microUSB data cable. **Note: use the Microbit interface, not the Charging port of the expansion board.**
2. Open the Mu software and directly copy the program source code we provide. The operation steps are as follows. You can also enter the code yourself in the editor window. Note! All letters and symbols should be entered in English input mode, use the Tab key for indentation, and the last line should end with a blank program.

Click the `New` button in the toolbar at the top left corner, and a file titled untitled will appear.



- Copy the content of the `Code Implementation` section provided below into the current file. You will notice a small red dot after the title bar, indicating that the code content has been modified but is in an unsaved state.

Whether you save or not does not affect code checking and flashing.

- At this point, you can click `Check` to check whether there are any problems with the code format.



- At this point, if you have already connected the MICROBIT to the PC computer following the steps above and flashed `LASTBIT.hex`, the next step is to download the current program to the Microbit.

Click the `Flash` tool in the toolbar to start flashing!

While flashing, the orange-yellow indicator light near the micro:bit main board will blink frequently. When the editor prompts `Copied code onto micro:bit.`, the flashing is complete, and the indicator light will stop blinking afterwards.



- Unplug the Microusb data cable and toggle the switch to the ON position.

Code Implementation

```
# Robot Move Forward
from microbit import *
from lastbit import LASTBIT

Lastbit = LASTBIT()

# forward, speed 80
Lastbit.car_control('FORWARD', 80)
# or use direct motor control
# Lastbit.set_motor(80, 80)
```

`car_control(direction, speed)`: this method is used to control the direction of the robot. The first parameter 'FORWARD' means moving forward, and the second parameter speed is the speed, which can be set from 0 to 255.

`set_motor(speed,speed)`: this method is used to directly set the speed and direction of the robot. The first parameter sets the left wheel motor, and the second parameter sets the right wheel motor. It can be set from -255 to 255, with positive numbers meaning forward and negative numbers meaning backward.

Experiment Result

The car will drive forward.