

Robot Direction Control

Robot Direction Control


[Function Description](#)
[Experiment Steps](#)
[Code Implementation](#)
[Experiment Result](#)
[Notes](#)

Function Description

In this section, we learn how to control the driving direction of the robot.

Experiment Steps

Before flashing, make sure `LASTBIT.hex` has been flashed, otherwise an error will occur and the module cannot be imported.

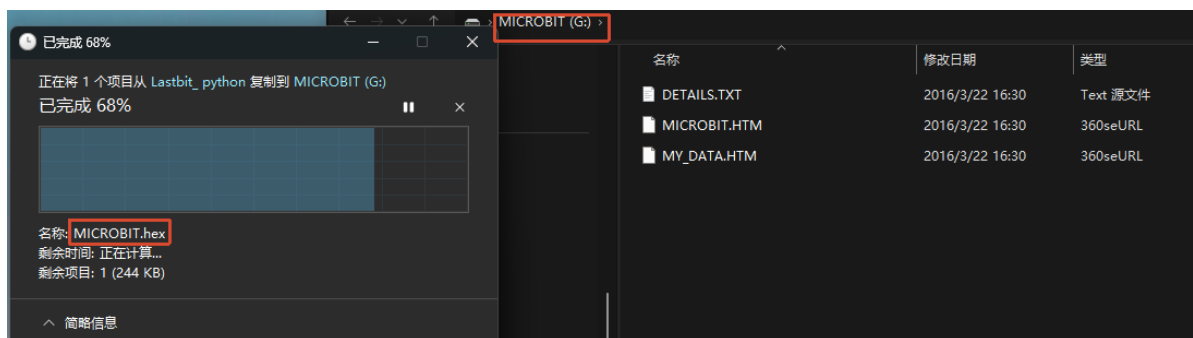


1. Before flashing, toggle the switch to the OFF position, and connect the computer to the micro:bit main board with a microUSB data cable. **Note: use the Microbit interface, not the Charging port of the expansion board.**
2. Open the Mu software and directly copy the program source code we provide. The operation steps are as follows. You can also enter the code yourself in the editor window. Note! All letters and symbols should be entered in English input mode, use the Tab key for indentation, and the last line should end with a blank program.
Click the `New` button in the toolbar at the top left corner, and a file titled untitled will appear.



3. Copy the content of the `Code Implementation` section provided below into the current file. You will notice a small red dot after the title bar, indicating that the code content has been modified but is in an unsaved state.

Whether you save or not does not affect code checking and flashing.


4. At this point, you can click `Check` to check whether there are any problems with the code format.



5. At this point, if you have already connected the MICROBIT to the PC computer following the steps above and flashed `LASTBIT.hex`, the next step is to download the current program to the Microbit.

Click the `Flash` tool in the toolbar to start flashing!

While flashing, the orange-yellow indicator light near the micro:bit main board will blink frequently. When the editor prompts `Copied code onto micro:bit.`, the flashing is complete, and the indicator light will stop blinking afterwards.

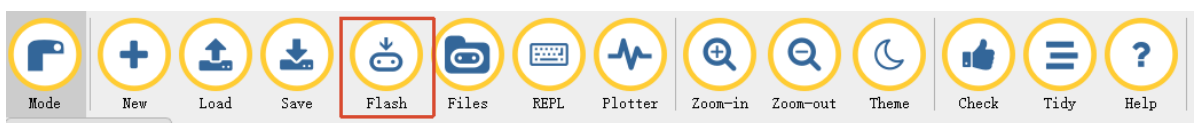

6. Unplug the Microusb data cable and toggle the switch to the ON position.

Code Implementation

```
# Robot Direction Control
from microbit import *
from lastbit import LASTBIT

Lastbit = LASTBIT()

# forward, speed 80, time 2000ms
Lastbit.car_control('FORWARD', 80, 2000)

# backward, speed 80, time 2000ms
```

```
Lastbit.car_control('BACKWARD', 80, 2000)

# left, speed 80, time 2000ms
Lastbit.car_control('LEFT', 80, 2000)

# right, speed 80, time 2000ms
Lastbit.car_control('RIGHT', 80, 2000)

# spin left, speed 80, time 2000ms
Lastbit.car_control('SPINLEFT', 80, 2000)

# spin right, speed 80, time 2000ms
Lastbit.car_control('SPINRIGHT', 80, 2000)

# stop
Lastbit.stop_motor()
```

car_control(direction, speed, time): this method is used to control the direction of the robot. The first parameter 'FORWARD' means moving forward, the second parameter speed is the speed, which can be set from 0 to 255, and the third parameter indicates the control duration in ms.

direction supports the following parameters:

- FORWARD
- BACKWARD
- LEFT
- RIGHT
- SPINLEFT
- SPINRIGHT

stop_motor: this method is used to stop the motors.

Experiment Result

The car will move forward for 2 seconds, backward for 2 seconds, turn left for 2 seconds, turn right for 2 seconds, spin left for 2 seconds, spin right for 2 seconds, and finally stop.

Notes

Make sure the car battery is sufficiently charged, otherwise there may be problems such as inability to control or insufficient motor torque.