

UniFlash Program Download (Serial Download)

UniFlash Program Download (Serial Download)

1. Download UniFlash
2. Install UniFlash
3. Install CH340 Serial Driver
4. Open UniFlash and Set Parameters
5. Flash Program
6. Common Problems

1. Download UniFlash

Search for uniflash on the official website to download. You can also get it from our online disk materials.

Download address: [UNIFLASH Software programming tool | TI.com](https://www.ti.com/tool/uniflash)

Select the version that supports your development environment. My development environment is Win10, so I choose to download the Windows version installer.

Downloads

UNIFLASH — UniFlash for most TI microcontrollers (MCUs) and mmWave sensors

Latest version Version: 8.8.1 Release date: 08 Oct 2024

[Release notes](#) [View all versions](#)

Downloads

Supported products & hardware

[UniFlash Windows Installer](#) — 318341 K

MD5 checksum 66b6f2102b9787a2c204018fd698db97

[UniFlash Linux Installer](#) — 295740 K

MD5 checksum c14b6d92c895c6bbc7de5df304847c4a

[UniFlash macOS Installer](#) — 238060 K

MD5 checksum 2b7baf95c227370f255eba4daea209dc



Documentation

2. Install UniFlash


- Double-click the downloaded `uniflash_sl.x.exe` file

名称	修改日期	类型	大小
 uniflash_sl.8.8.1.4983.exe	2024/10/30 18:28	应用程序	318,342 KB


- Click **NEXT**

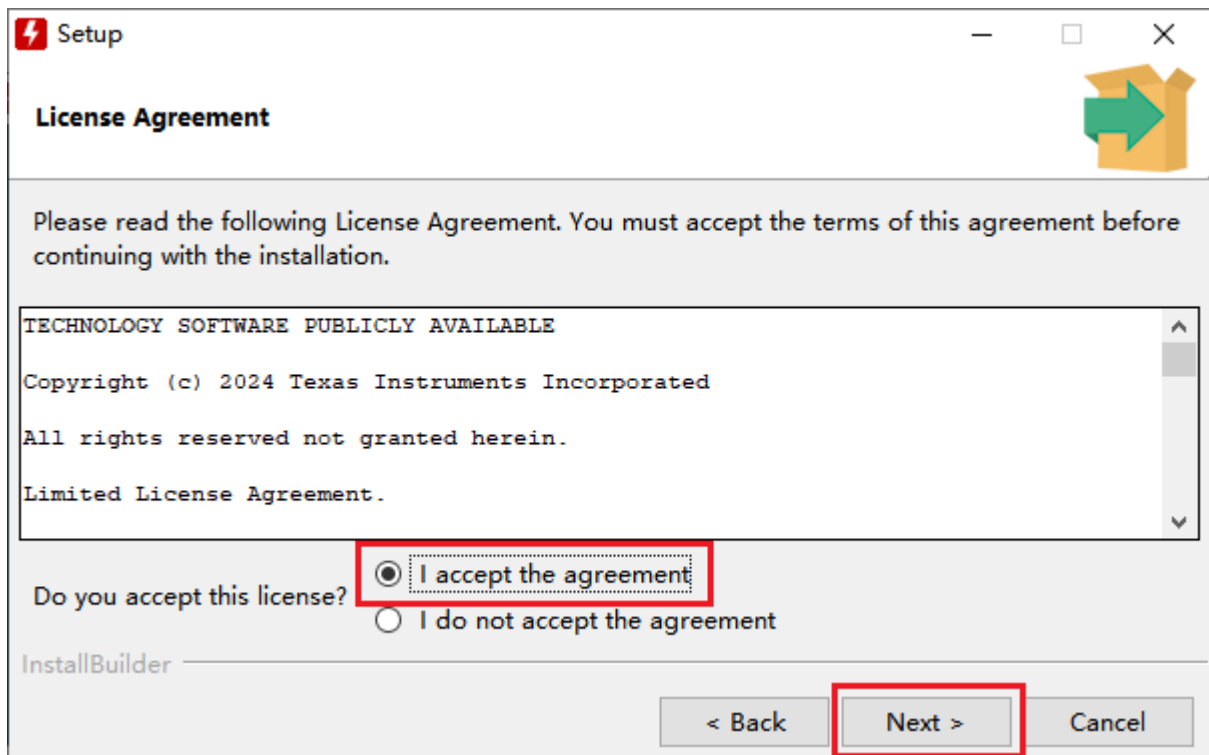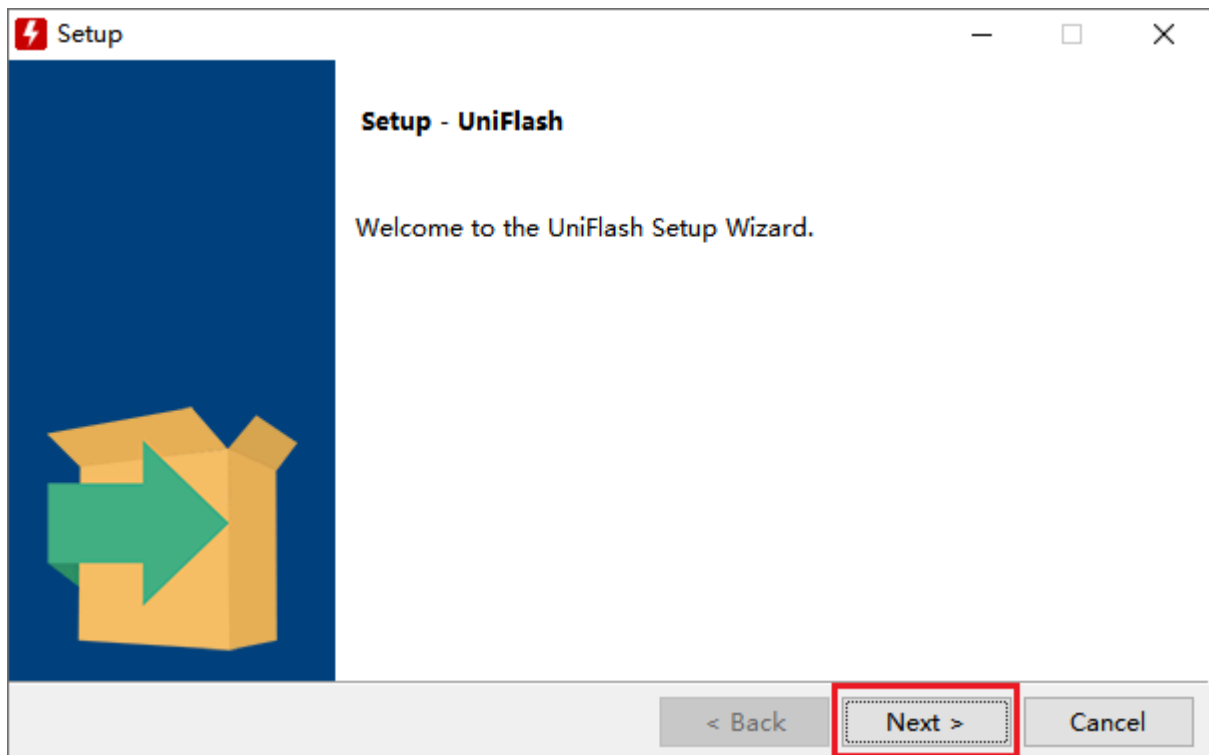


- Select your installation path

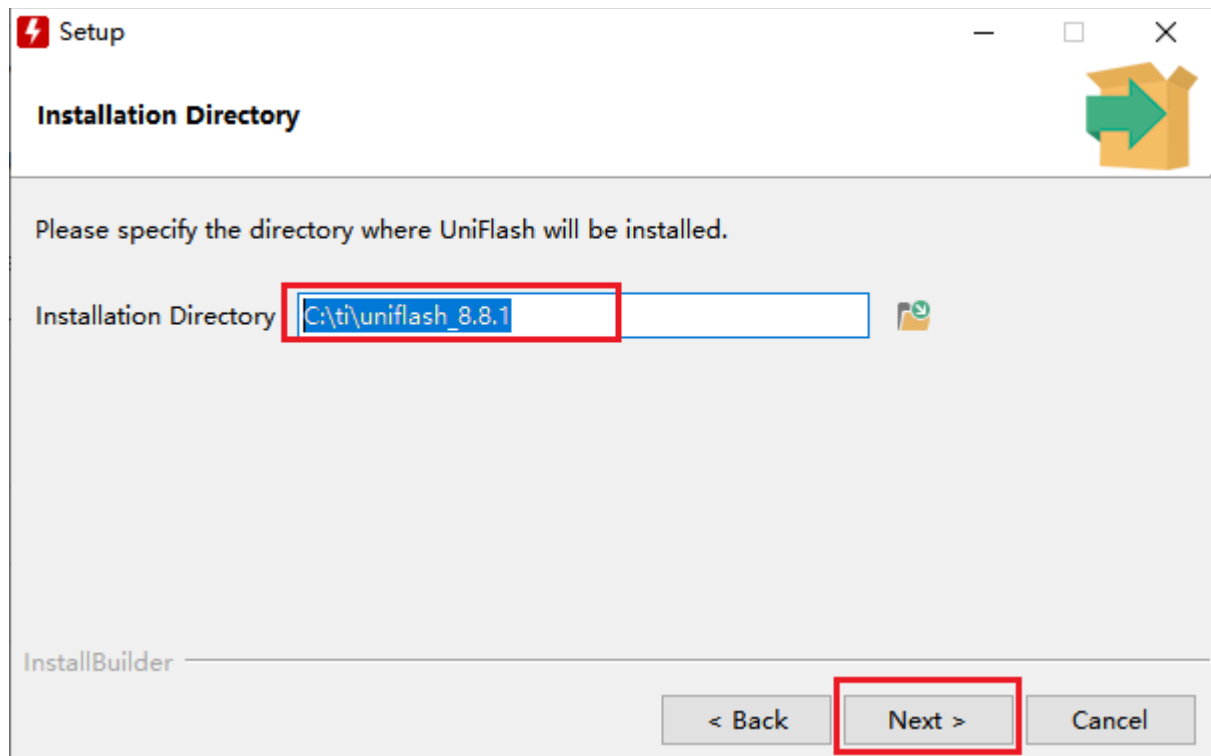


- Click **NEXT** to start installation

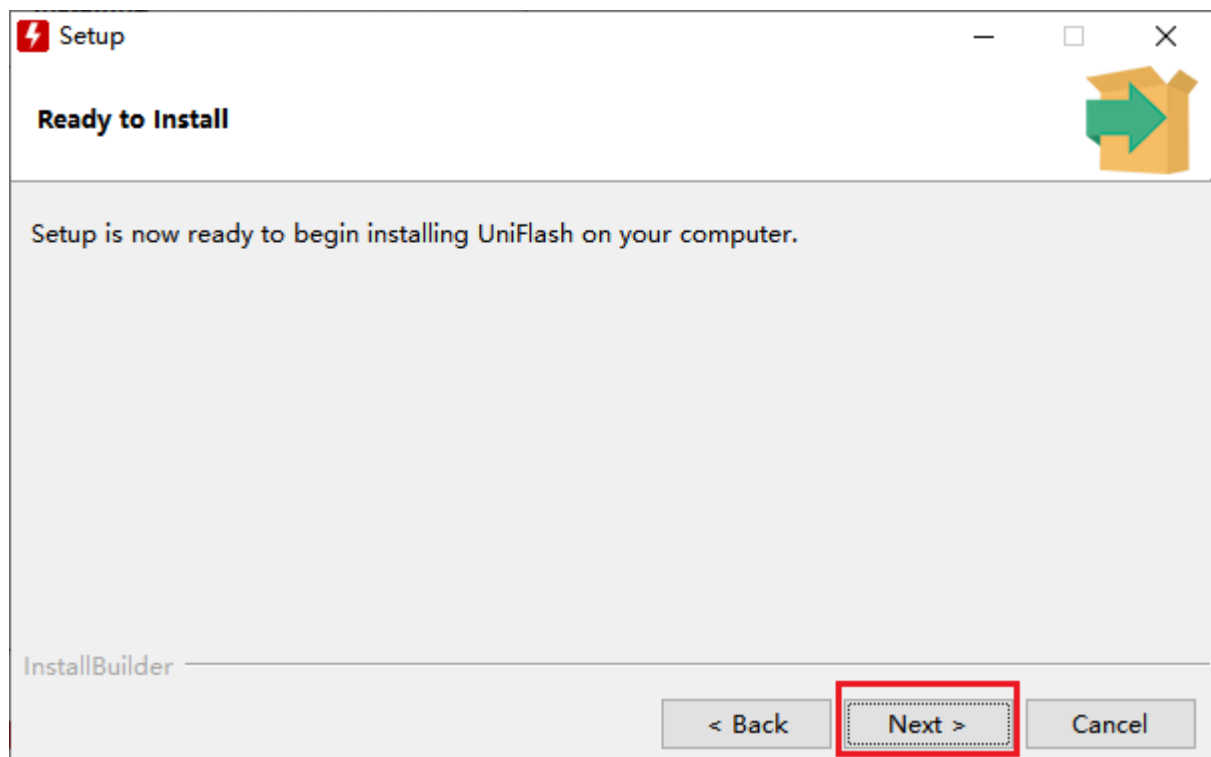

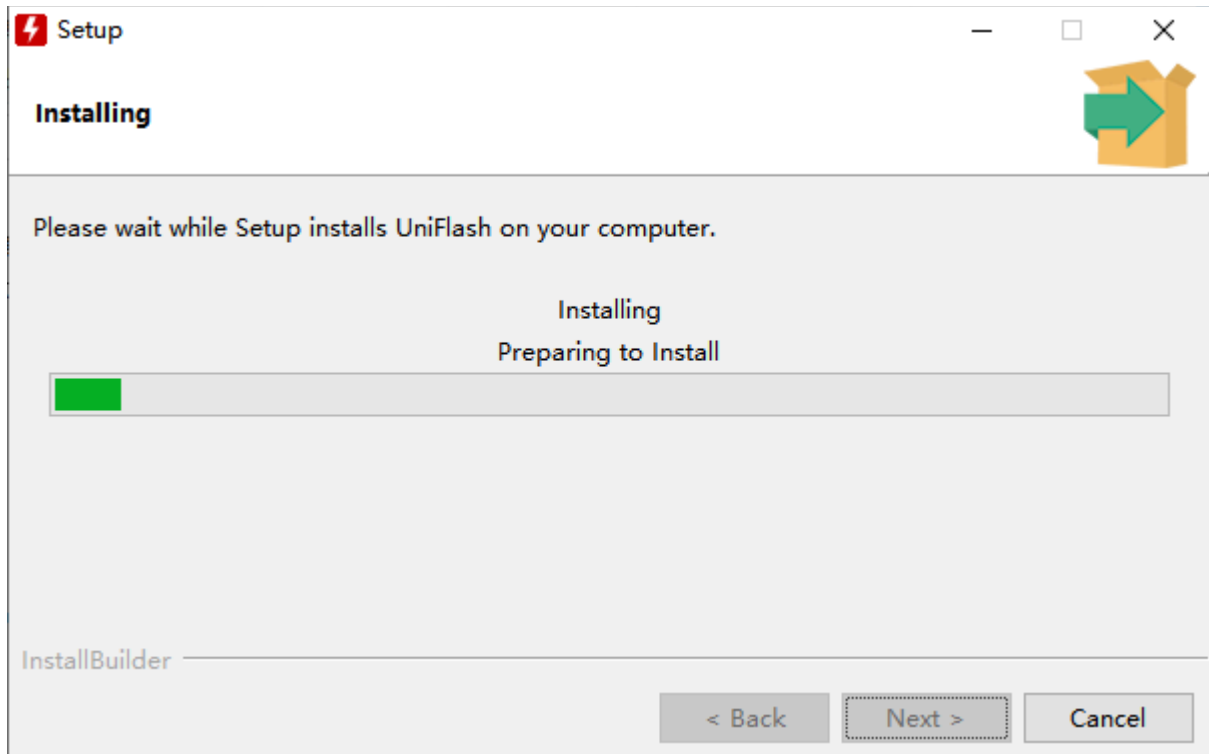


- Select to create desktop shortcut. Installation complete.

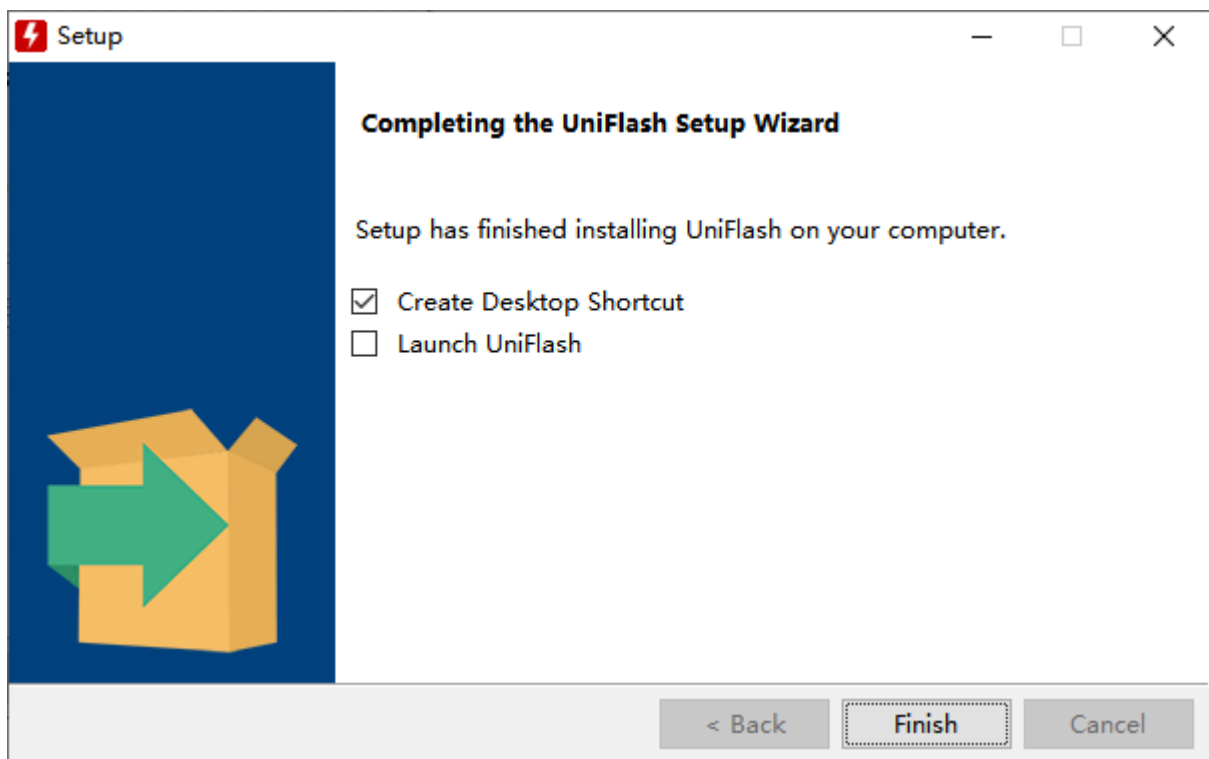


3. Install CH340 Serial Driver

CH340 driver download address: [CH341SER.ZIP - Nanjing Qinheng Microelectronics Co., Ltd.](#)


The serial driver installation steps are relatively simple. Just double-click `SETUP.EXE` in the installation package and click "Install".

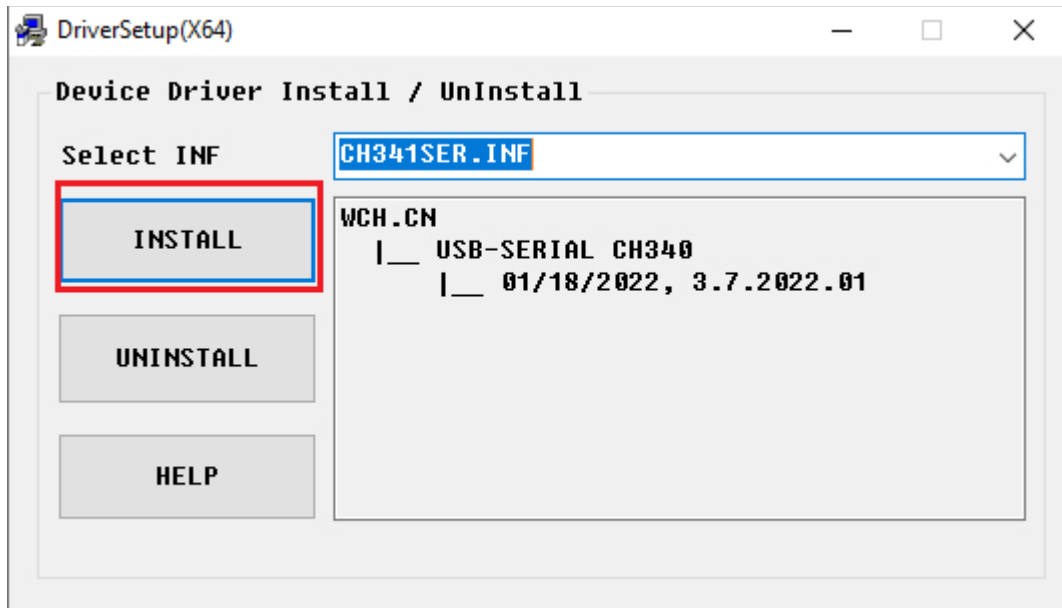

As shown in the figure below, the installation was successful.

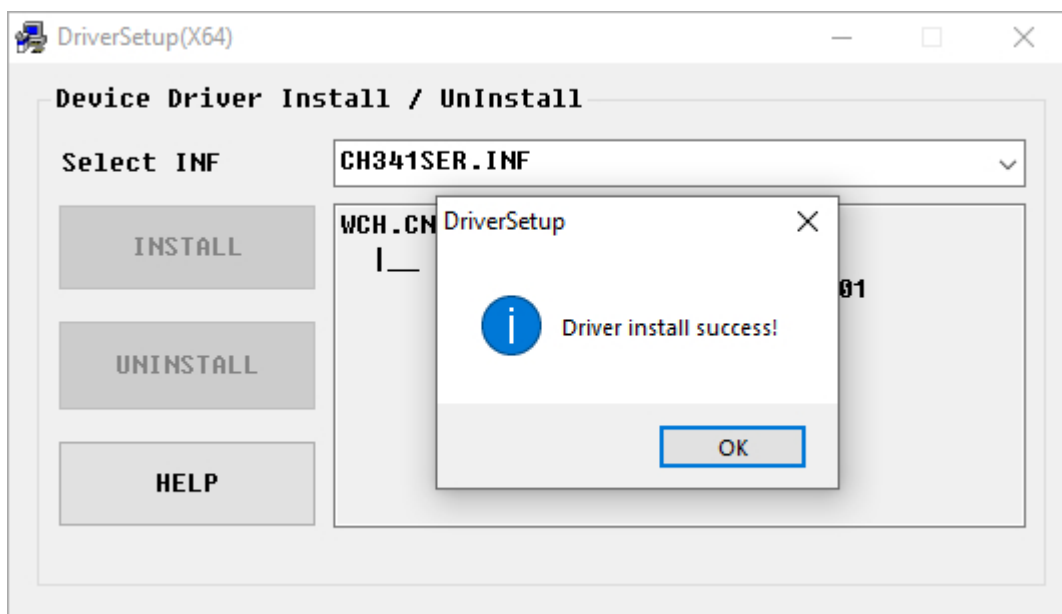


Turn on the power, connect the MSPM0 motherboard to the computer via USB. Open Device Manager. There should be a port showing CH340 (COMX, X is the port number).

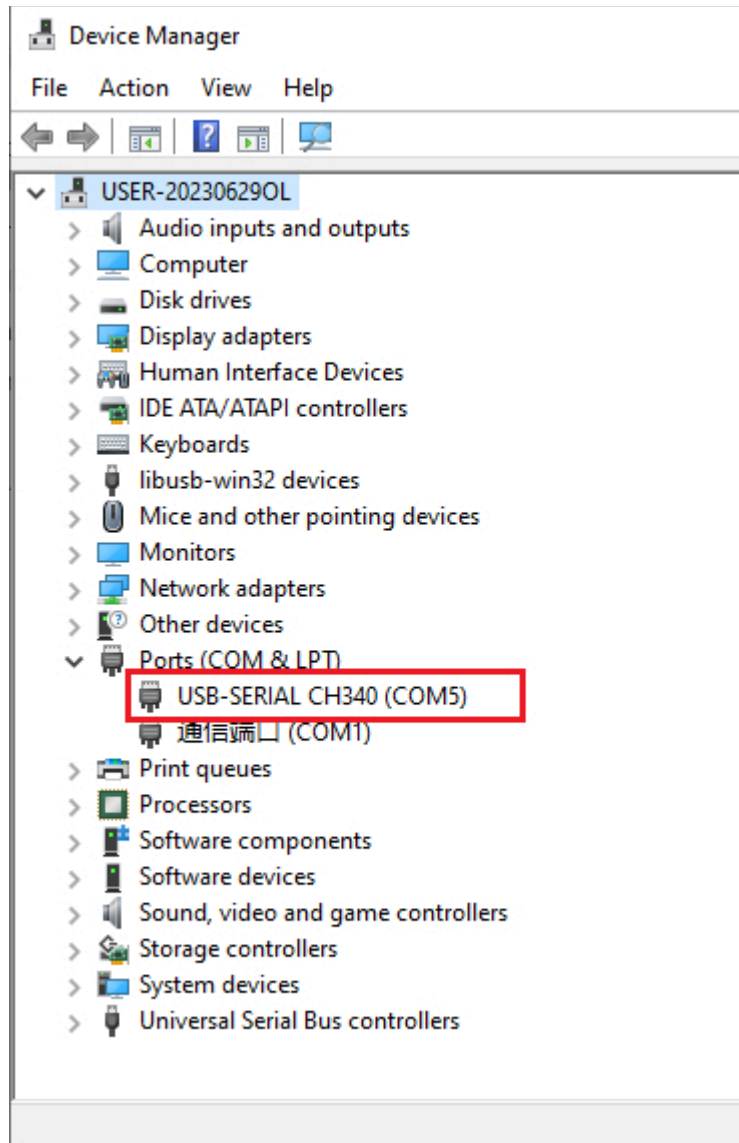


4. Open UniFlash and Set Parameters


Double-click UniFlash 8.8.1 to open.

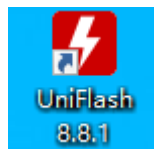

In the **New Configuration** search box, search for MSPM0G3507 and select the MSPM0G3507 that supports serial download.

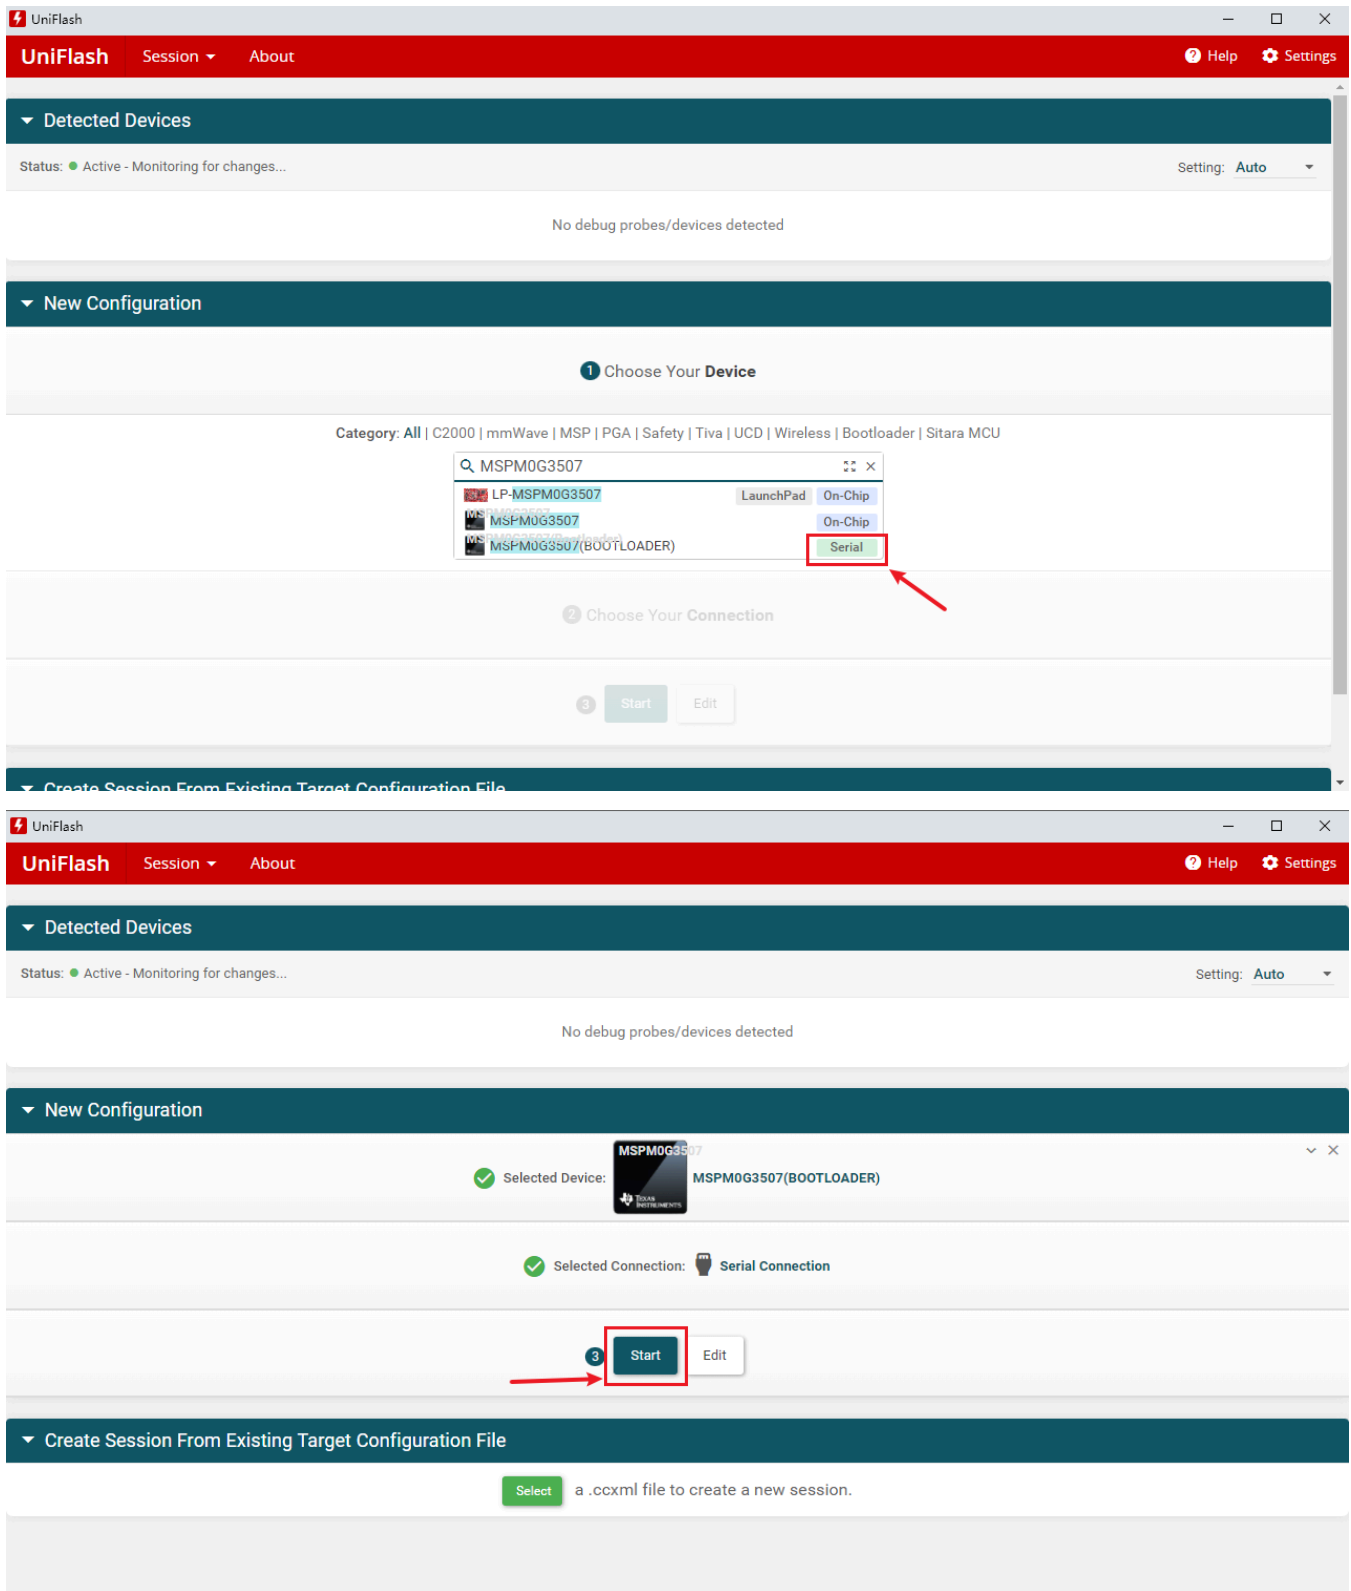

Simply use a TYPE-C data cable to connect to the TYPE-C interface on the development board.

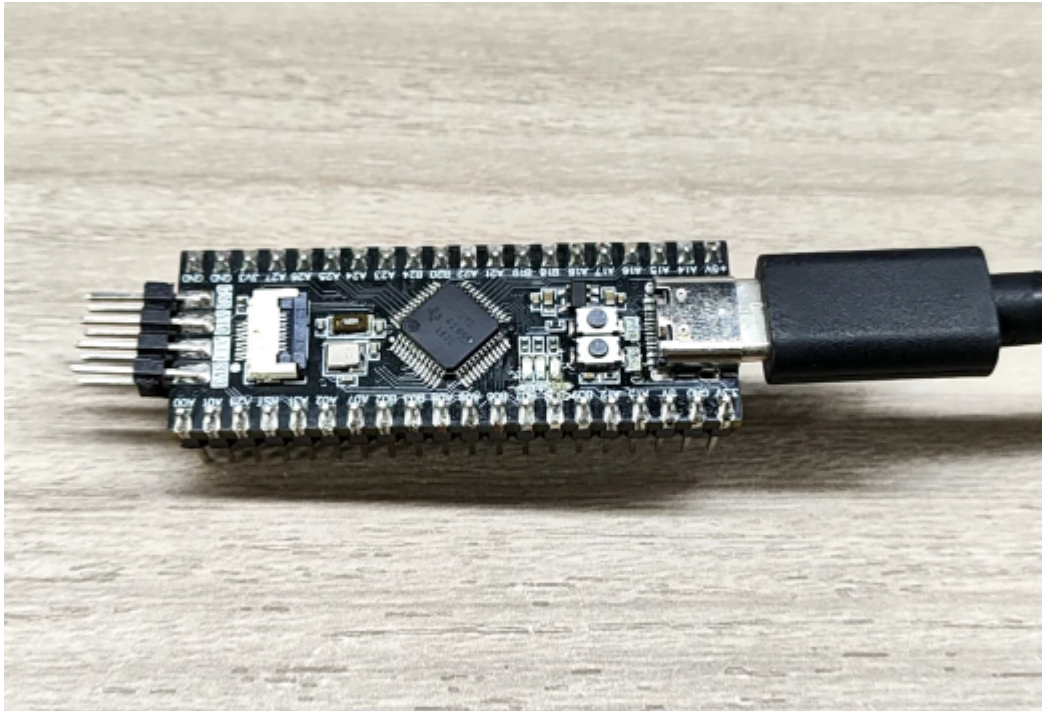

In the **Program** section, select the binary file generated by the code. It supports .hex and .bin files. Manually enter the serial port number of the device and select baud rate **9600**.

UniFlash Session ▾ About Help Settings

Configured Device : Serial Connection > MSPM0G3507(BOOTLOADER) [\[download ccxml\]](#) CORTEX_M0P

Program
Settings & Utilities
Standalone Command Line

Select and Load Images

Flash Image(s)

☐ Password

Browse

☐ Application Image 1

Browse

☐ Application Image 2

Browse

☐ Application Image 3

Browse

Available Action(s)

Load Image

Quick Settings | Remove All

Note: Example - COM1 (Windows), /dev/ttyACM0 (Linux), /dev/tty.usbmodem1411 (OS X)

COM Port: **COM10**

Note: Only UART Communication Support is available. Communication bridge for UART is only supported by XDS Application UART or XDS 110 Probe

UART Speed:


☐ 4800

☒ 9600

☐ 19200


☐ 38400

In the **Settings & utilities** section's erase settings, select **Erase main memory only**.

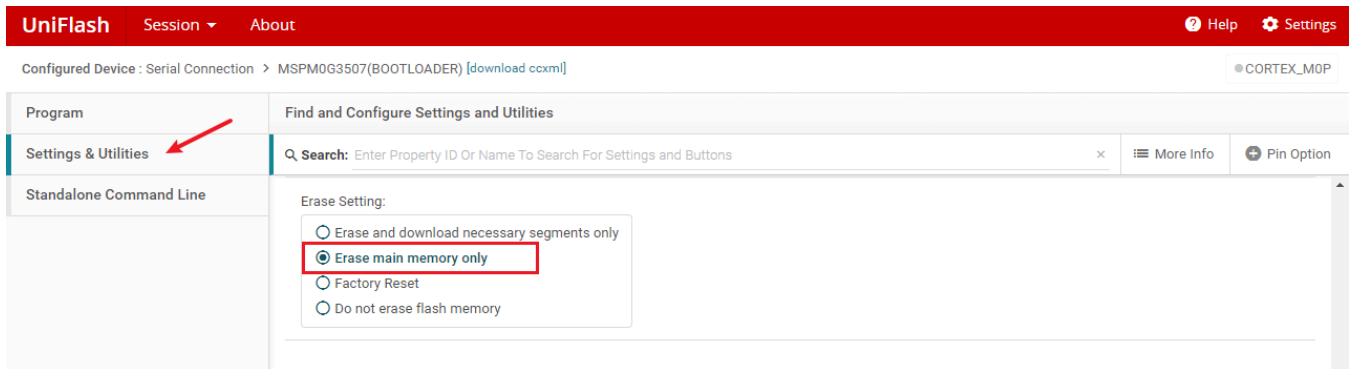


5. Flash Program

After connecting the development board to the computer, press and hold the BSL button (PA18 button), then press the RST button for about 1 second and release it, then release the BSL button. This enters download mode.

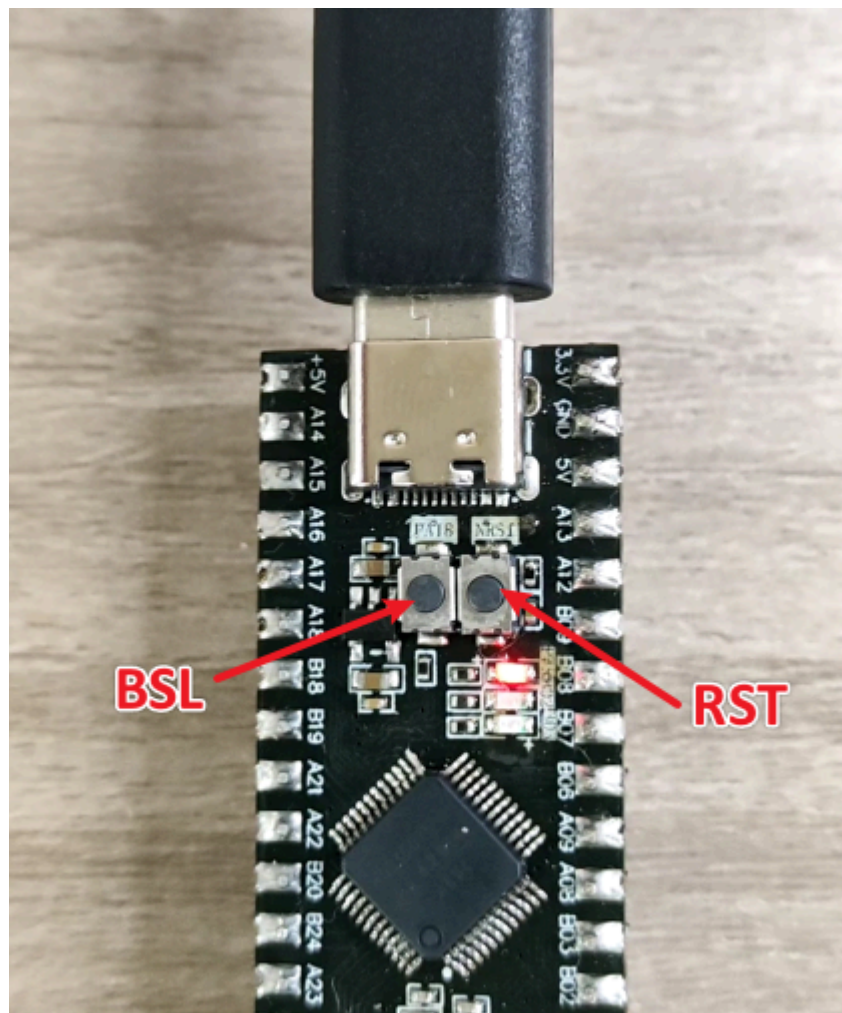


After entering download mode, click Load image to download.

Note: The download must be completed within 10 seconds after the development board enters download mode; otherwise, the download will fail.

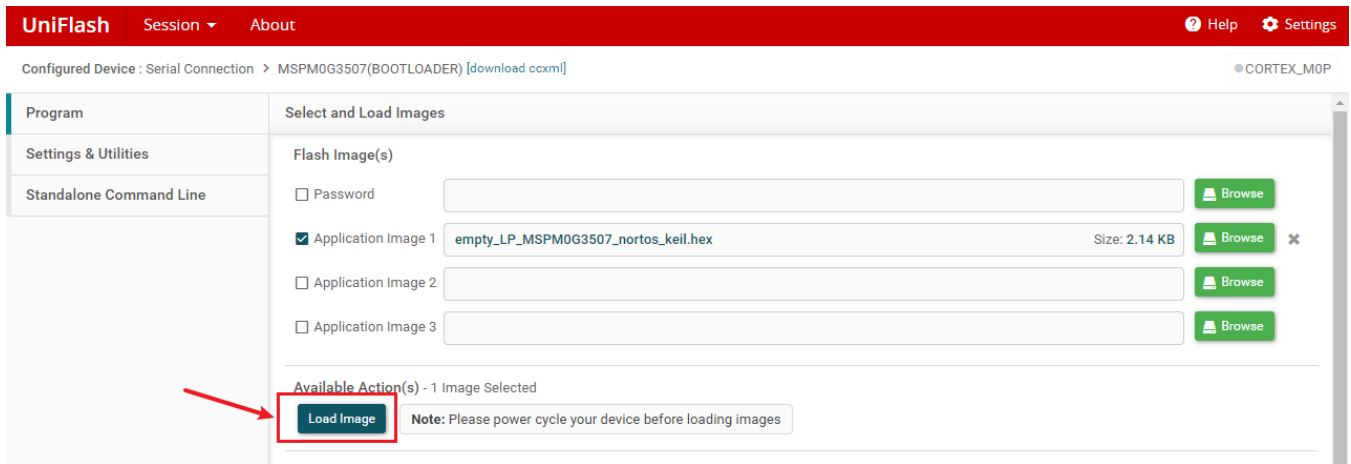


When the same error message as shown in the figure below appears: Image loading failed: Try manual Bootloader invocation..., it has actually been downloaded successfully. This is a bug in the download software.

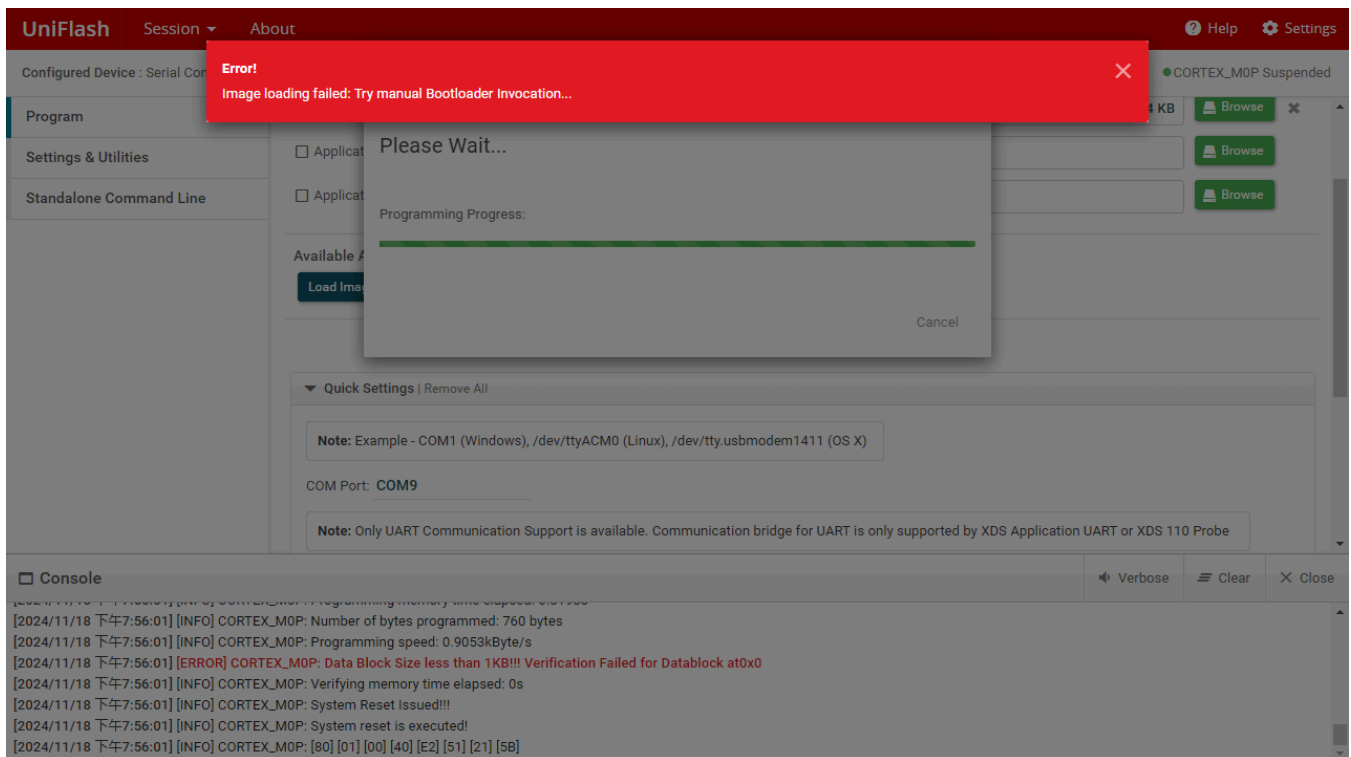


6. Common Problems

1. Download error: Image loading failed: Try manual Bootloader invocation...

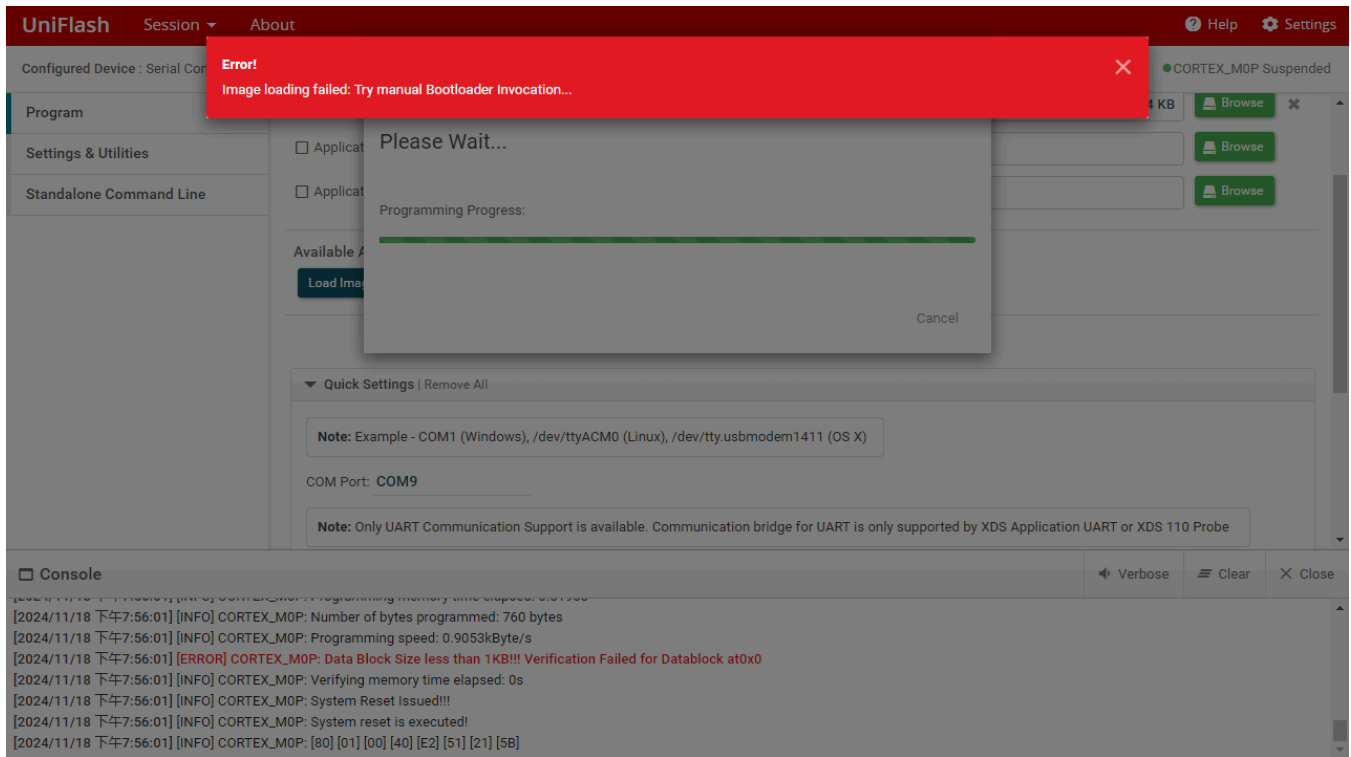


Answer: This is a bug in the download software. It has actually been downloaded.

2. Download error: Image loading failed: Flash Generic, Loading Images... Error: -9

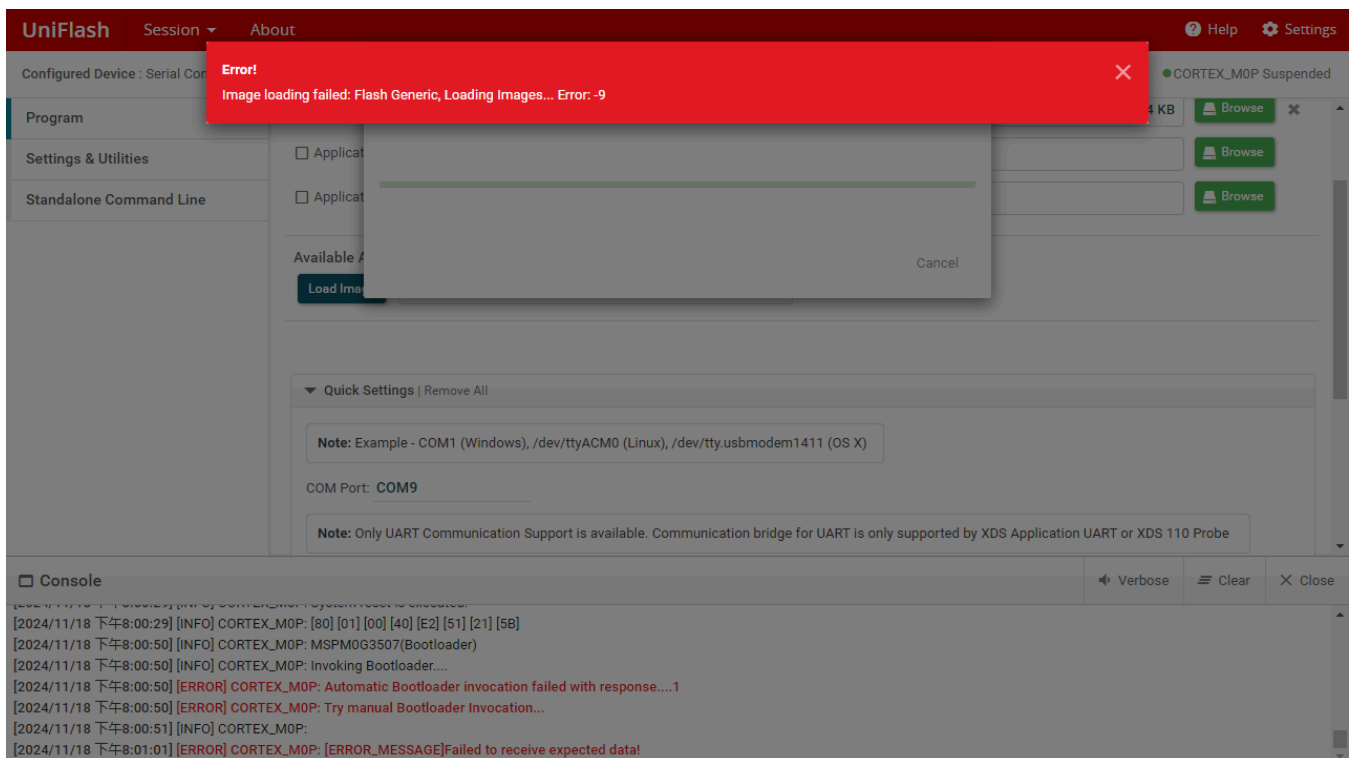


Answer: The chip has not entered download mode. Keep holding the BSL (PA18) button, then press the RST button for about 1 second and release, then release the BSL (PA18) button. This should enter download mode.


3. Download error: Image loading failed: Flash Generic, Loading Images... Error: -6

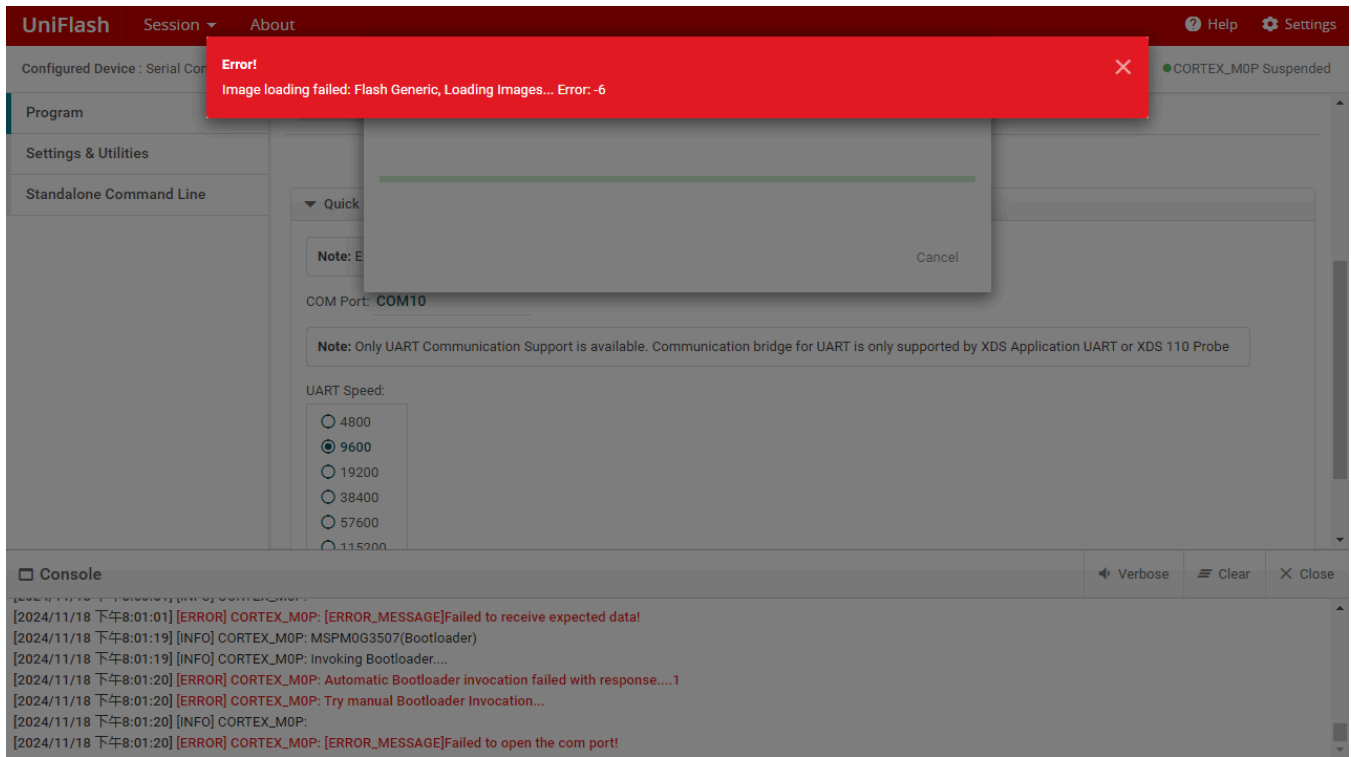

Answer: The wrong download port is selected or the port is occupied. You can check the current port number of MSPM0 in Device Manager, then manually enter it in the **COM Port** field.

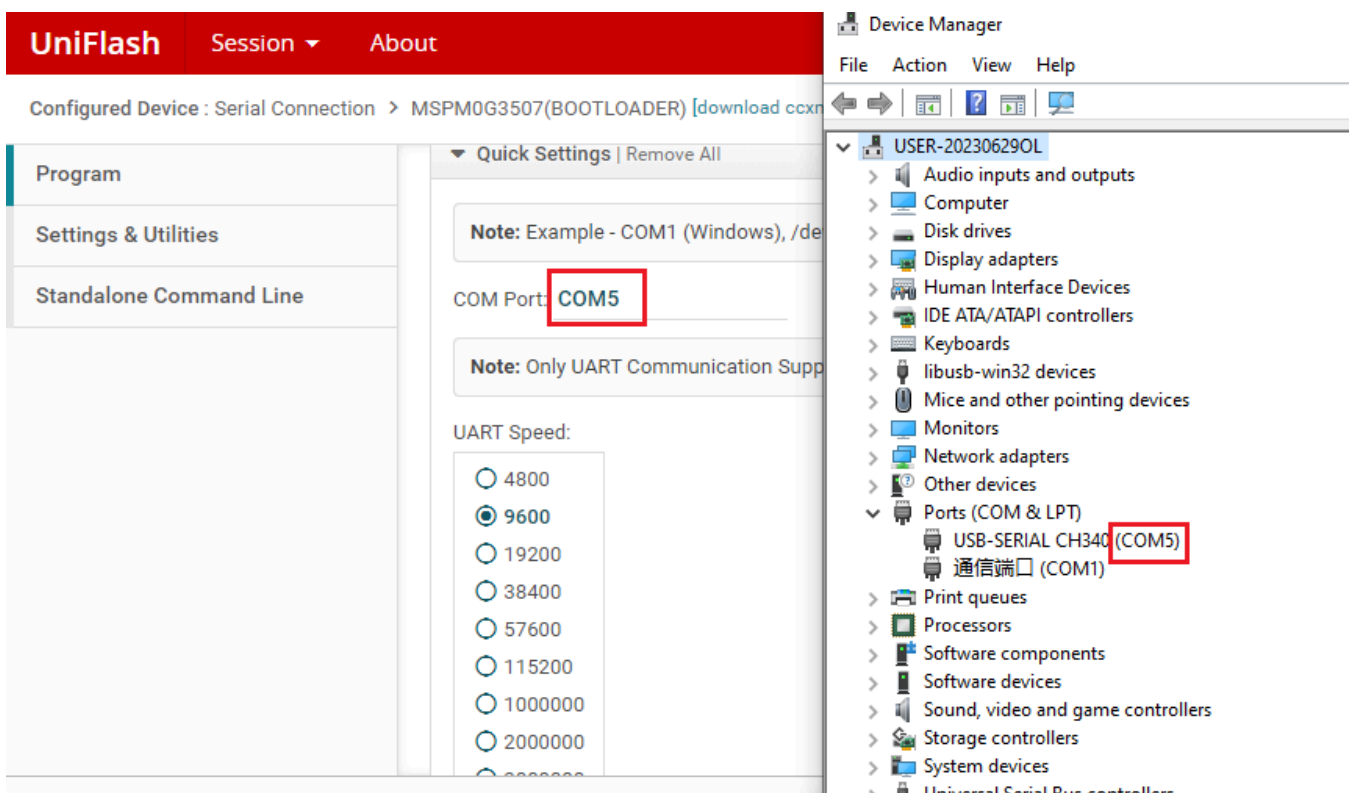


4. Download error: Image loading failed: Flash Generic, Loading Images... Error. -3

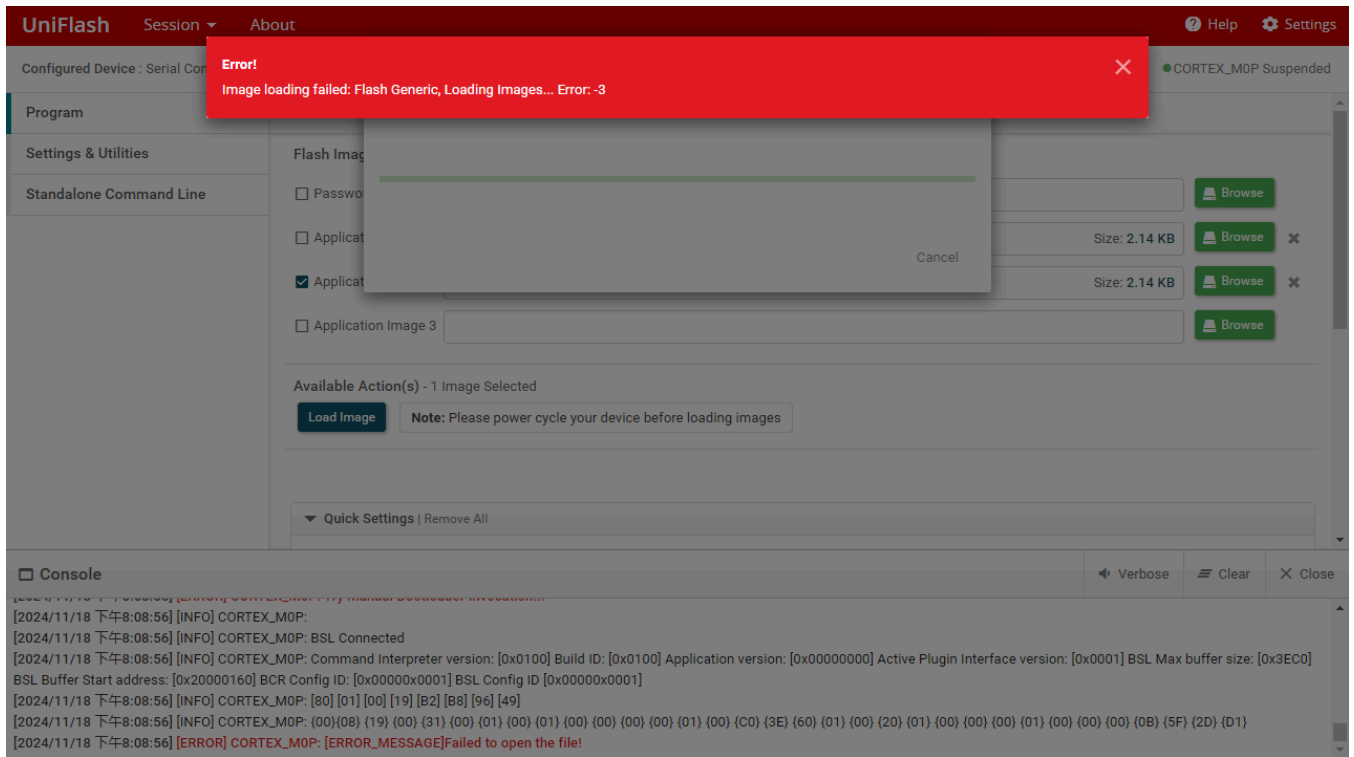

Answer: The program being flashed cannot be in a Chinese path. It must be placed in an English path.

5. Download error: Image loading failed: Flash Generic, Loading Images... Error. -1

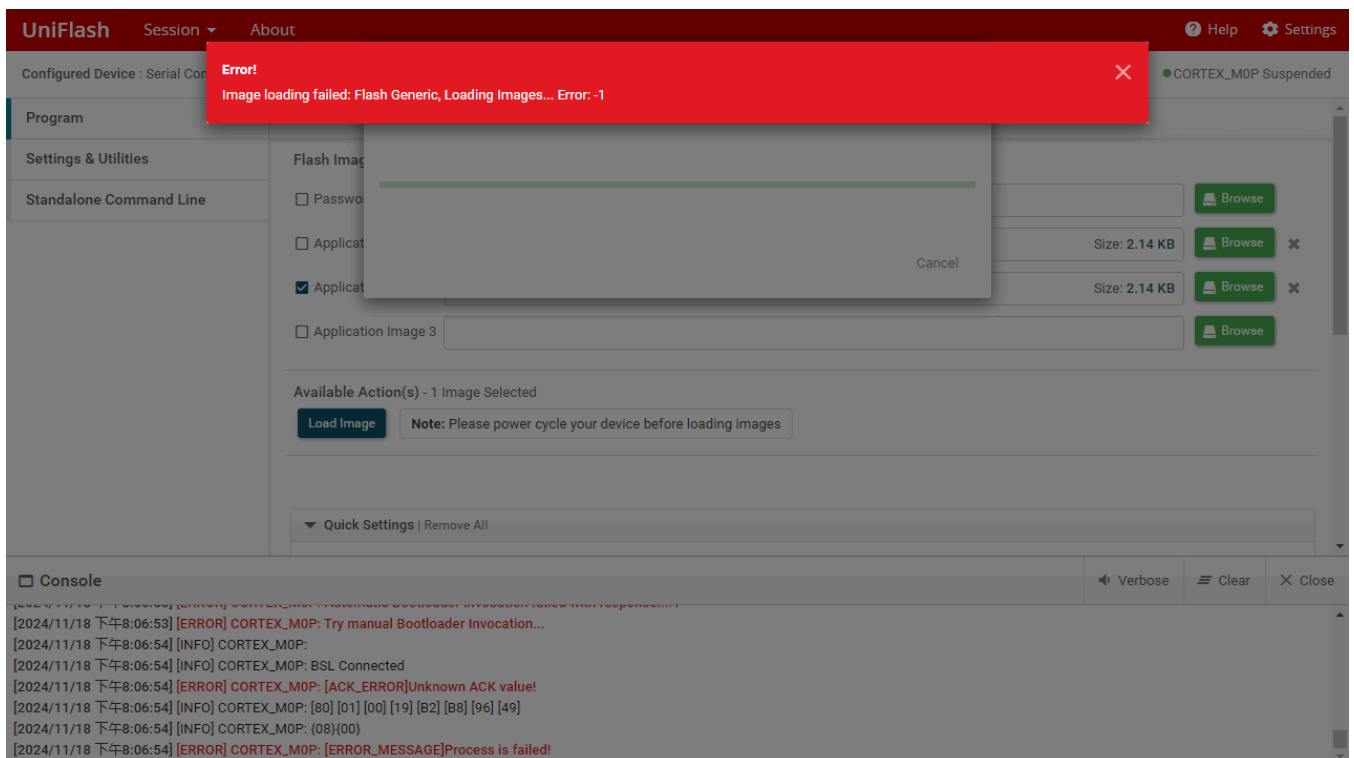

Answer: An occasional event. Just flash again.