

Flashing Firmware with esp-flash-tool

Flashing Firmware with esp-flash-tool

1. Downloading the Flash Tool
2. Configuring the Flashing Tool
3. Starting the Firmware Flashing
4. Flashing Completed

1. Downloading the Flash Tool

Download URL:


<https://www.espressif.com.cn/zh-hans/support/download/other-tools>

Flash Download Tools

Please refer to Flash Download Tool User Guide to download this tool.

Title	Platform	Version	Release Date ▾	Download
+ Flash Download Tools	HTML	latest	2024.12.18	

After extracting, you get flash_download_tool. Double-click to open it. Select serial flashing for the ESP32-S3. Click OK to open the flashing tool.

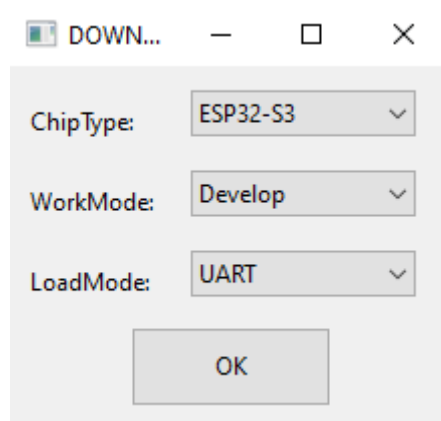

2. Configuring the Flashing Tool

Copy the compiled bin files from the project (taking the main project as an example) to the bin folder in the flash-download-tool directory.


bin file paths:

```
build/bootloader/bootloader.bin
build/partition_table/partition-table.bin
build/main.bin
```

ackup (G:) > ESP32 > flash_download_tool_3.9.5 > bin		
名称	修改日期	类型
bootloader.bin	2024/1/8 11:36	BIN 文件
main.bin	2024/1/8 11:36	BIN 文件
partition-table.bin	2024/1/8 11:36	BIN 文件

In 'SPIDownload', select the firmware to be flashed to the ESP32S3. The correspondence between files and addresses is shown in the table below. Then select the connected COM port. Keep all other configurations at their defaults.


Firmware name	Firmware address	Notes
bootloader.bin	0x0000	Bootloader file
partition-table.bin	0x8000	Partition table file
main.bin	0x10000	Application file

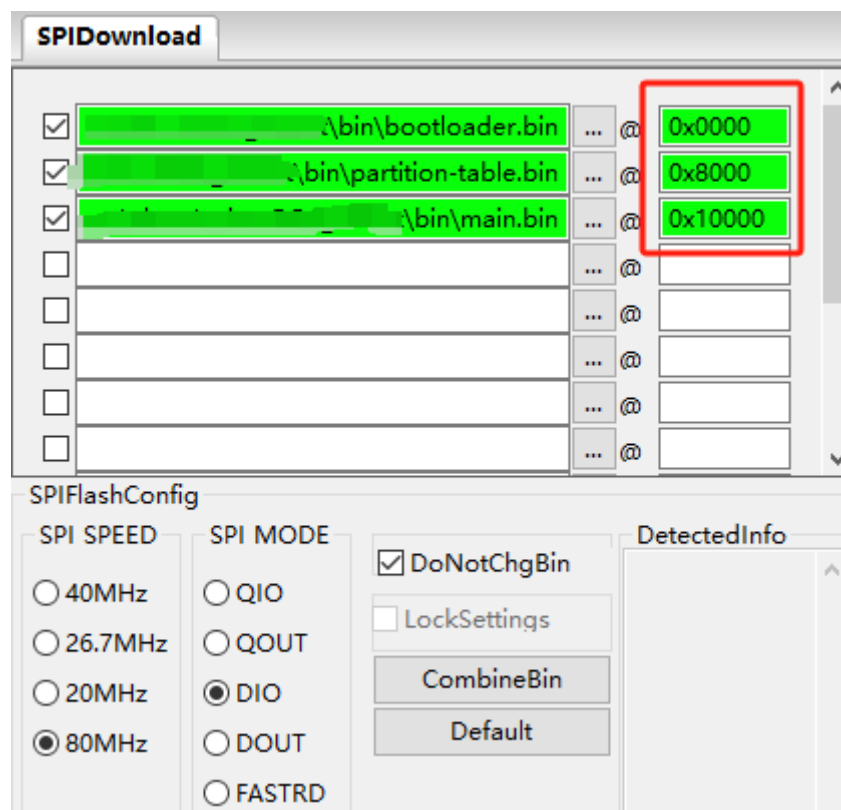

3. Starting the Firmware Flashing

Click the Start button, and the tool will automatically begin flashing the firmware.

Note: If the firmware flashing does not start automatically, first press and hold the boot0 key, then press the reset key, and then release the boot0 key to manually enter flashing mode.

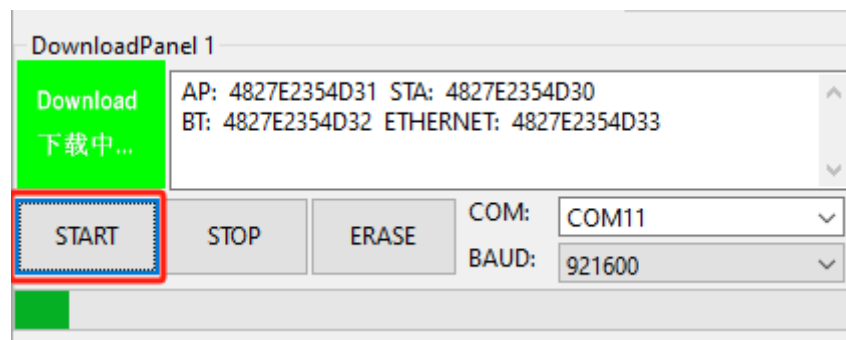

4. Flashing Completed

After the download is complete, a blue FINISH indicator is displayed. At this point, power off and restart the microcontroller, or press the reset key once to start the program.

