

Web Host Computer Remote Control

Web Host Computer Remote Control

1. Preparation Before Running
2. Run the Web Host Computer Program
3. Web Host Computer Function Introduction

1. Preparation Before Running


Please confirm that the computer and the robot are connected to the same local area network. Open a computer browser, enter the robot's IP address:port 8888 in the address bar to open the Jupyter Lab webpage.

Enter Jupyter Lab password: yahboom

Find the file path and double-click to open: muto/Samples/Control/11.Robot_Control.ipynb

2. Run the Web Host Computer Program

Click the run button on the webpage.

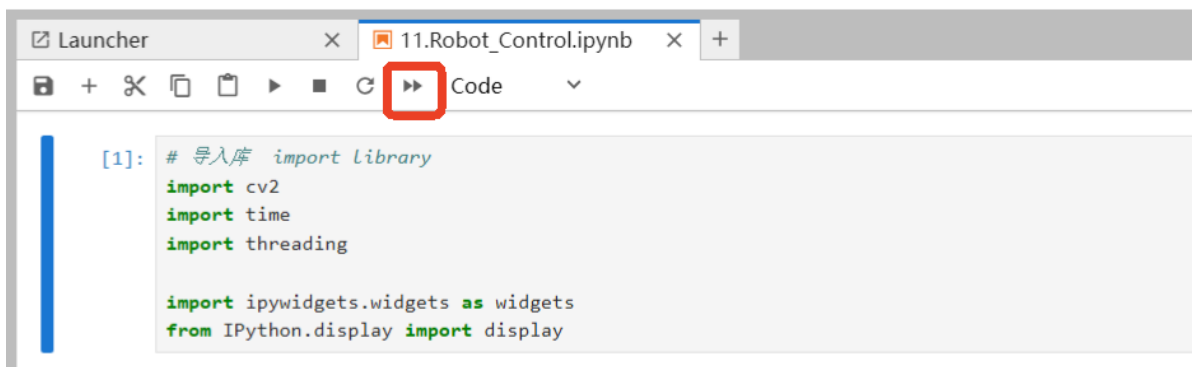

Click Restart on the pop-up prompt.


Restart Kernel?

Do you want to restart the current kernel? All variables will be lost.


Cancel

Restart

Then scroll down to the bottom to see the generated controls.

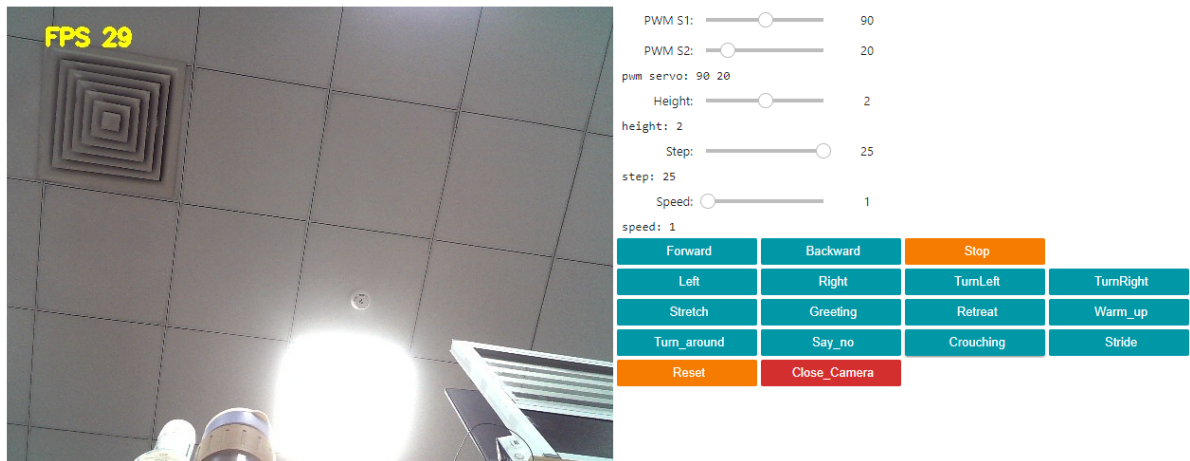

3. Web Host Computer Function Introduction

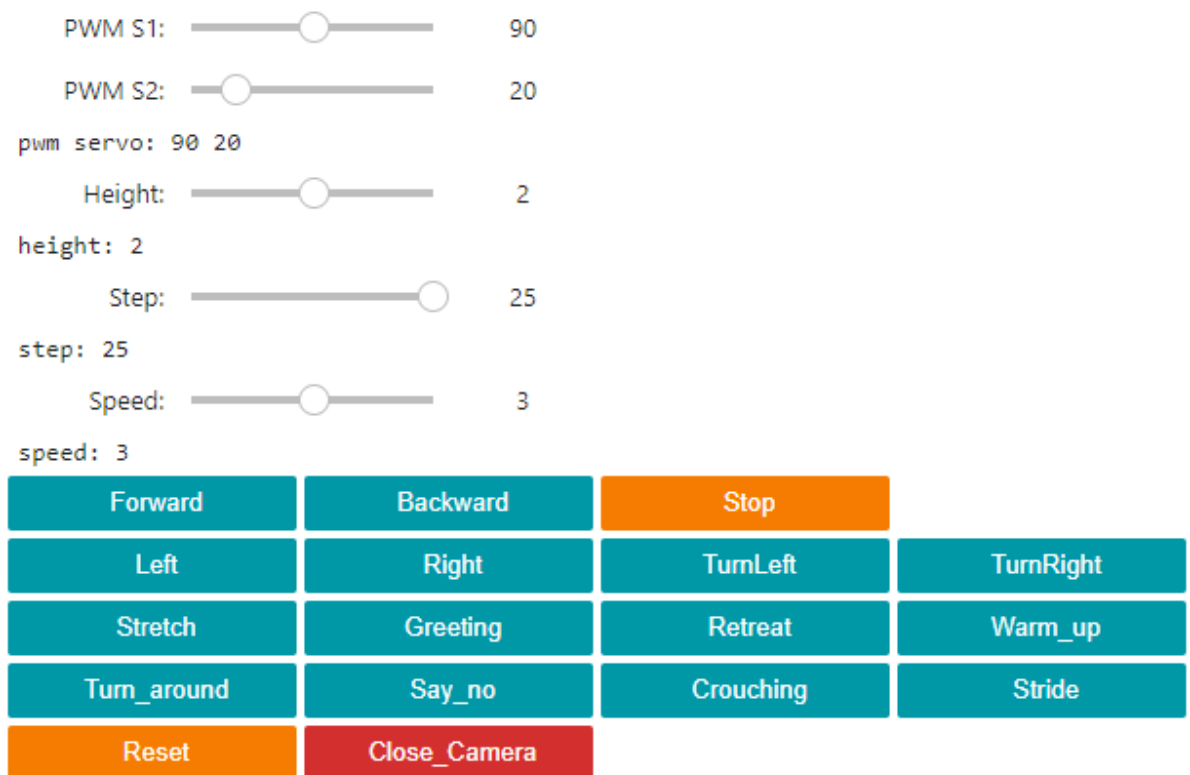

Sliders:

PWM S1, PWM S2: Controls the angle of the robot's PWM servo gimbal. (The RS version does not have a PWM servo gimbal, please ignore)

Height: Controls the robot's height.

Step: Controls the robot's step width.

Speed: Controls the robot's foot speed.

Buttons:

Forward: Controls the robot to move forward.

Backward: Controls the robot to move backward.

Stop: Controls the robot to stop.

Left: Controls the robot to move left.

Right: Controls the robot to move right.

TurnLeft: Controls the robot to turn left.

TurnRight: Controls the robot to turn right.

Stretch: Controls the robot to perform a stretching action.

Greeting: Controls the robot to perform a greeting action.

Retreat: Controls the robot to perform a fearful retreat action.

Warm_up: Controls the robot to perform a warm-up squat action.

Turn_around: Controls the robot to perform a turn-in-place action.

Say_no: Controls the robot to perform a wave-hand-say-no action.

Crouching: Controls the robot to perform a crouching action.

Stride: Controls the robot to perform a long stride forward action.

Reset: Stops the robot and restores it to the default position.

Close_Camera: Closes the camera thread. To prevent the program from occupying camera resources and causing other programs to fail, please close the camera thread in time when this program is not needed.