


3. Download the example program and start the system automatically


1. Download the example program

Looking at the pin diagram of Pico 2/Pico, we know that the control pin of the onboard LED of Pico 2/Pico is GPIO25. Here we try to control the onboard LED.

PICO2:

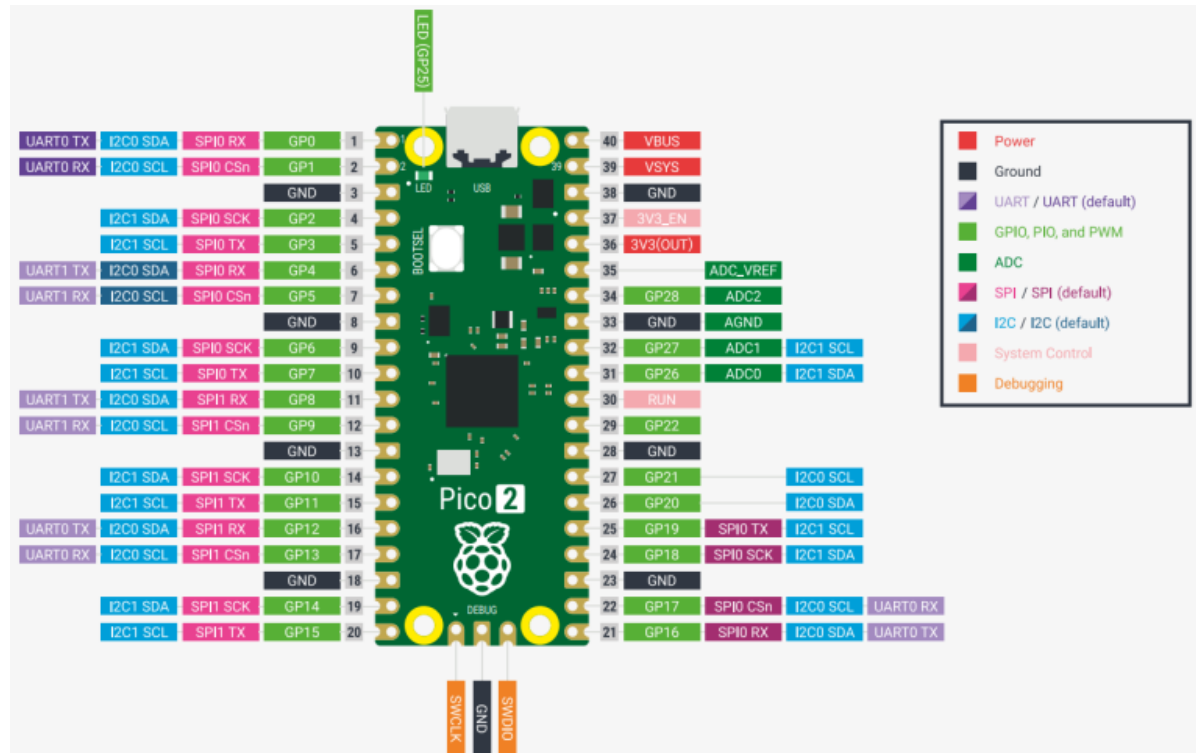

PICO:

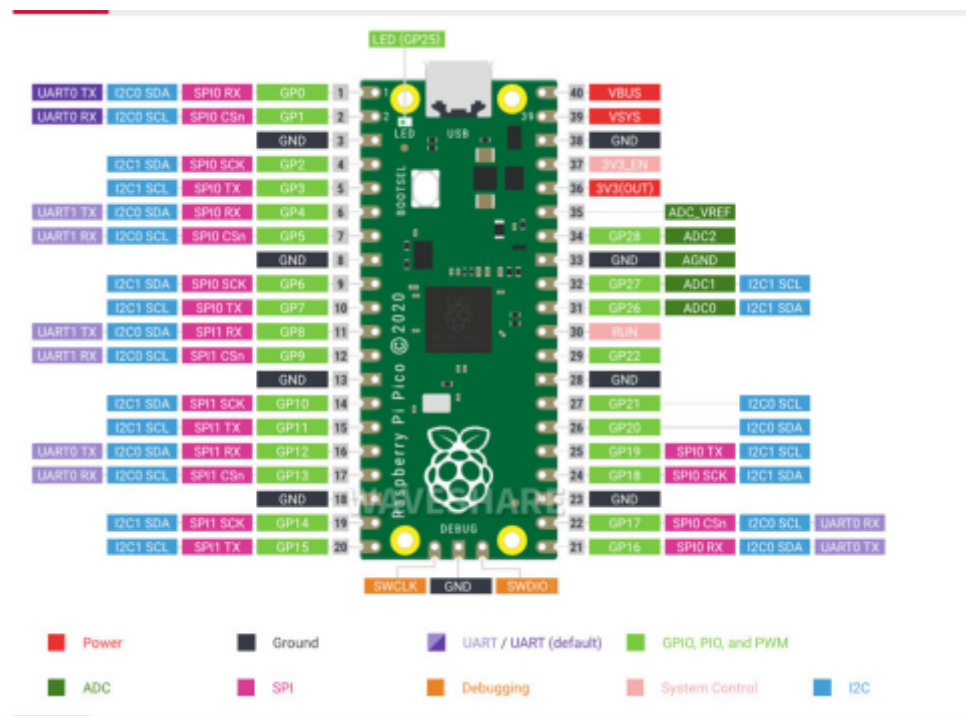



The code is as follows:

```
from machine import Pin
import utime

led = Pin(25, Pin.OUT)


while True:
    led.value(1)
    utime.sleep(.5)
    led.value(0)
    utime.sleep(.5)
```

Enter the above code in the code editing box of Thonny IDE and click Save to local file (led.py).

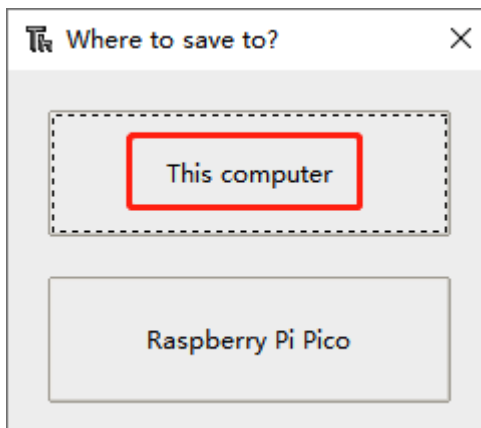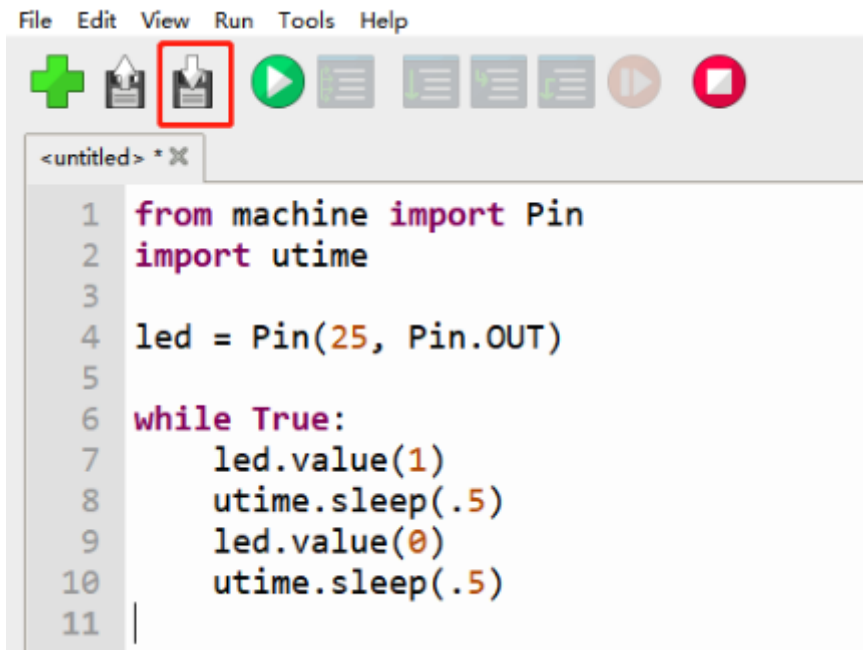

Click the green Run button to run the program.



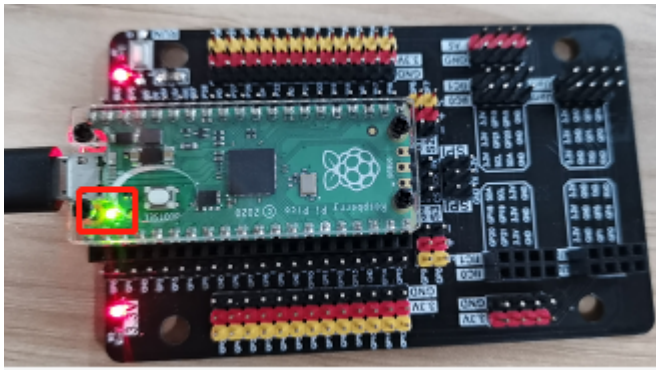


If you need to end the program or reconnect Pico 2/Pico, press the red Stop button on the right side of the button.

```
File Edit View Run Tools Help
+ [Icons] [Red Stop Button]
led.py x
1 from machine import Pin
2 import utime
3
4 led = Pin(25, Pin.OUT)
5
6 while True:
7     led.value(1)
8     utime.sleep(.5)
9     led.value(0)
10    utime.sleep(.5)
11
```


2. Set the startup auto-start

The program run by pressing the green run button above is temporary, that is, after power failure (or pressing the reset button), the program will not be saved to Pico. You need to save the program to the main.py file in Pico 2/Pico before it can run automatically after reset.

Take the example of setting the startup auto-start of the led.py (LED flashing effect) routine opened above, click [File]->[Save copy...]->[Raspberry Pi Pico], and save it as main.py.

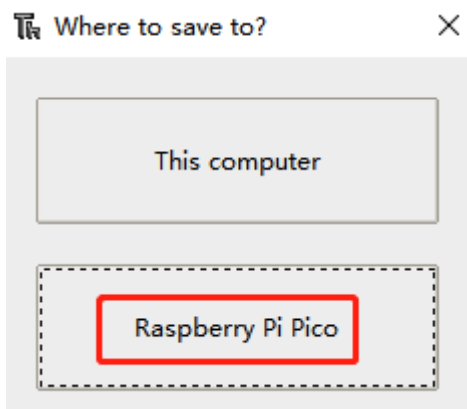

If there is already a main.py file in Pico 2/Pico, overwrite the file; if not, create it automatically.

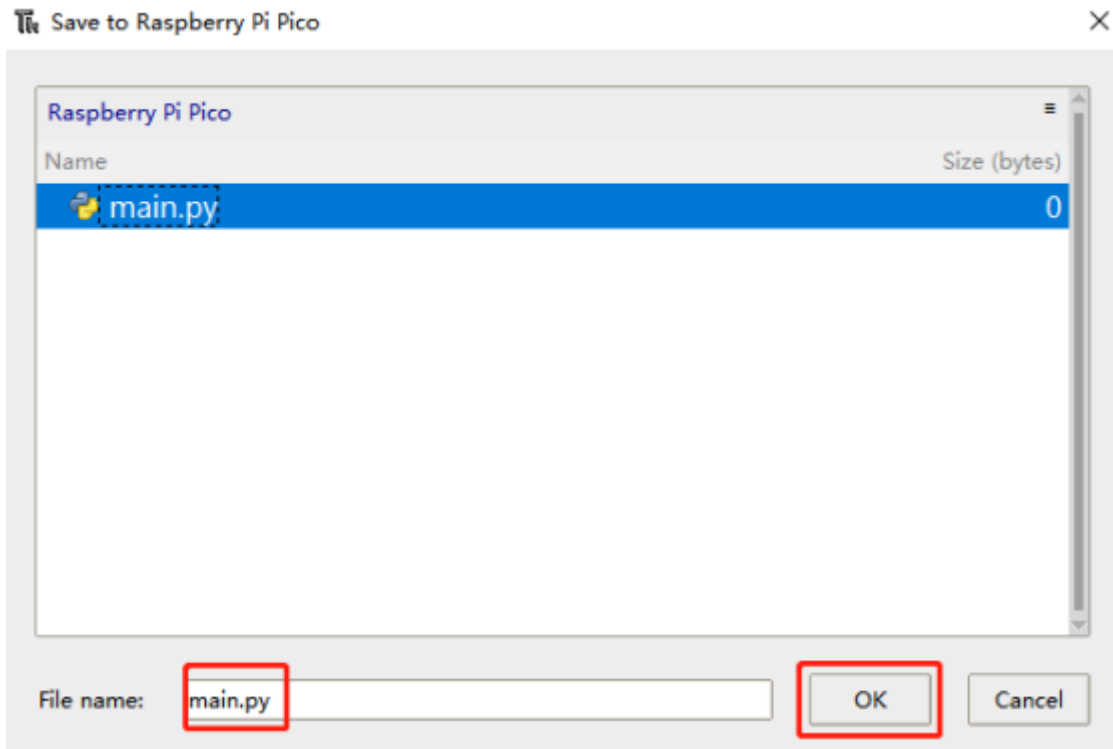

At this time, restart Pico 2/Pico to automatically run the LED flashing program.

When you don't need to run automatically, you can right-click and select [Delete] to delete the main.py file.

