


Pre-use Configuration

Note: Since the device comes pre-installed with the official RDK MagicBox voice interaction feature, which occupies the voice module, you must disable the service that starts the main program at boot when using our online large language model.

1. Disable the service that starts the main program at boot

```
sudo systemctl disable magicbox-start
```

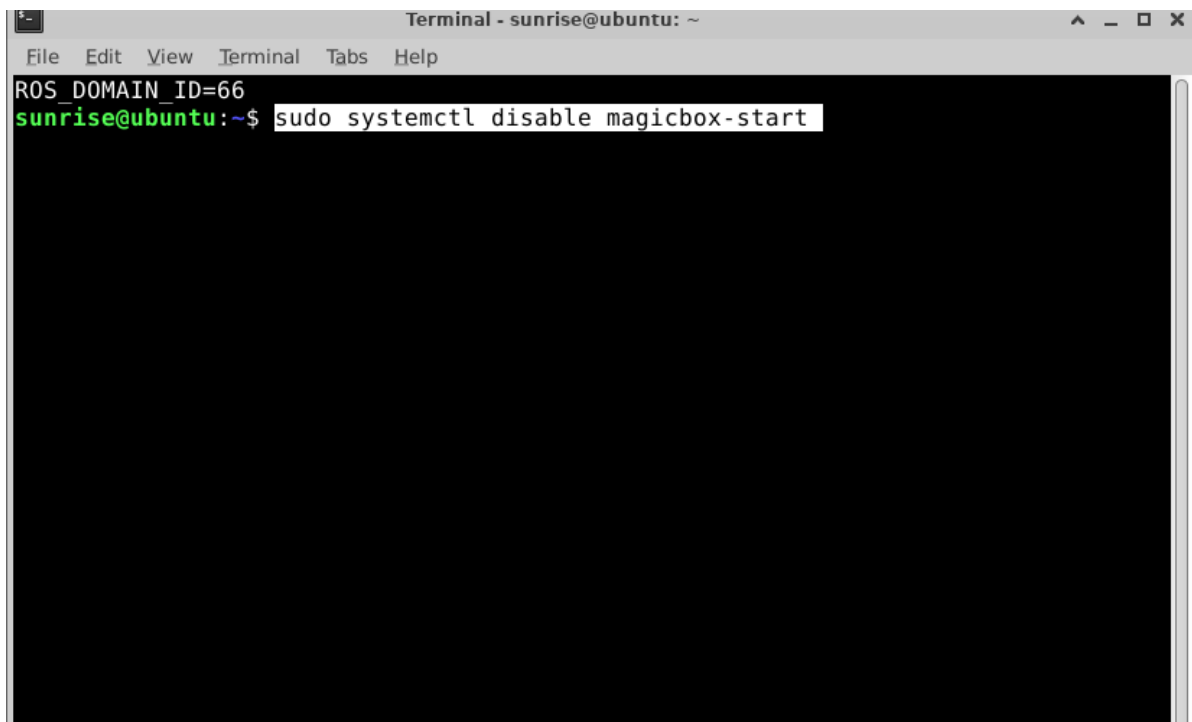

Then enter **sudo reboot** to restart the RDK MagicBox

2. Re-enable the startup service

If you need to continue using the official RDK features, you must manually re-enable the startup service. First, open the terminal on the RDK mainboard, then enter the following command:

```
sudo systemctl enable magicbox-start
```

```
Terminal - sunrise@ubuntu: ~
File Edit View Terminal Tabs Help
ROS_DOMAIN_ID=66
sunrise@ubuntu:~$ sudo systemctl enable magicbox-start
```

```
Terminal - sunrise@ubuntu: ~
File Edit View Terminal Tabs Help
ROS_DOMAIN_ID=66
sunrise@ubuntu:~$ sudo systemctl enable magicbox-start
magicbox-start.service is not a native service, redirecting to systemd-sysv-inst
all.
Executing: /lib/systemd/systemd-sysv-install enable magicbox-start
sunrise@ubuntu:~$ sudo reboot
```