


AI Large Model Online Voice Assistant

Note: Since the factory will come with RDK MagicBox official voice interaction function, you can use this to directly enable this service.

1. Boot to Start the Main Program

```
sudo systemctl enable magicbox-start
```

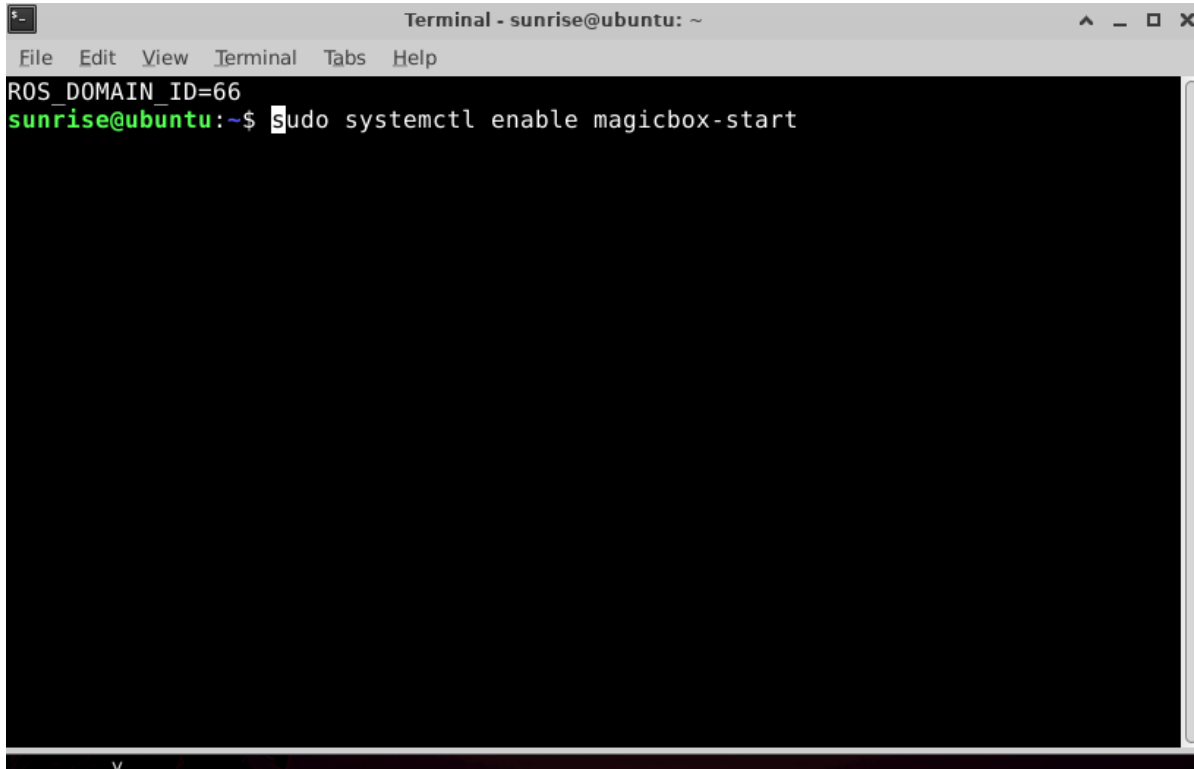

Then enter **sudo reboot** to restart the RDK MagicBox.

After enabling the official boot program, you can refer to the official voice interaction case to implement the voice assistant.

2. Disable the Boot Auto-Start Main Program

If you need to continue running our online large model, you need to manually disable the boot auto-start main program. Please open the terminal of the RDK motherboard first and enter the following command:

```
sudo systemctl disable magicbox-start
```

```
Terminal - sunrise@ubuntu: ~
File Edit View Terminal Tabs Help
ROS_DOMAIN_ID=66
sunrise@ubuntu:~$ sudo systemctl disable magicbox-start
```

Then enter **sudo reboot** to restart the RDK MagicBox.

```
Terminal - sunrise@ubuntu: ~
File Edit View Terminal Tabs Help
ROS_DOMAIN_ID=66
sunrise@ubuntu:~$ sudo systemctl enable magicbox-start
magicbox-start.service is not a native service, redirecting to systemd-sysv-inst
all.
Executing: /lib/systemd/systemd-sysv-install enable magicbox-start
sunrise@ubuntu:~$ sudo reboot
```