# OpenClaw Robotic Arm Fixed-point Placement


**OpenClaw Robotic Arm Fixed-point Placement**

1. Course Content
   - Course Overview
   - Learning Objectives
2. Preparation
3. Robotic Arm Fixed-point Placement Case Practice
   - Step 1: Issue Placement Command
   - Step 2: Generate Grid Image and Point Verification
   - Step 3: Smooth Placement and Safe Retreat
4. Core Source Code Analysis
   - 4.1 `GetPlacePoint()` — Semantic Spatial Point and Workspace Verification
   - 4.2 `place()` and `_place()` — Inverse Kinematics Solving and Smooth Release
5. Parameter Debugging
   - Key Parameter Tuning Description Table
6. Common Function Q&A and Advanced Tips
   - 6.1 What if the target point is too far and outside the robotic arm's working range?
   - 6.2 How to systematically troubleshoot when placement point is inaccurate?


# 1. Course Content

## Course Overview

In the previous lesson, the robot learned how to "pick up" objects, and in the embodied intelligence closed loop, equally critical is **"placing objects accurately"**.


In daily life and industrial sorting, we rarely throw objects randomly, but often with explicit spatial semantic instructions:

> *"Place the yellow block you just picked up in the middle of the red and blue blocks."*
> *"Put the toolbox in the empty space at the top-right corner of the table."*

This is **Semantic Precision Placement**. There are three technical cores to achieve this task:

1. **Understanding spatial relationships (semantic perception)**: The multimodal large model (VLM) needs to understand natural language spatial descriptions like "middle", "left side", "empty space", and find the most suitable target point in the camera view.
2. **Calculating spatial coordinates (3D anti-projection)**: The target pixel point on the 2D image is inversely solved through RGB-D depth to obtain the robot's 3D spatial coordinates (X, Y, Z).
3. **Reachability and inverse kinematics solution (IK solving)**: Check if the point is within the robotic arm's maximum reach; if within range, calculate each joint angle to safely deliver the block and gently release the gripper.

> **Note**
>
> **Hardware note**: This lesson's visual semantic adaptive placement function relies on depth camera's 3D point cloud ranging; if using the monocular USB camera version, the system will use fixed preset point placement.

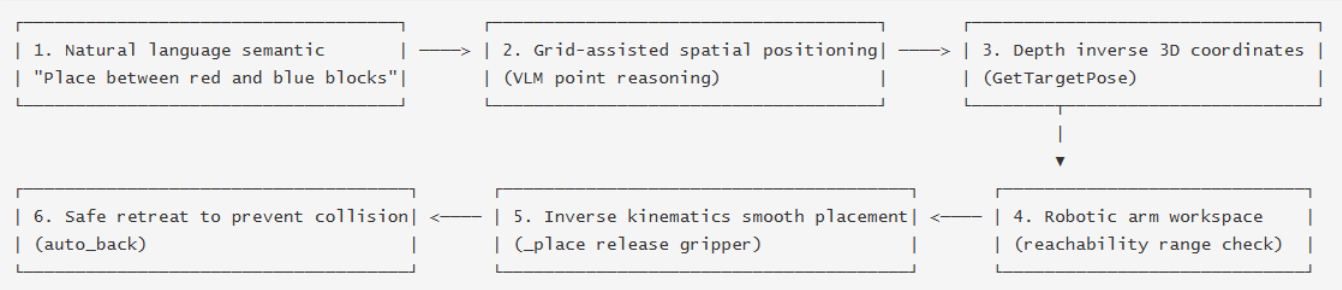


## Learning Objectives

1. Master the method of controlling the robotic arm for semantic fixed-point placement through natural language dialogue with OpenClaw.
2. Understand the principle of image overlay grid (Grid Overlay) assisting the large model for precise positioning.
3. Learn to use `GetPlacePoint` to obtain 3D coordinates of placement point and verify robotic arm workspace.
4. Master the tuning technique for placement offset `place_offset` to achieve smooth landing.

---


# 2. Preparation

- Start core nodes such as odometry, TF transformation, robotic arm assistance, camera node, and MCP service:

```
ros2 launch dofbot_pro_bringup mcp_service.launch.py
```


- If you need voice broadcast replies, you can use the command with `launch_openclaw_bridge` parameter:

```
ros2 launch dofbot_pro_bringup mcp_service.launch.py   launch_openclaw_bridge:=true
```

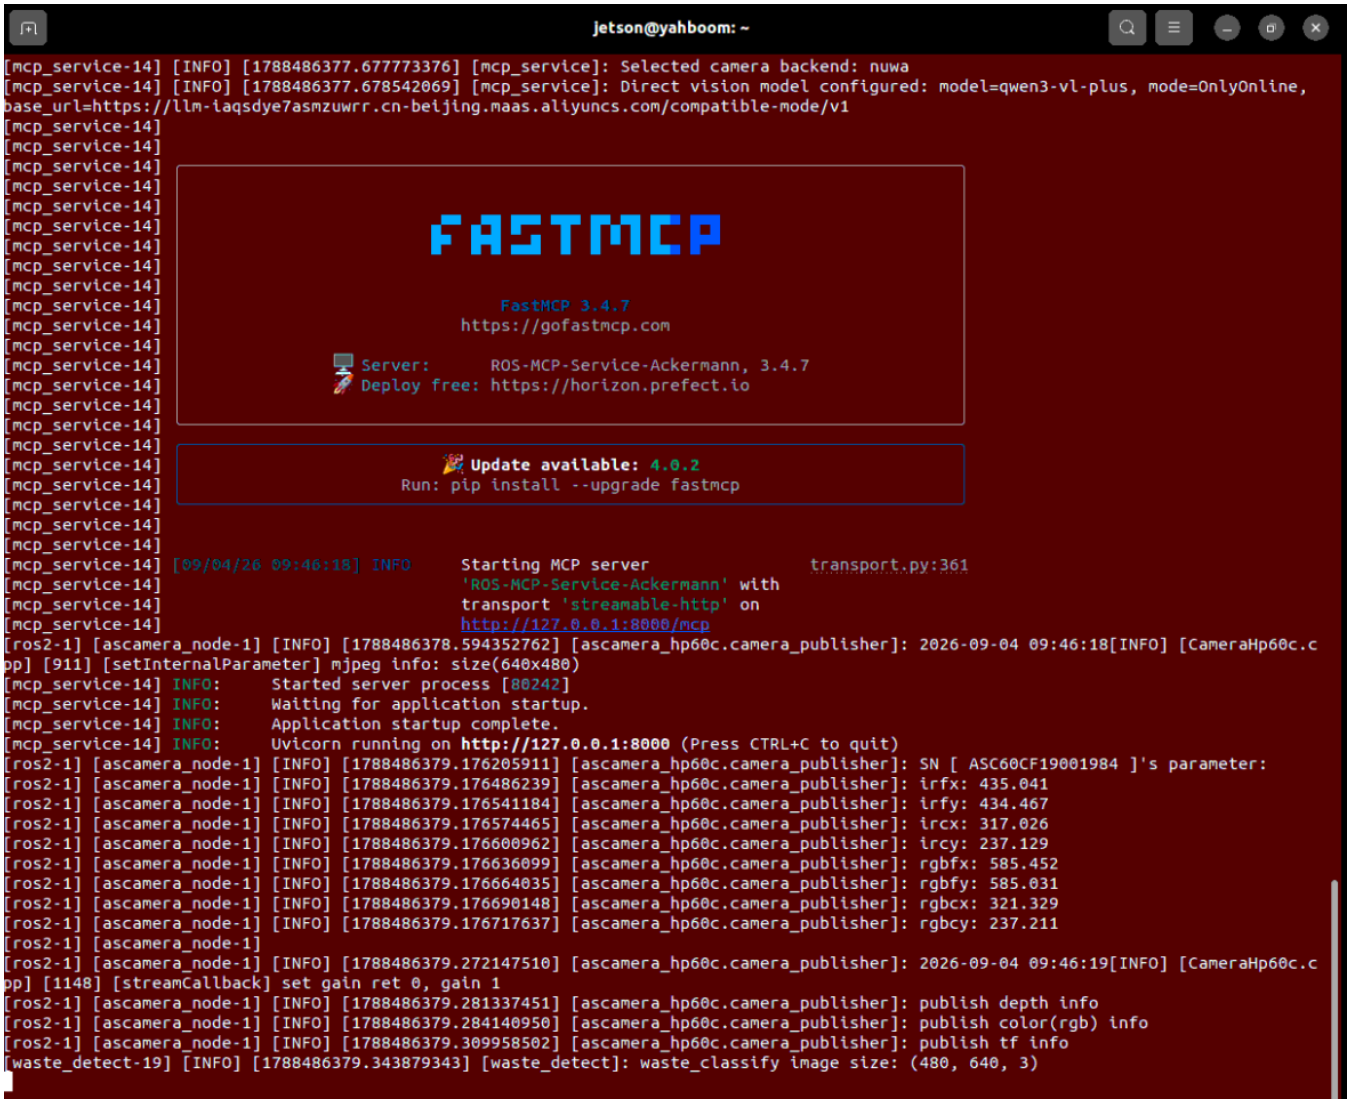



- If you need voice dialogue interaction, you can run the following command:

```
ros2 run ackermann_mcp asr_detect
```

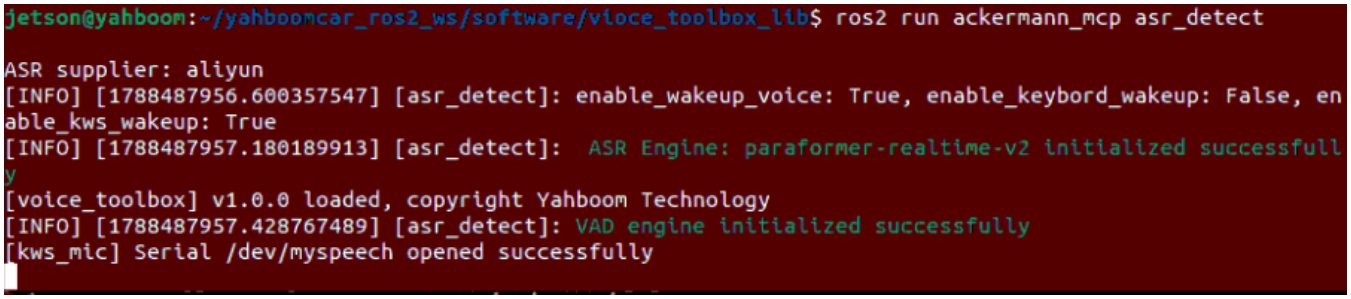


After shouting the wake-up word "**Hi, yahboom**", the indicator light turns on:

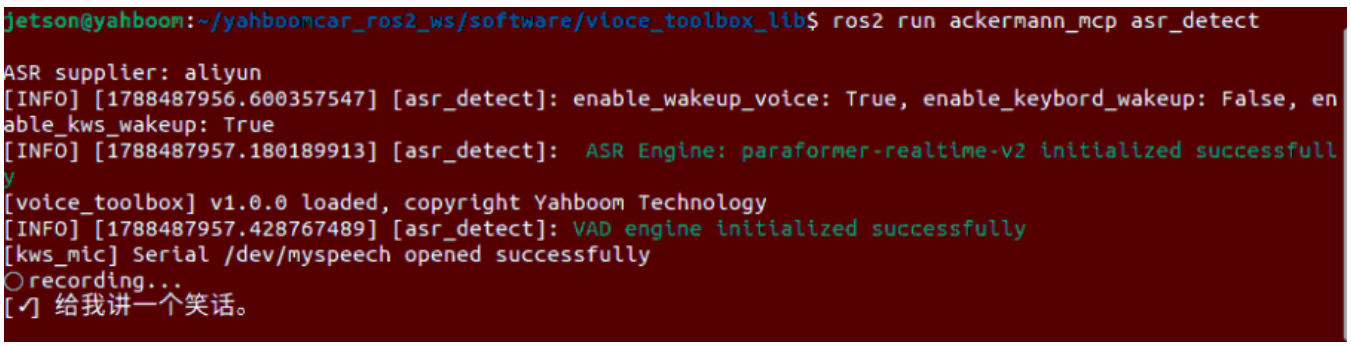

# 3. Robotic Arm Fixed-point Placement Case Practice

> **Tip**
> Instructions can be expressed naturally according to your actual needs. Here we use WebChat as an example.


Under the hood, OpenClaw translates human language and calls the following two core tools:

| Tool Name | Input Parameters | Core Function |
| --- | --- | --- |
| `GetPlacePoint` | `--query` (natural language description) | Analyze coordinates of points in the image matching the description, and check if within robotic arm workspace |
| `Place` | `--place-x`, `--place-y`, `--place-z` | Control robotic arm to precisely and smoothly place the held object at specified 3D coordinates |

## Step 1: Issue Placement Command

With the robotic arm already gripping the yellow cube, enter the placement command in the WebChat interface, for example:


> "**Place the yellow block you picked up between the red block and the blue block in front of you.**"

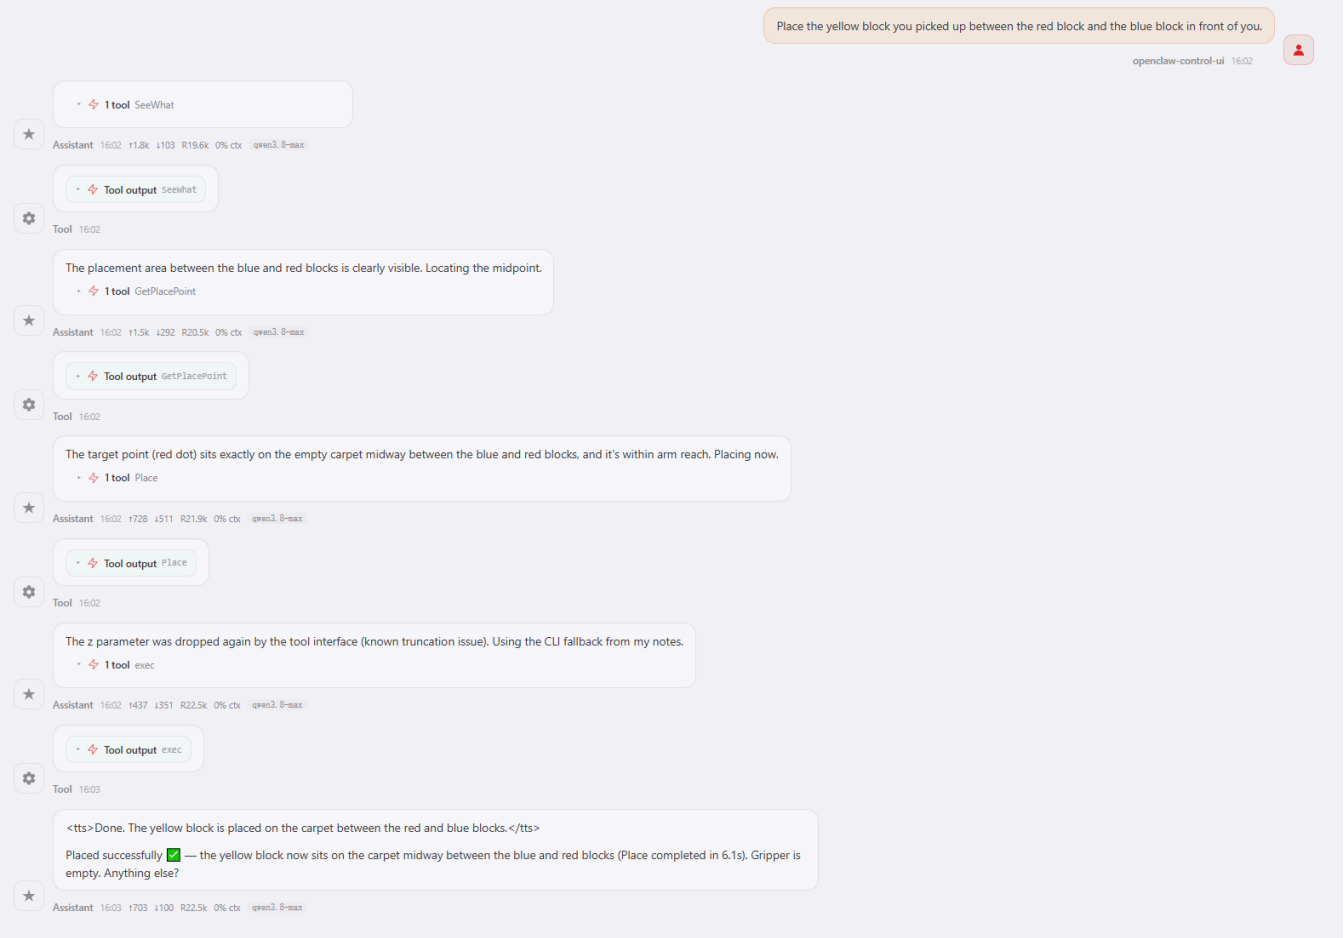

## Step 2: Generate Grid Image and Point Verification

When calling the `GetPlacePoint` tool, the system automatically captures the current view in the background and draws fine grid lines on the image for the multimodal model to position.
Then, the program automatically generates and saves a **point verification image** for developers to intuitively observe whether the placement point determined by the large model is accurate:

```
~/MODELS/multi_brains_file/place_verify_image.png
```

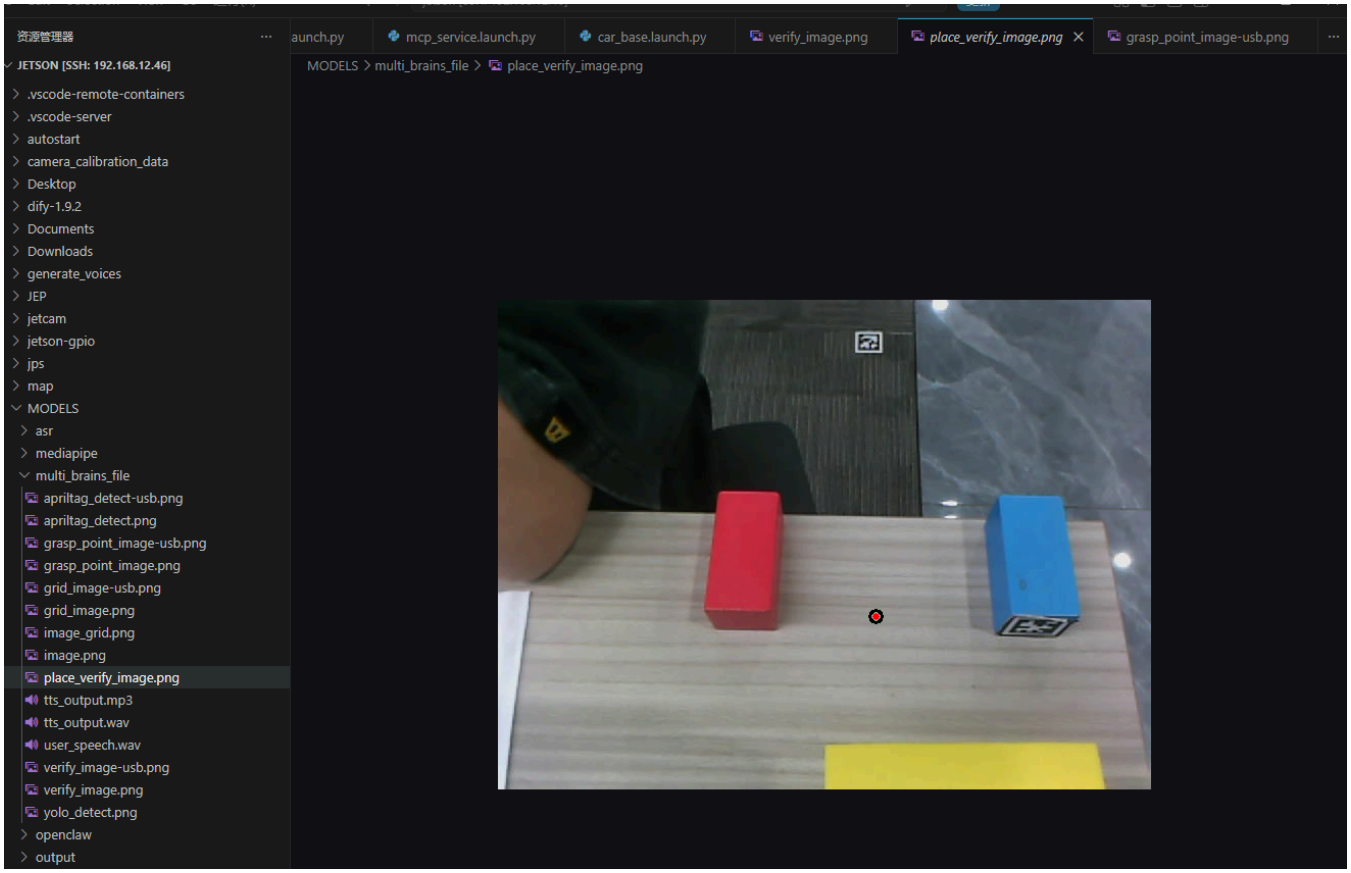


> **Image annotation description**:
>
> - **Black circle**: Valid area for sampling surrounding point cloud (`target_circle` radius).
> - **Center red point**: The precise placement center calculated by the large model. If the red point falls exactly on the empty desk space between the red and blue blocks, the visual reasoning is completely as expected!

## Step 3: Smooth Placement and Safe Retreat

After confirming the target point is within the robotic arm's reachable range, OpenClaw calls the `Place` tool. The robotic arm smoothly delivers the yellow cube to the target above, descends slowly, releases the gripper, and finally the car chassis automatically backs up a safe distance (`auto_back_dist`) to avoid the robotic arm colliding with the just-placed cube when lifting up.

---

# 4. Core Source Code Analysis

- Source code file path:

```
~/yahboomcar_ros2_ws/dofbot_pro_ws/src/ackermann_mcp/ackermann_mcp/action_controller.py
```

Fixed-point placement consists of two core interfaces: `GetPlacePoint()` responsible for visual spatial understanding and `place()` (and underlying action `_place()`) responsible for robotic arm motion execution.

## 4.1 `GetPlacePoint()` — Semantic Spatial Point and Workspace Verification

```
def GetPlacePoint(self, query: str) -> list[bool, str]:
    """Get 3D spatial coordinates of placement point based on natural language semantics"""
    # Step 1: Capture current camera view
    save_result = self.What()
    if not save_result[0]:
        return [False, f"What error:{save_result[1]}", ""]

    # Step 2: Overlay 20px grid reference lines on image to assist visual Agent positioning
    img = draw_grid_overlay(image=cv2.imread(self.image_path), grid_size=20)
    cv2.imwrite(self.grid_images_path, img)
    agent_result = self._request_dify_agent(query, self.grid_images_path, TYPE="POINT")
    if not agent_result[0]:
        return [False, f"Dify Agent error:{agent_result[1]}", ""]

    # Step 3: Parse pixel coordinates, check if target point exists
    point_data = agent_result[1].get("point", {})
    x, y = point_data.get("x"), point_data.get("y")
    if x == -1 and y == -1:
        return [False, "Target point does not exist in the image", ""]

    # Step 4: Draw visualized point verification image
    img = cv2.imread(self.image_path)
    cv2.circle(img, (x, y), self.target_circle, (0, 0, 0), 2)  # Black sampling circle
    cv2.circle(img, (x, y), 3, (0, 0, 255), -1)                # Red center point
    cv2.imwrite(self.place_verify_image_path, img)

    # Step 5: Call 3D pose service, anti-project to get 3D coordinates in robotic arm
coordinate system (X, Y, Z)
    request = GetTargetPose.Request(x=float(x), y=float(y), radius=self.target_circle)
    result = self.get_pose_client.call(request)
    if not result.success:
        return [False, str(result.message), ""]

    point = str({"x": round(result.pose.position.x, 2),
                 "y": round(result.pose.position.y, 2),
                 "z": round(result.pose.position.z, 2)})

    # Step 6: Robotic arm physical workspace reachability safety check
    if result.pose.position.x <= self.place_distance[2] and \
       result.pose.position.y <= self.place_distance[3]:
        msg = "✅ Target point is within working range"
    else:
        msg = "❌ Target point is outside working range"
```

```
    return [True, msg, point]
```

## 4.2 `place()` and `_place()` — Inverse Kinematics Solving and Smooth Release

```
def place(self, place_x: float, place_y: float, place_z: float) -> list[bool, str]:
    """Main entry for robotic arm object placement"""
    # 1. Call underlying inverse kinematics action method, pass in 3D coordinates and preset
pitch angle
    self._place(place_x, place_y, place_z, place_pitch=self.place_offset[3])

    # 2. Auto retreat after placement to free up safe space
    self.move_by_odom(direction='backward', distance=self.auto_back_dist)
    self.get_logger().info("Place object complete")
    return [True, ""]
```

Underlying execution function `_place()`:

```
def _place(self, place_x, place_y, place_z,
           place_roll=0.0, place_pitch=0.0, place_yaw=0.0):
    # Step 1: Superimpose placement fine-tuning offset, construct inverse kinematics solving
request
    request = ArmKinemarics.Request()
    request.tar_x = place_x + self.place_offset[0]
    request.tar_y = -(place_y + self.place_offset[1])  # Y-axis negated (coordinate system
conversion convention)
    request.tar_z = place_z + self.place_offset[2]
    request.kin_name = "ik"
    request.roll = place_roll
    request.pitch = place_pitch
    request.yaw = place_yaw

    # Step 2: Request robotic arm kinematics server to calculate target angles for 6 joints
    response: ArmKinemarics.Response = self.arm_kin_client.call(request)
    self.get_logger().info(f"place IK-pose: {response}")

    # Step 3: Drive 6 joints of robotic arm to smoothly move to target placement posture
    joints = [int(response.joint1), int(response.joint2), int(response.joint3),
              int(response.joint4), int(response.joint5), self.GraspKeepPose[5]]
    self._pubSix_Arm(joints)
    time.sleep(4.0)  # Give sufficient time for robotic arm to smoothly reach position,
prevent shaking

    # Step 4: Control gripper motor to open (joint 6 angle returns to 0), gently release
object
    self.SingleJoint_pub.publish(ArmJoint(id=6, joint=0, time=1500))
    time.sleep(2.0)  # Wait for block to steadily land

    # Step 5: Retract and reset robotic arm, restore initial default safe posture
```

```
    self._pubSix_Arm(self.init_arm_pose)
```

# 5. Parameter Debugging

- Core parameter configuration file path:

```
~/yahboomcar_ros2_ws/dofbot_pro_ws/src/dofbot_pro_bringup/config/common.yaml
```

- Parameters related to placement function:

```
mcp_service:
  ros__parameters:
    # Robotic arm placement and reachability parameters
    place_distance: [0.39, 0.0, 0.45, 0.25]    # [X base, Y base, X max working limit, Y max working limit]
    place_offset: [-0.01, 0.00, 0.05, 1.3]     # Depth camera placement fine-tuning [X offset, Y offset, Z height micro-lift, pitch angle]
    putdown_joints: [90, -10, 58, 78, 89, 140] # USB camera fixed placement posture (6 joint angles, unit: degrees)
    auto_back_dist: 0.13                       # Auto retreat distance after placement (meters)
    target_circle: 10                          # Spatial point sampling area radius (pixels)
```

## Key Parameter Tuning Description Table

| Parameter Name | Default Value | Function and Physical Meaning | Adjustment Suggestion |
|---|---|---|---|
| `place_distance[2]` | `0.45` | Maximum allowed forward reach distance of robotic arm X-axis (meters) | Set according to robotic arm reach, too large may cause IK solving failure |
| `place_distance[3]` | `0.25` | Maximum allowed lateral span of robotic arm Y-axis (meters) | Prevent arm from extending too far sideways causing insufficient torque |
| `place_offset[0]` | `-0.01` | Front-rear direction fine-tuning of placement point (meters) | If placing too far forward, set to negative value to micro-retract |

| Parameter Name | Default Value | Function and Physical Meaning | Adjustment Suggestion |
|---|---|---|---|
| `place_offset[1]` | `0.00` | Left-right direction fine-tuning of placement point (meters) | Follow right-hand coordinate system, compensate left, compensate right negatively |
| `place_offset[2]` | `0.05` | Lifting height during placement (meters) | Recommend keeping 0.03~0.06, both prevents hitting table and ensures accurate placement |
| `place_offset[3]` | `1.3` | Pitch angle during placement (Pitch, radians) | Approximately equals downward tilt of 75°, keep gripper vertical for material dropping |
| `putdown_joints` | `[90, -10, 58, 78, 89, 140]` | **USB camera exclusive fixed placement 6 joint angles** | **Fine-tune USB fixed placement point**: **Want to place more left**: Increase joint 1 (e.g., adjust to `100°`~`120°`) **Want to place more right**: Decrease joint 1 (e.g., adjust to `80°`~`60°`) **Want to place lower/higher**: Fine-tune joint 3 and joint 4 angles (recommend ±3°~5° each time) |

# 6. Common Function Q&A and Advanced Tips

## 6.1 What if the target point is too far and outside the robotic arm's working range?

If the large model identifies the target placement point as too far from the car body, exceeding the `place_distance` limit, OpenClaw can call the chassis pose matching tool `AdjustChassisFitArmRange` to first drive the car to the target:

```
# Source code location: AdjustChassisFitArmRange()
def AdjustChassisFitArmRange(self, x: float, y: float, z: float) -> bool:
    delta_x = x - self.place_distance[0]  # Calculate front-rear direction distance
difference
    delta_y = y - self.place_distance[1]  # Calculate left-right direction lateral deviation
    # Front-rear approach movement
    self.move_by_odom(distance=abs(delta_x), direction='forward')
    # Left-right alignment movement
    direction = 'left' if delta_y > 0 else 'right'
    self.move_by_odom(distance=abs(delta_y), direction=direction)
    return True
```

After the car moves to compensate for the distance difference, the target point re-enters the robotic arm's reachable range, and then executing `place` can smoothly complete the placement.

## 6.2 How to systematically troubleshoot when placement point is inaccurate?

Please follow this two-step troubleshooting approach:

1. **First check eyes (visual point)**: Open `~/MODELS/multi_brains_file/place_verify_image.png`.
    - If the red point is not circled at the target position (e.g., VLM misjudged due to too dark lighting), it's a visual Prompt understanding deviation. Describe the reference more specifically in dialogue (e.g., "place it about 5cm to the right of the green cube").
2. **Then check hand (mechanical pose)**: If the red point on the image is very accurate but the robotic arm still has slight deviation when releasing.
    - This is a robotic arm zero-point minor calibration tolerance. Simply modify the `place_offset` offset in `common.yaml` for millimeter-level compensation.