Pose Estimation

Pose Estimation
1、Enable Optimal Board Performance
1.1、Enable Jetson Clocks
2、Pose Estimation: Images
Preview
3、Pose Estimation: Video
Preview
4、Pose Estimation: Real-Time Detection
4.1、Camera
Preview
References

This document demonstrates **Ultralytics** Pose Estimation with Python, showing its performance on images, videos, and real-time detection.

1、Enable Optimal Board Performance

1.1、Enable Jetson Clocks

Enabling Jetson Clocks ensures that all CPU and GPU cores run at maximum frequency: **(Not required on RDK and Raspberry Pi boards)**

```
sudo jetson_clocks
```

2、Pose Estimation: Images

Use yolo26n-pose.pt to run prediction on the images in the ultralytics project (images not bundled with ultralytics).

Navigate to the code folder:


```
cd ~/MODELS/yolov26/yahboom_demo
```

Run the code:

```
python3 03.pose_image.py
```

Preview

Location of the images output by yolo: ~/MODELS/yolov26/assets/output/

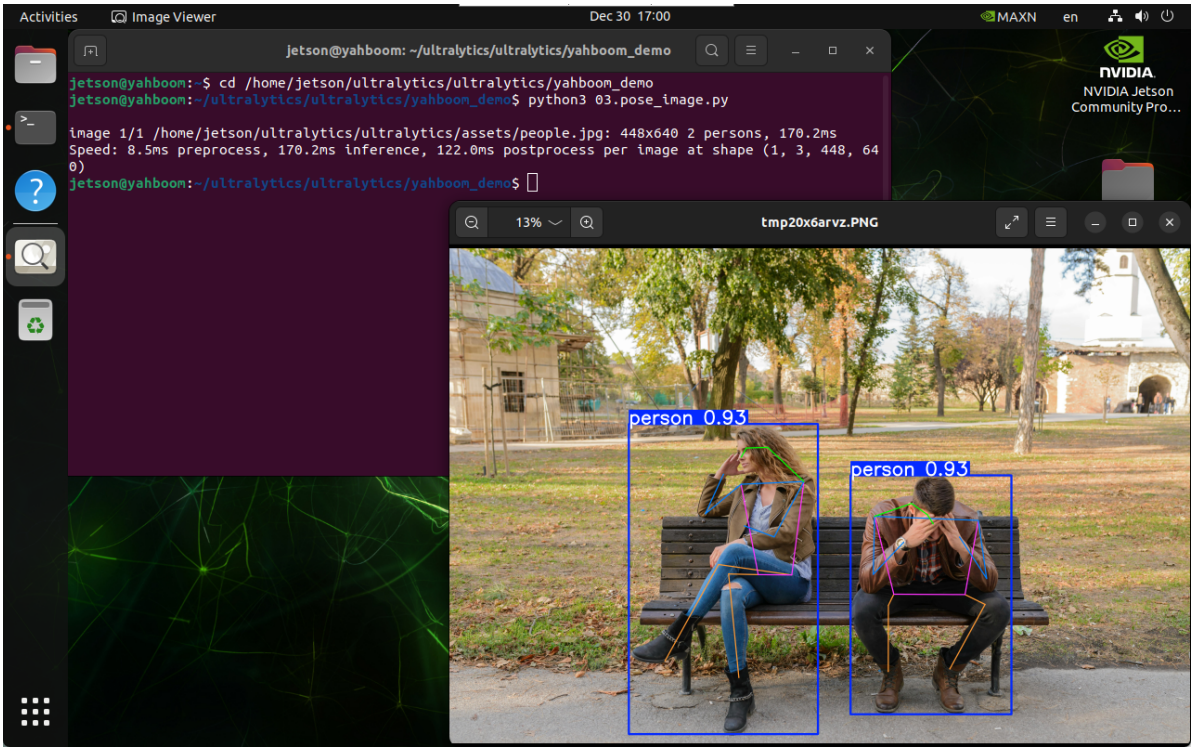

3、Pose Estimation: Video

Use yolo26n-pose.pt to run prediction on a video in the ultralytics project (a video not bundled with ultralytics).

Navigate to the code folder:


```
cd ~/MODELS/yolov26/yahboom_demo
```

Run the code:

```
python3 03.pose_video.py
```

Preview

Location of the videos output by yolo: ~/MODELS/yolov26/videos/output/

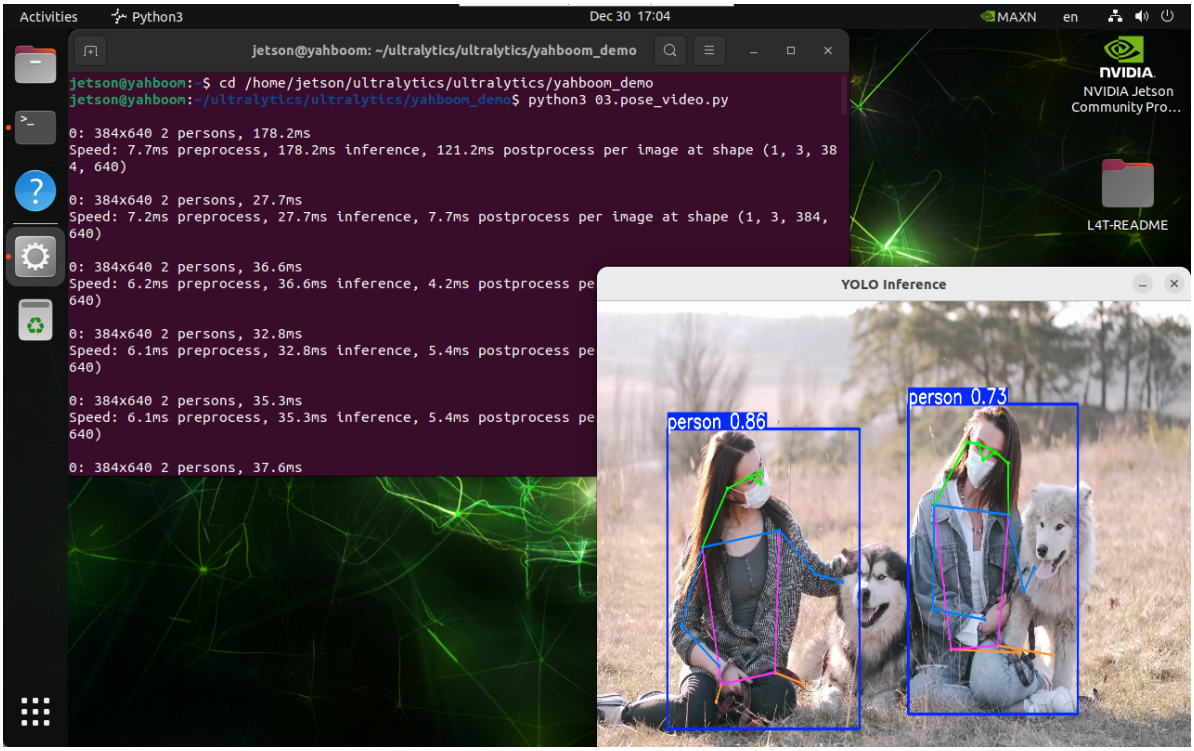

4、Pose Estimation: Real-Time Detection

4.1、Camera

Use yolo26n-pose.pt to run prediction on the USB camera feed.

Start the camera:

```
#USB camera
ros2 launch usb_cam camera.launch.py
#Nuwa camera
ros2 launch ascamera hp60c.launch.py
```

Navigate to the code folder:


```
cd ~/MODELS/yolov26/yahboom_demo
```

Run the code: click the preview window and press the q key to terminate the program!

```
python3 03.pose_camera_usb.py
```

Preview

Location of the videos output by yolo: ~/MODELS/output/

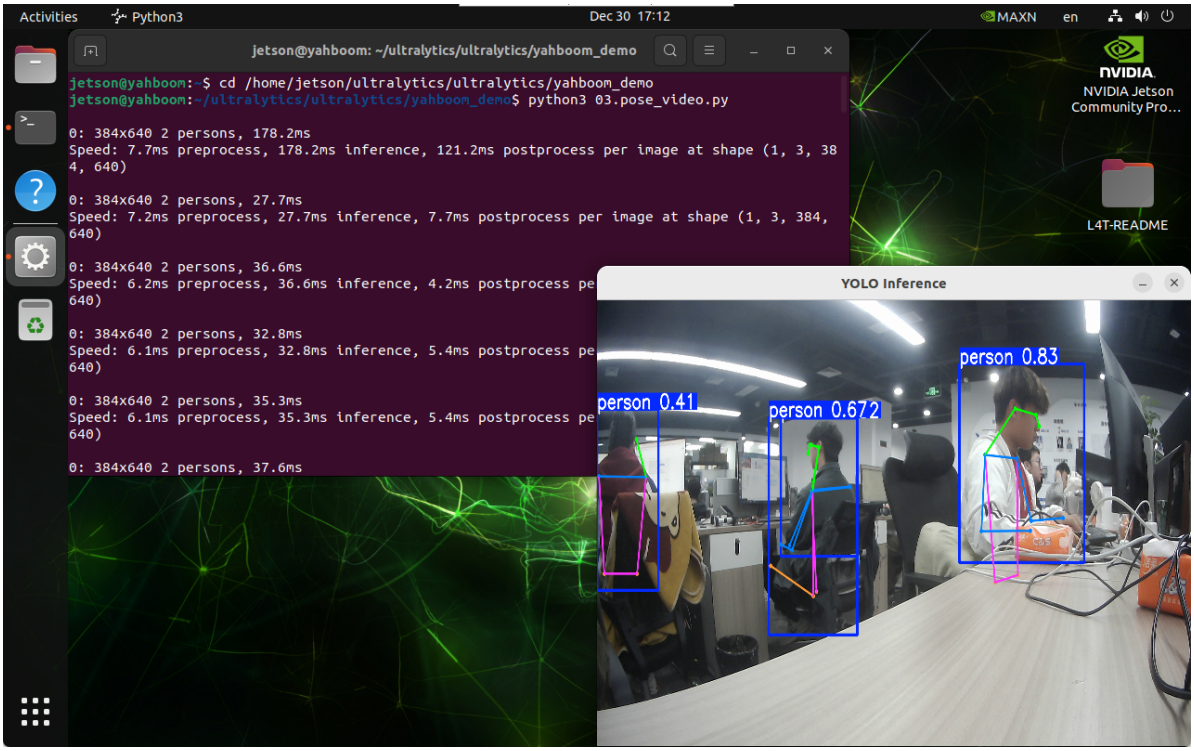

References

https://docs.ultralytics.com/tasks/pose/