How Raspberry Pi Users Enter Docker

> **Important**
>
> The Raspberry Pi 5 mainboard cannot directly install the ROS2 Humble environment; the ROS2 environment runs inside Docker, so Raspberry Pi users need to run the tutorial commands in the Docker terminal.

- Method 1: Start the container via CLI and enter the Docker terminal

> **Important**
>
> - If the container does not exist or is not started, `humble exec` will automatically create and start the container

```
humble exec
```




- Method 2: Launch via icon; clicking the taskbar icon or the desktop icon has the same effect





- A Docker container terminal will then start, used to enter startup commands in Docker

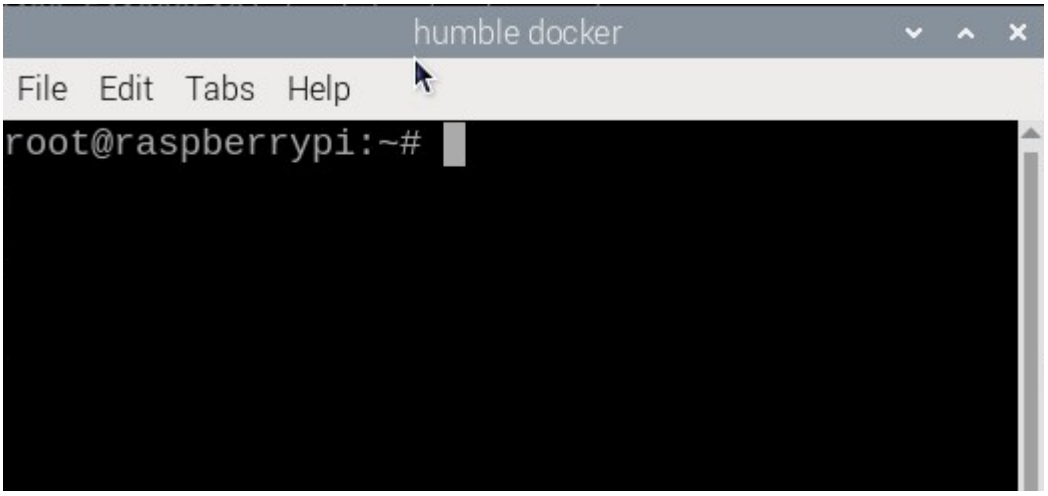


- Other commonly used ROS2 Humble Docker commands

Command	Description
`humble stop`	Stop the container, keeping it so it can be started again next time
`humble down`	Stop and remove the container
`humble restart`	Restart the container
`humble exec`	Enter the container terminal; if the container is not started, it will start it automatically

- Stop the container

```
humble stop
```

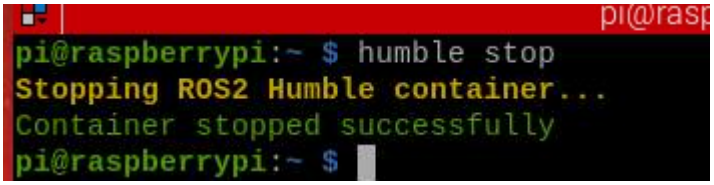

- Stop and remove the container

```
humble down
```



- **Note**: Some built-in system-level commands need to be run on the host machine, such as `robot_manage gui` and `robot_manage info`

```
robot_manage gui
```

> **Tip**
>
> - It is recommended to start it in the SSH terminal, which is smoother than in VNC; the VNC graphical interface is affected by network bandwidth

