


Voice Interaction Hardware Connection (Must Read)


To run the voice interaction function, you must use the AI Large Model Voice Module included in the mainboard's AI Large Model Package.

Wiring Diagram:

- Raspberry Pi 5

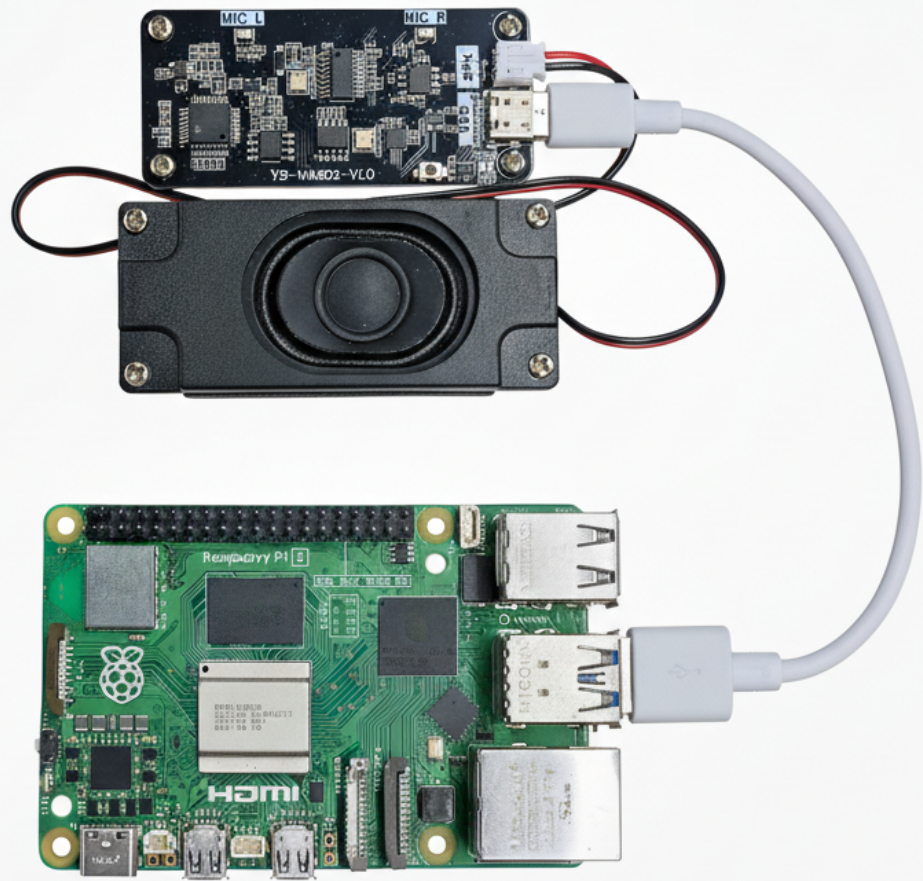

- RDX X5

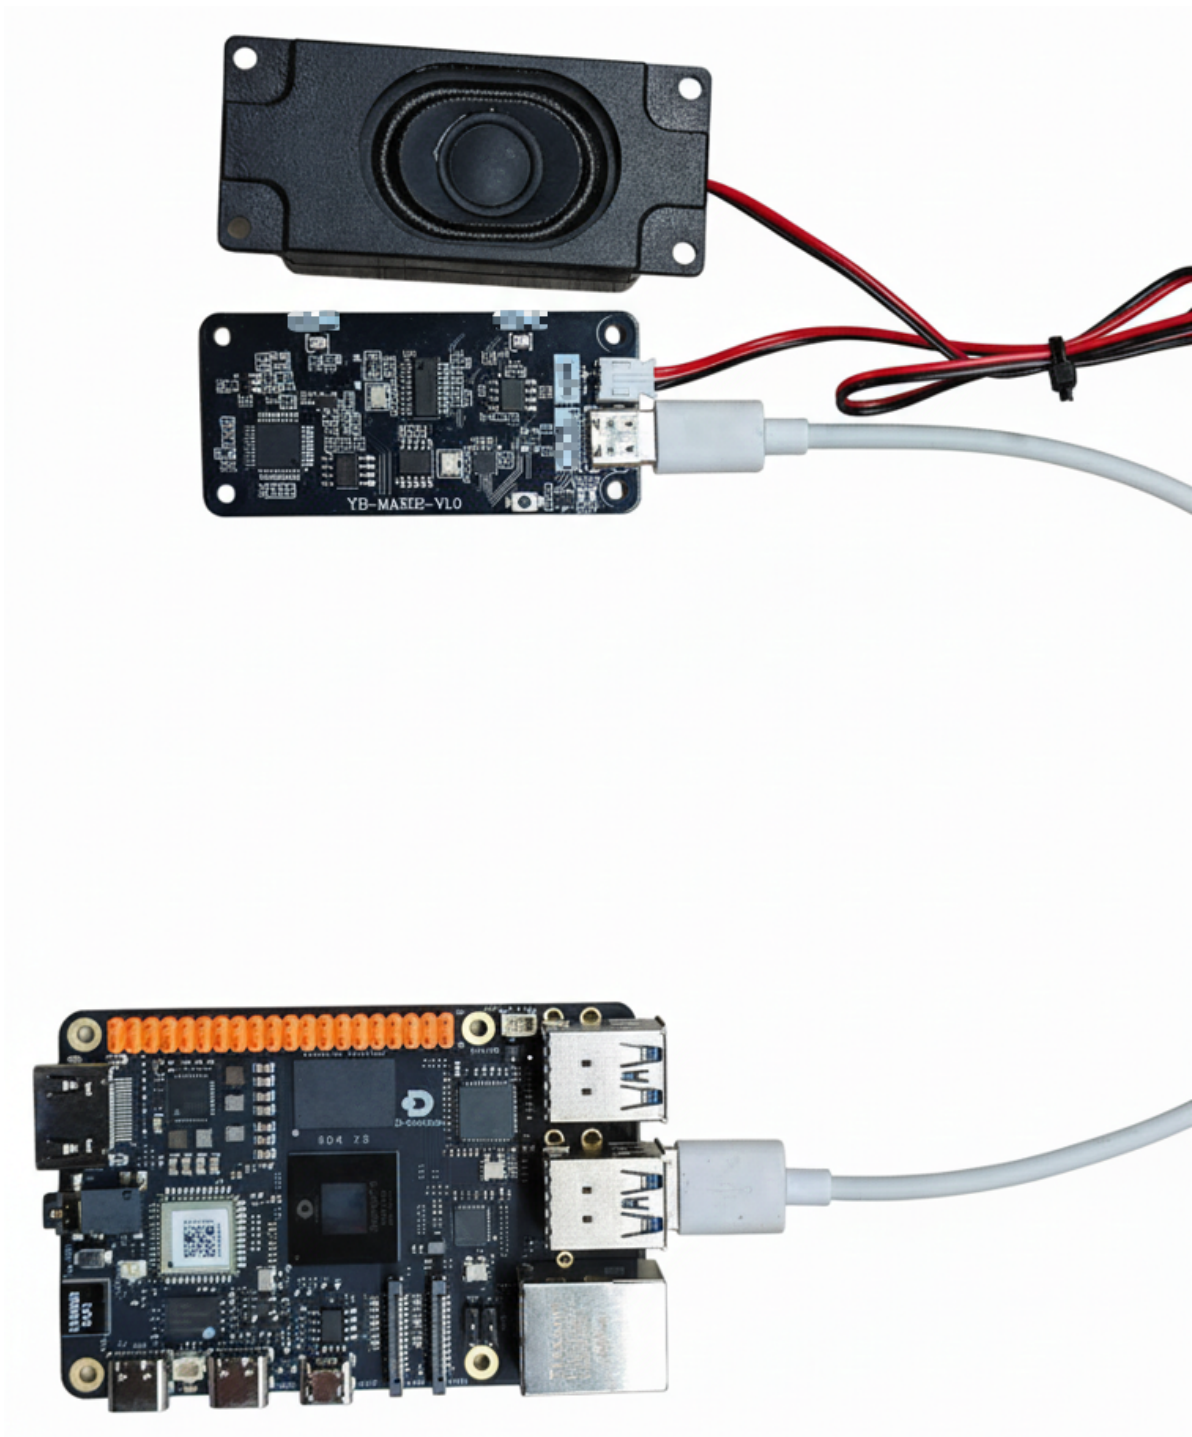

- ORIN

