

Entering the Car's Docker (For RPI5)

Entering the Car's Docker (For RPI5)

1. Course Content
2. Basic Operations
 - 2.1 Start the m3 Container
 - 2.2 Enter the m3 Container Terminal
 - 2.3 Stop the m3 Container

1. Course Content

- This section is for **Raspberry Pi 5** mainboard users only. Other mainboard users should ignore this tutorial.

[!NOTE]

- Due to the system version, the `ros2 humble` environment cannot be installed directly on Raspberry Pi 5. Therefore, the `ros2 humble` environment is placed in `Docker`, and the host machine does not have a ROS2 environment.

2. Basic Operations

2.1 Start the m3 Container

- To run the example programs in the tutorials, you must first start the `m3 Docker` container.


```
bringup_m3
```

The message `container rosmaster-m3 Started` indicates a successful start.

2.2 Enter the m3 Container Terminal

- The commands in the following tutorials need to be executed inside the container. To open the container terminal, use the command:

```
exec_m3
```

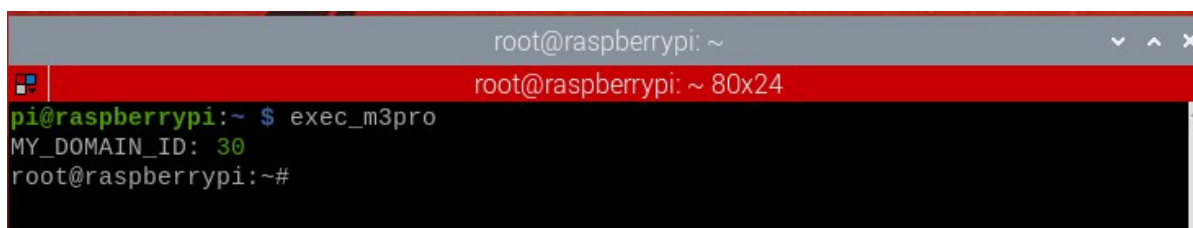

The screenshot shows a terminal window with a title bar that reads "root@raspberrypi: ~". The terminal content shows the prompt "pi@raspberrypi:~" followed by the command "\$ exec_m3pro". The output of the command is "MY_DOMAIN_ID: 30", followed by a new prompt "root@raspberrypi:~#".

- To exit the container terminal, press `ctrl+D`.

```
m3_DOMAIN_ID: 00  
root@raspberrypi:~#  
exit  
pi@raspberrypi:~ $
```

2.3 Stop the m3 Container

- When you no longer need the m3 container and need to shut it down manually (usually not necessary):

```
shut_m3
```