

Quick Start Guide to Controlling the Car with a Handle

Quick Start Guide to Controlling the Car with a Handle

1. Course Content
2. Disable Handle Control
3. Disable Auto-start for Handle and Chassis Agent
 - 3.1 Disable Handle Auto-start
 - 3.2 Disable Chassis Agent Auto-start

1. Course Content


- Plug the handle receiver into the mainboard or the HUB expansion board. After the car is powered on, the system will automatically connect to the agent and start the handle control program.
- Press the [START] button on the handle to activate it.

Handle Action	Function
Left Stick Up/Down	Car moves forward/backward straight
Left Stick Left/Right	Car translates left/right
Right Stick Left/Right	Car rotates left/right
"START" Button	End sleep mode / Control buzzer
Left Stick Press	Adjust X/Y axis linear speed
Right Stick Press	Adjust angular speed
Right Button 1	Switch ambient light mode

This section is a quick start tutorial. For a more detailed tutorial on handle control, please refer to the [01.Chassis Control Course-02.Handle Control] tutorial.

2. Disable Handle Control

- When the handle is not needed, you can close the window running the handle control program. As shown in the figure below, press `ctrl+c` to close this terminal.

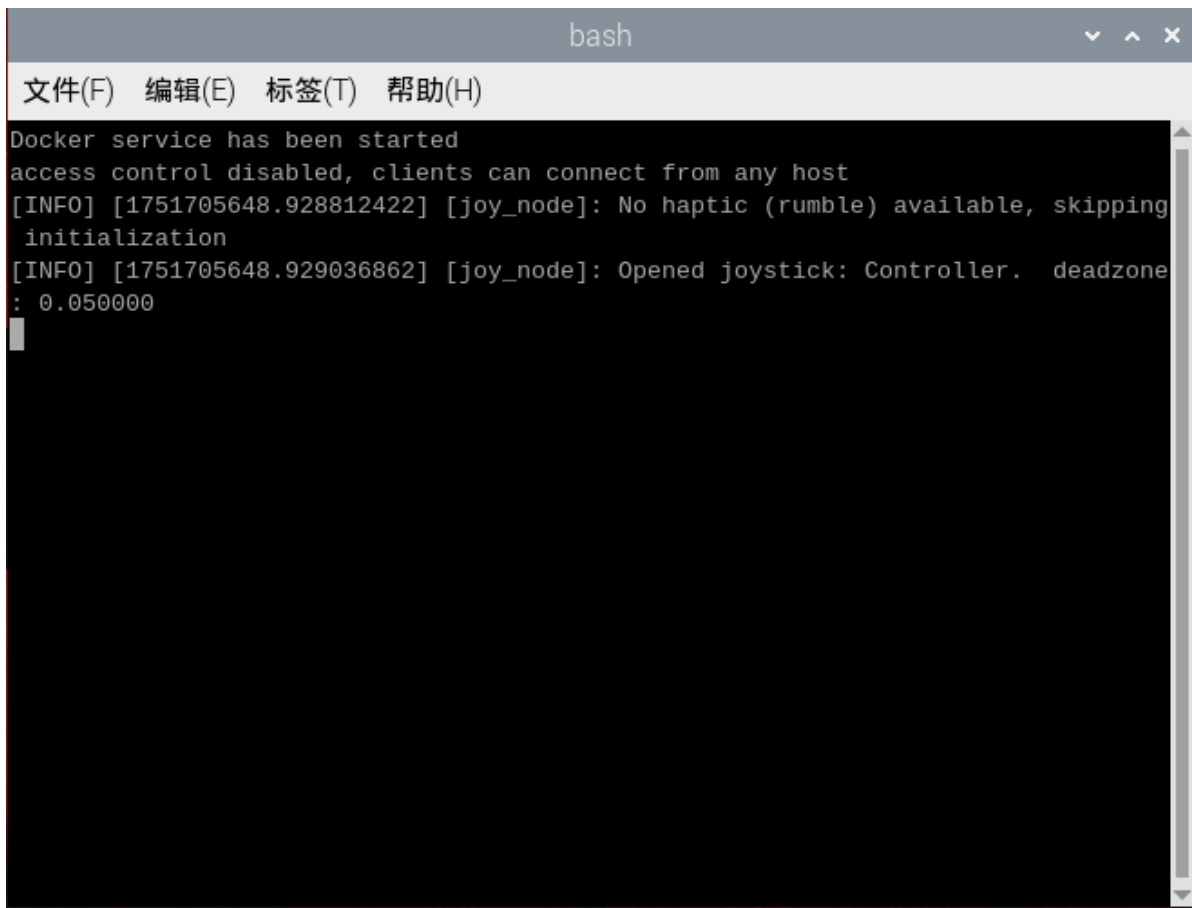

```
bash
文件(F) 编辑(E) 标签(T) 帮助(H)
Docker service has been started
access control disabled, clients can connect from any host
[INFO] [1751705648.928812422] [joy_node]: No haptic (rumble) available, skipping
initialization
[INFO] [1751705648.929036862] [joy_node]: Opened joystick: Controller.  deadzone
: 0.050000
```

3. Disable Auto-start for Handle and Chassis Agent

[!IMPORTANT]

- It is recommended to disable the auto-start function for the chassis agent and handle control when you need to connect to the network later. This function is for convenient testing during initial use.
- The reason is that if the system connects to the network, it will calibrate the local time after entering the system. If the chassis agent starts before the network time calibration, the agent's timestamp will not match the system time after networking, resulting in no data from the radar and IMU.

3.1 Disable Handle Auto-start

If you want to permanently disable the handle control auto-start function, follow these steps:

- Enter in the terminal:

```
mv ~/.config/autostart/joy_control.desktop ~
```

- To restore the handle control auto-start, copy the file back to the `~/.config/autostart/` directory.

```
cp ~/joy_control.desktop ~/.config/autostart/
```

3.2 Disable Chassis Agent Auto-start

Similarly, if you want to permanently disable the chassis agent auto-start function, follow these steps:

- Enter in the terminal:

```
mv ~/.config/autostart/agent.desktop ~
```

- To restore the chassis agent auto-start, copy the file back to the `~/.config/autostart/` directory.

```
cp ~/agent.desktop ~/.config/autostart/
```