


# Wiring Introduction

## Jetson Nano SUB 4G version wiring diagram


### Wiring diagram for Jetson NANO 4GB version

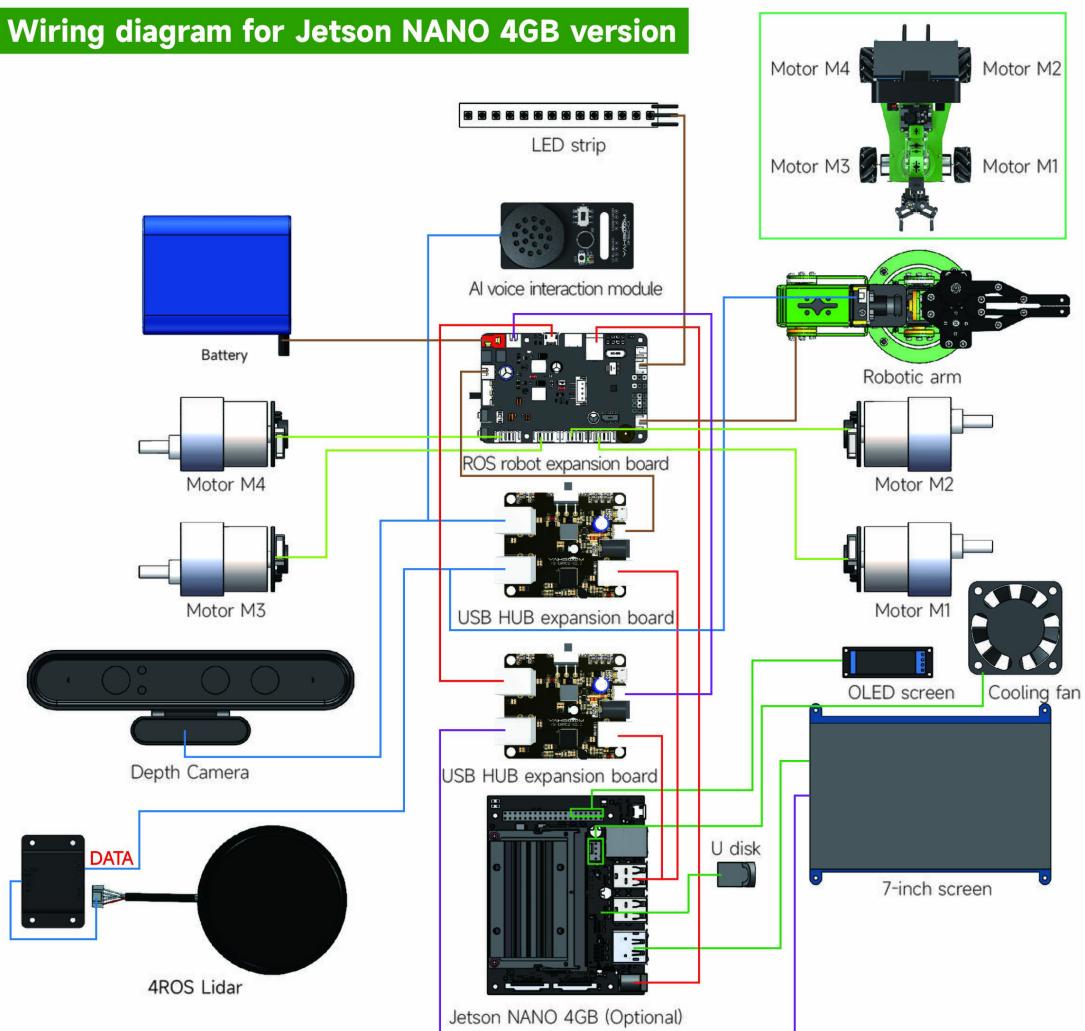

\* The voice interaction module can only be used normally after binding the port according to the tutorial [Voice control courses --->Voice control module port binding].  
If only the voice module is connected but the port is not bound, the APP control program will not be able to start normally.

## Jetson Orin Nano/Jetson Orin NX Wiring Diagram


## Wiring diagram for Jetson Orin Nano/Orin NX version

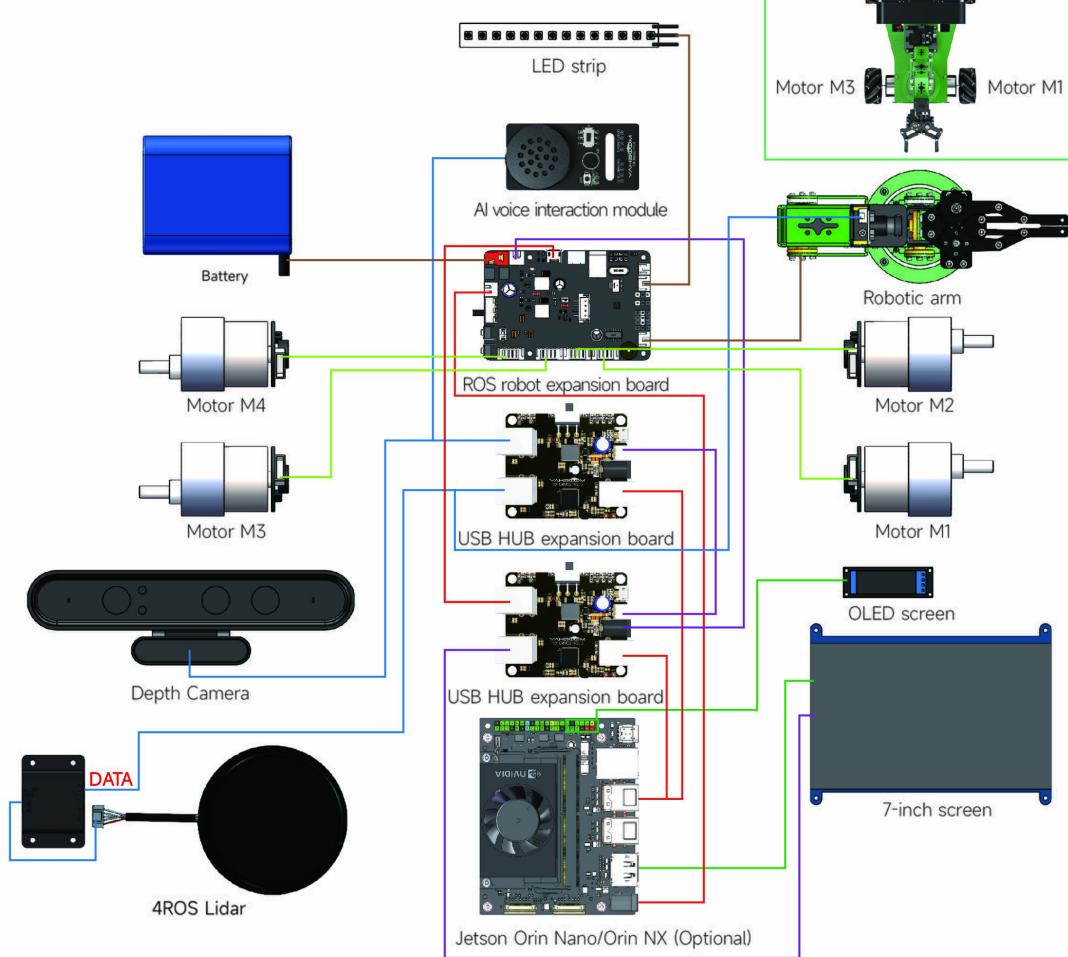

\* The voice interaction module can only be used normally after binding the port according to the tutorial [Voice control courses -->Voice control module port binding].  
If only the voice module is connected but the port is not bound, the APP control program will not be able to start normally.

## Raspberry Pi 5 wiring diagram

## Wiring diagram for Raspberry Pi version

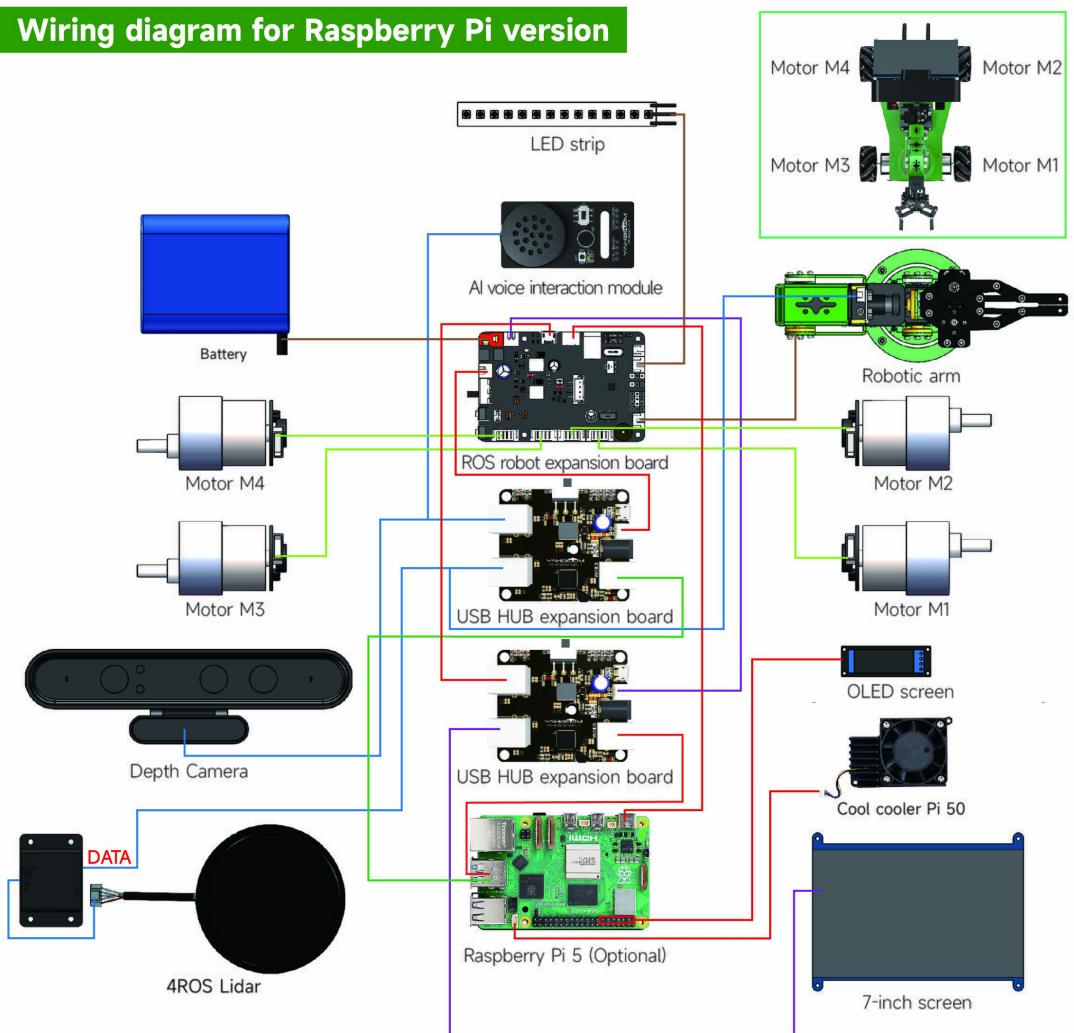

\* The voice interaction module can only be used normally after binding the port according to the tutorial [Voice control courses --->Voice control module port binding].  
If only the voice module is connected but the port is not bound, the APP control program will not be able to start normally.