
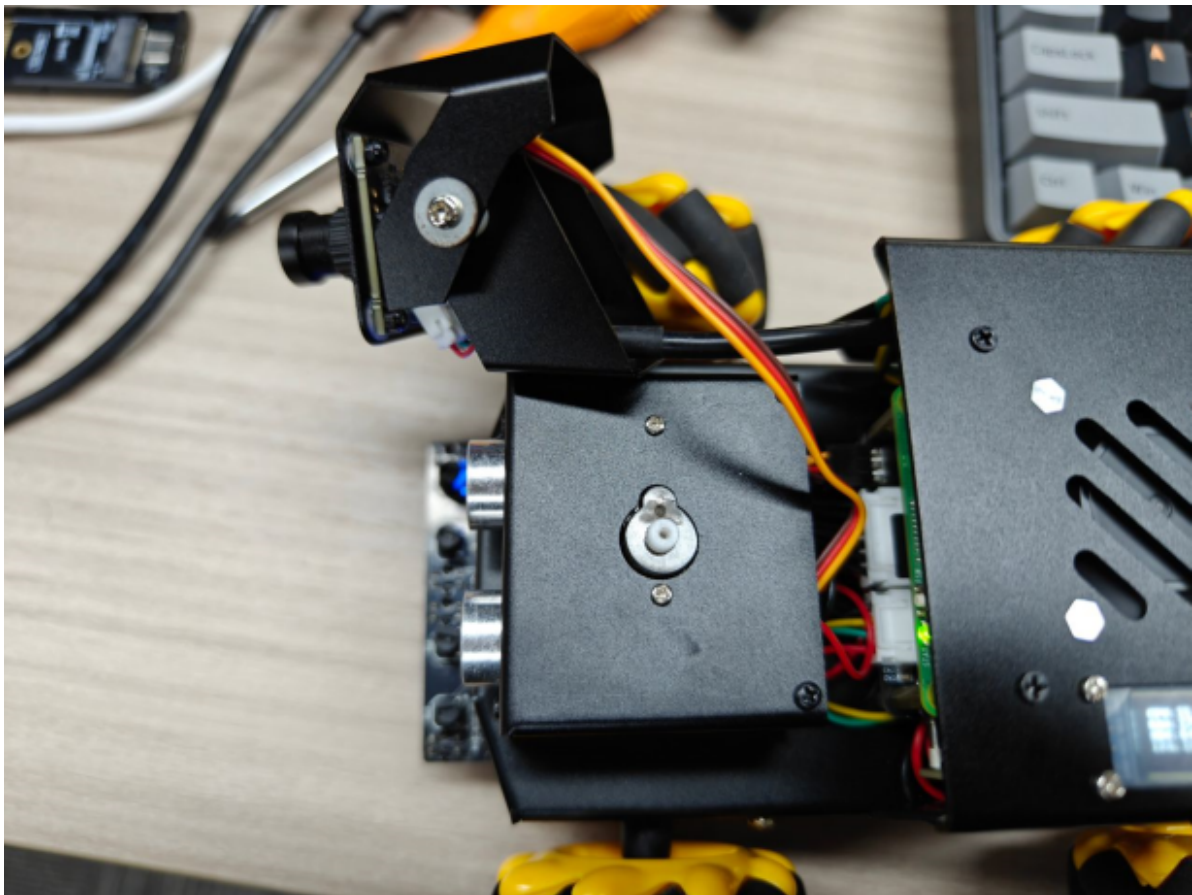


Servo Gimbal Installation Precautions

If the servo gimbal is not facing forward or aligned correctly,

the following calibration operations are required:

- (1) First, disconnect the power to the vehicle.
- (2) Keep the servo wiring connected. First, disassemble the servo gimbal, removing both the upper and lower servos.


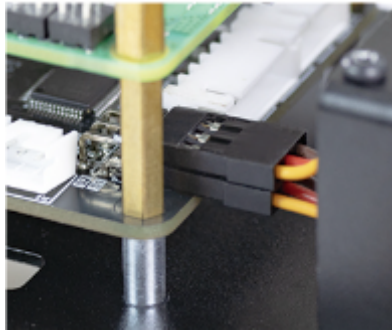


- 2) Reconnect the power to the Raspbotv2 vehicle, i.e., restart the system.

- (3) After confirming the vehicle has entered the system, the auto-start program will initialize the servo angle. After the servo rotates,

Note: After powering on, the servo has torque; do not rotate the servo angle again!

- (4) First install the vertical servo (upper servo), then install the horizontal servo (lower servo). After installation, the servos should be in this position.

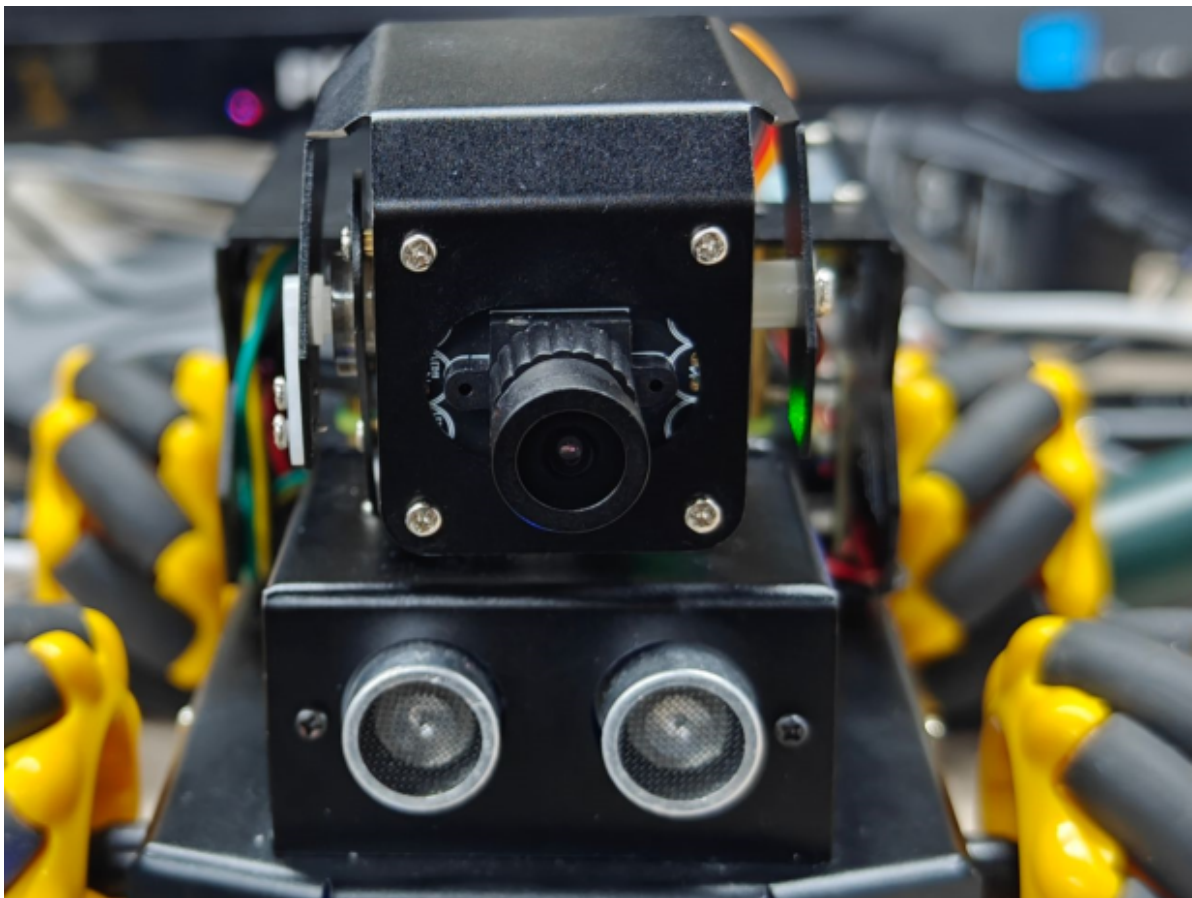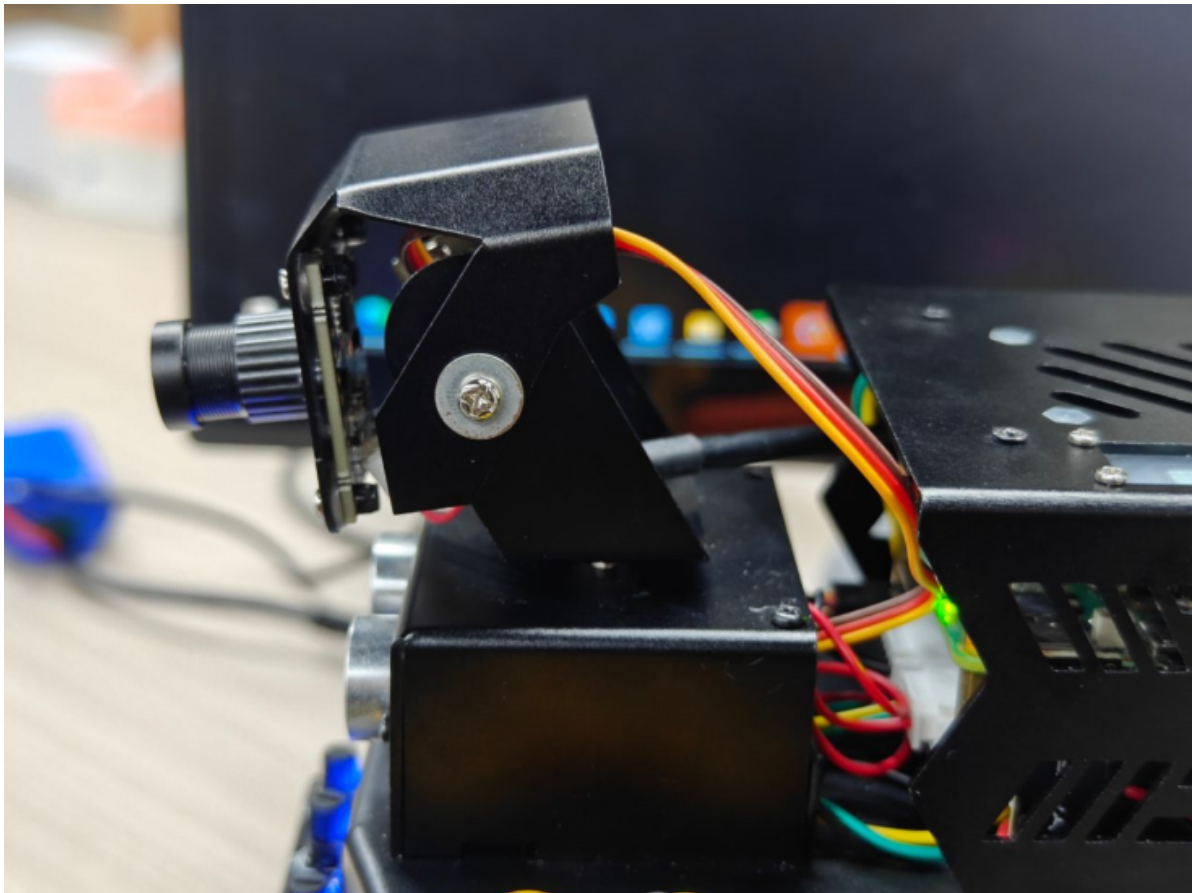

**Note: Due to structural issues, the horizontal servo may differ in position by one gear. It is normal for the servo not to be perfectly straight and facing forward. **

If the deviation is too large, you can adjust the initial servo angle by modifying this program.

```
pi@yahboom:~/software/oled_yahboom $ ls
MSYH.TTC      __pycache__  start.desktop yahboom_oled.py
platech.ttf   reservo.py  start.sh
pi@yahboom:~/software/oled_yahboom $ vim reservo.py
pi@yahboom:~/software/oled_yahboom $
```

```
pi@yahboom: ~/software/oled_yahboom
File Edit Tabs Help
from Raspbot_Lib import Raspbot

bot = Raspbot()

bot.Ctrl_Servo(1, 90) X
bot.Ctrl_Servo(2, 25) Y

del bot
```

#Servo Angle

1, x-axis 0~180 degrees

2, y-axis 0~110 degrees

This program will start automatically every time the Raspberry Pi boots up.