

Camera preview and frame rate test

Camera preview and frame rate test

Camera preview

Select device

Preview monitor

Frame rate test


The simplest way is to use testing software on the Windows platform to turn on the camera.

Camera preview


Connect the camera to the computer, open the amcap. exe application in the supporting documentation [PC testing software], check the corresponding USB camera and preview options..

Some users using this testing software may choose to preview the camera without any images. They can replace the computer or use the system's built-in camera to test the images

Select device

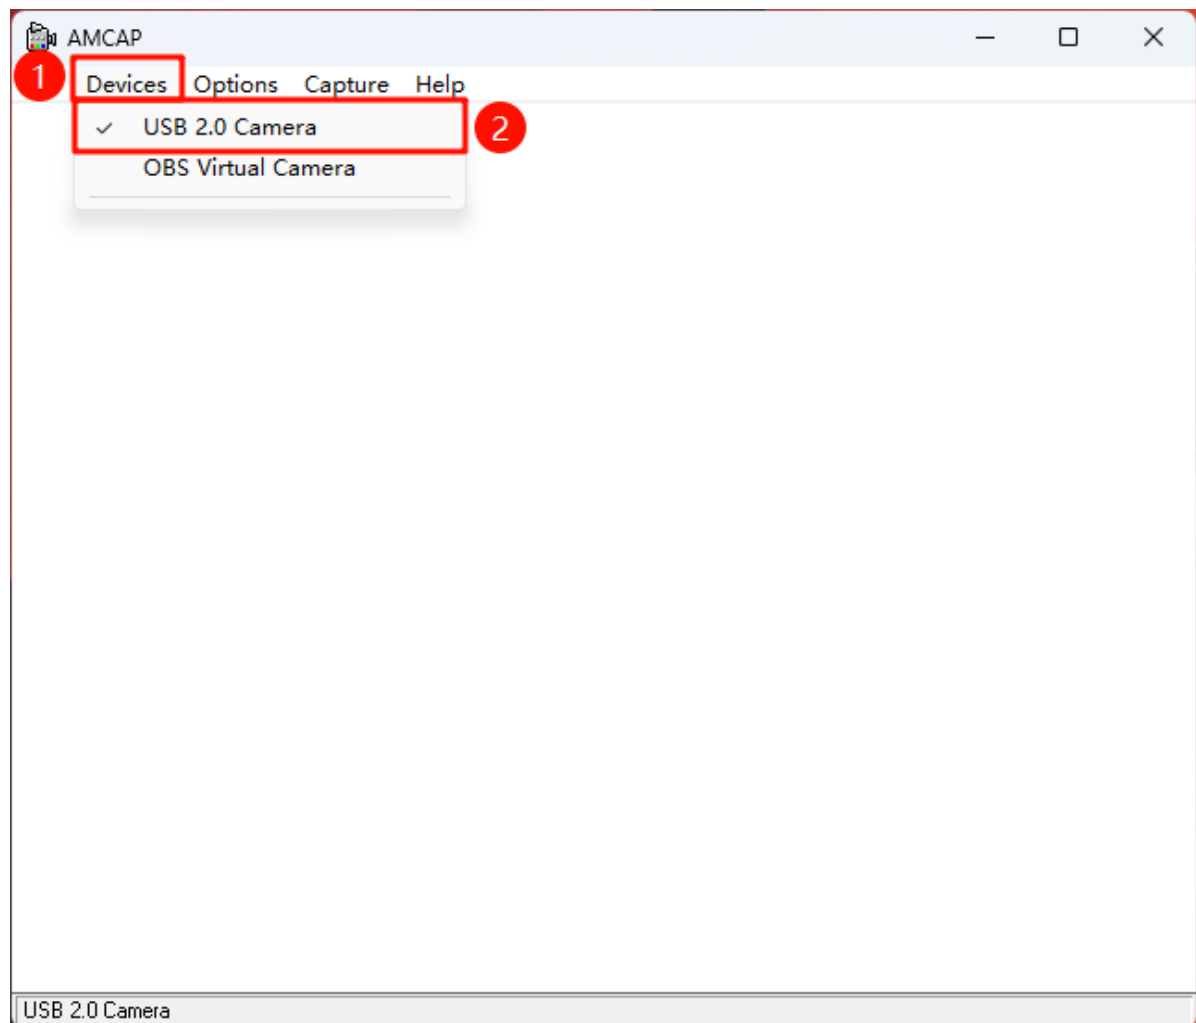

Preview monitor

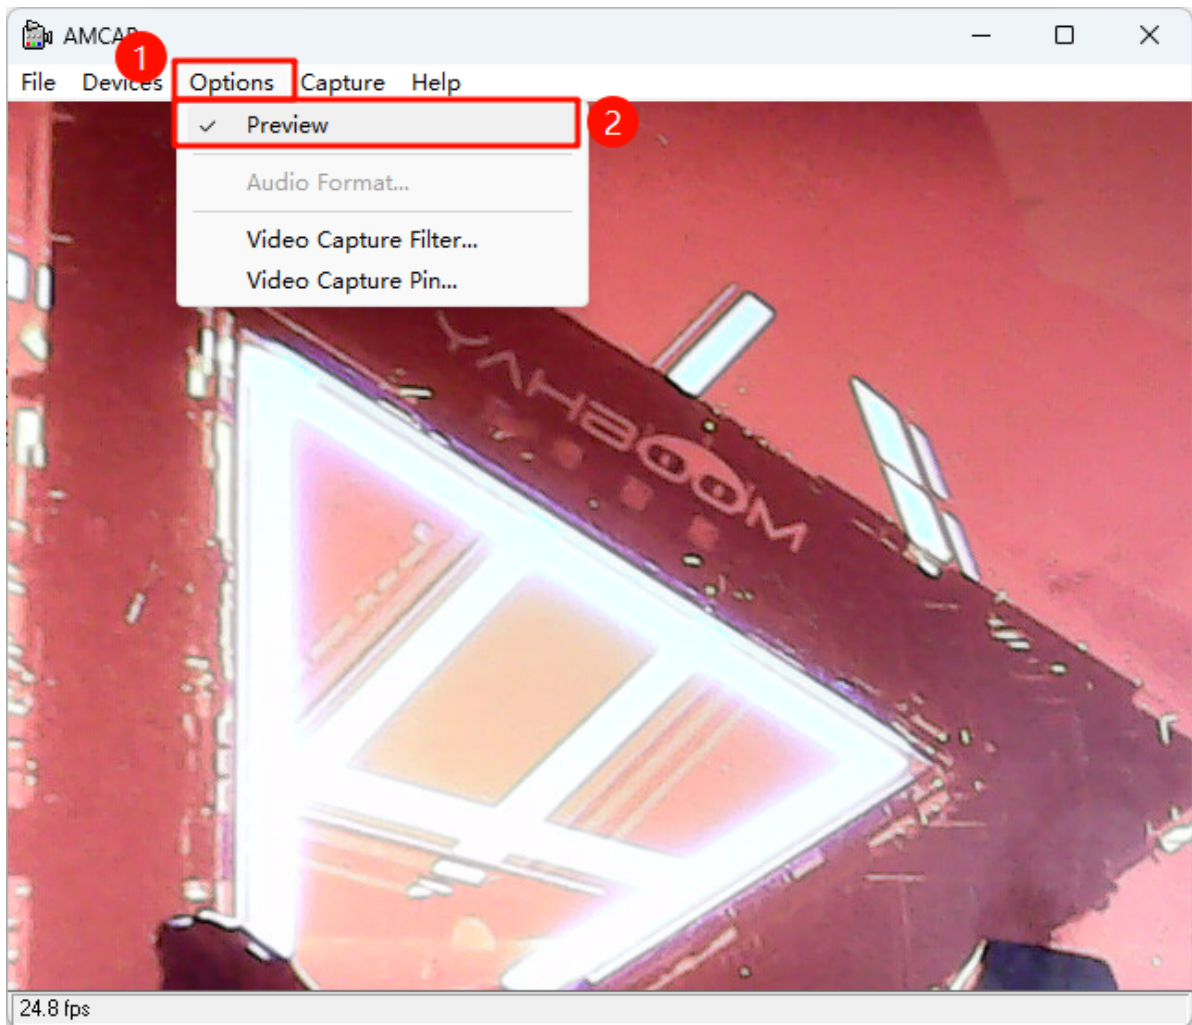

Frame rate test

The frame rate varies with different resolutions, and can be tested according to the options in the software!

The actual frame rate is displayed in the bottom left corner of the software.

The frame rate tested on the PC platform will be higher than other motherboards due to performance differences.

