

PC Software View Lidar

On a Windows computer, after connecting the lidar, run VanJeeLaserView_722.exe from the [VanJeeLaserView_722] file in the [Attachments] folder to view the lidar point cloud data.


Computer Connecting to Lidar

Connect the lidar to the lidar adapter cable, making sure to align the raised and recessed parts of the interface to avoid inserting it backwards and damaging the interface. Then power the lidar adapter cable's power port, and connect the Ethernet port to the Windows computer's Ethernet port.

Windows Computer Ethernet Network IP Settings

The default Ethernet IP of the lidar is 192.168.2.88, so the computer's Ethernet IP needs to be set to the static IP 192.168.2.88. The setting steps are as follows,

Search bar search

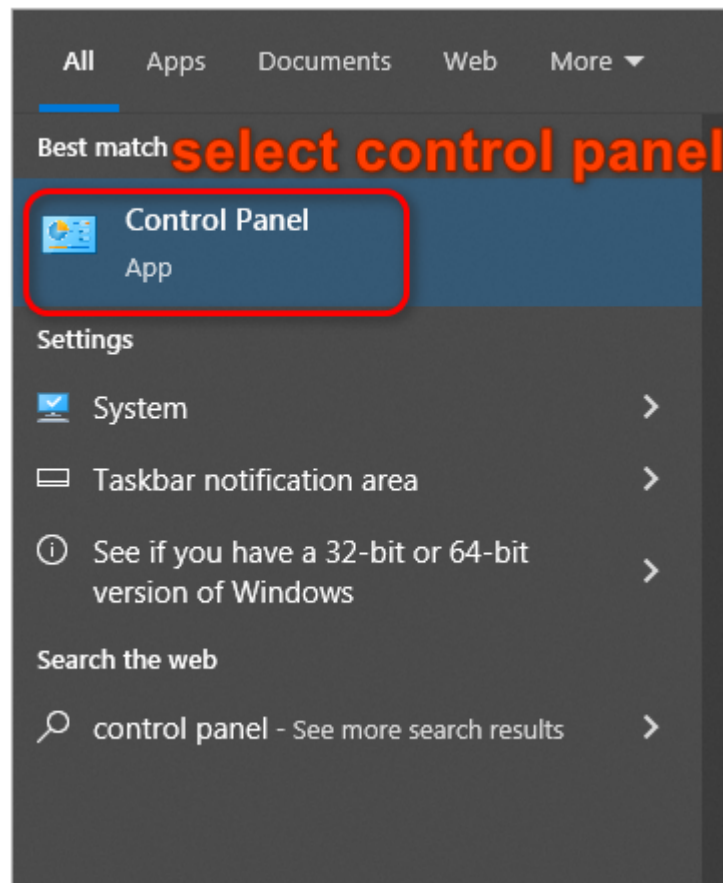

Adjust your computer's settings

View by: Category ▾

select this**System and Security**

Review your computer's status
Save backup copies of your files with File History
Backup and Restore (Windows 7)

**Network and Internet**

View network status and tasks

**Hardware and Sound**

View devices and printers
Add a device

**Programs**

Uninstall a program

**User Accounts**

Change account type

**Appearance and Personalization****Clock and Region**

Change date, time, or number formats

**Ease of Access**

Let Windows suggest settings
Optimize visual display

Network and Internet

Control Panel > Network and Internet >

Control Panel Home

System and Security

• Network and Internet

Hardware and Sound

Programs

User Accounts

Appearance and
Personalization

Clock and Region

Ease of Access

**Network and Sharing Center**

View network status and tasks | Connect to a network | View network computers and devices

**Internet Options**

Change your homepage | Manage browser add-ons | Delete browsing history and cookies

select this

Network Connections

Control Panel > Network and Internet > Network Connections

Organize ▾ Disable this network device Diagnose this connection Rename this connection View status of this connection Change settings of this connection



IKEv2-Surfshark Connection
Disconnected
WAN Miniport (IKEv2)




以太网 3
网络 5
Realtek PCIe GbE



宽带连接
Disconnected
Broadband (PPPOE)

Right click and select Properties

- Disable
- Status
- Diagnose
- Bridge Connections
- Create Shortcut
- Delete
- Rename
- Properties

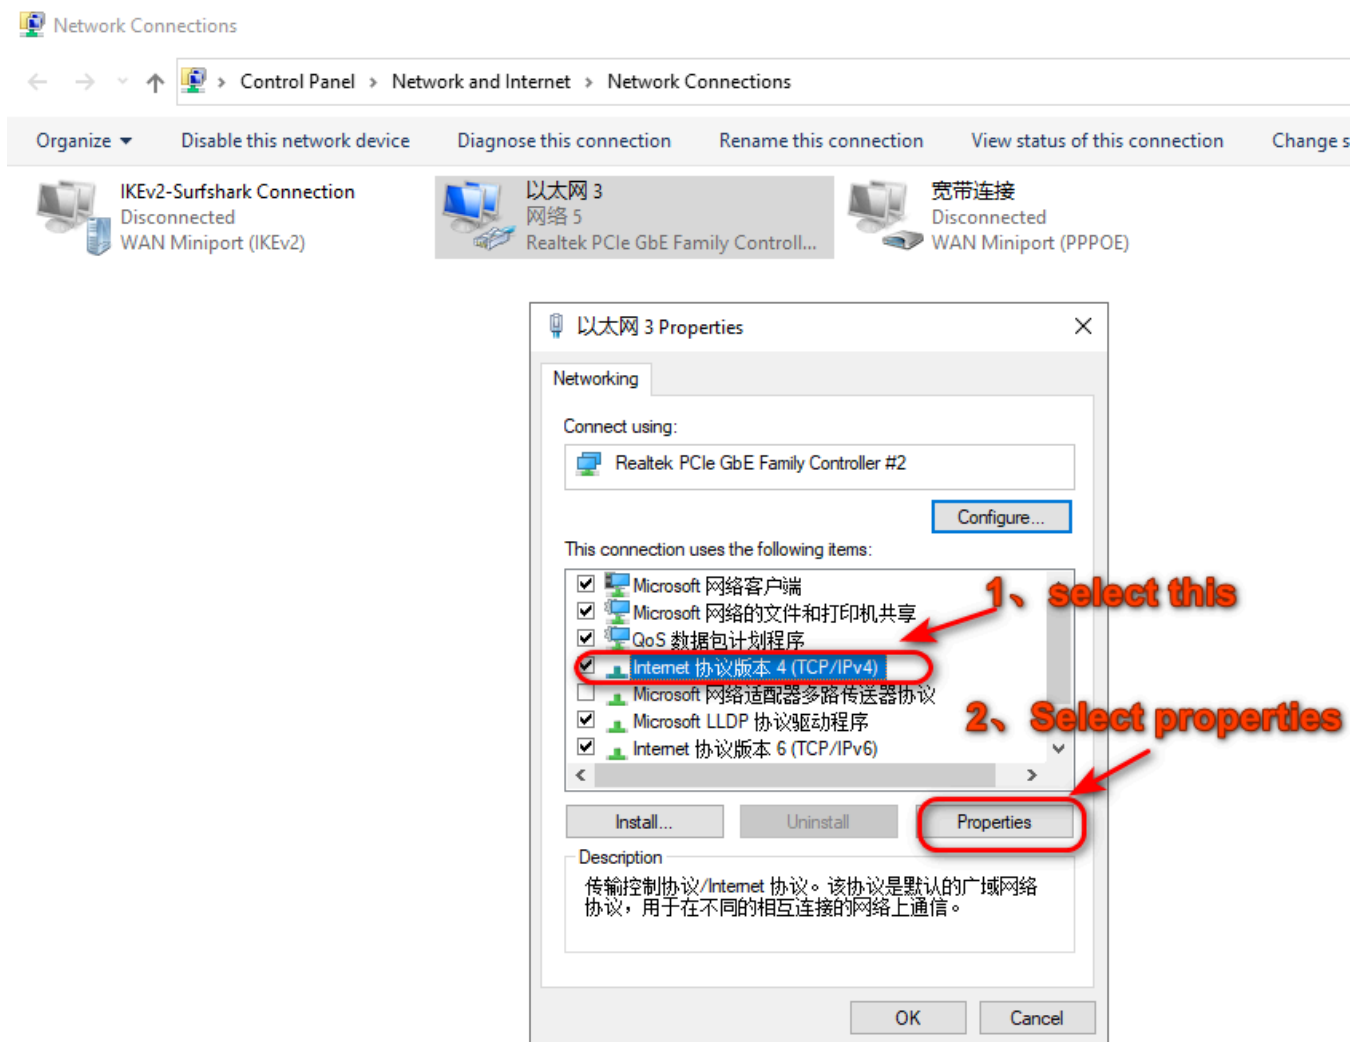

Select **Use the following IP address**, fill in:

- IP address: 192.168.2.88
- Subnet mask: 255.255.255.0
- Default gateway:

192.168.8.1

(According to your router's actual IP)

- Preferred DNS server:

114.114.114.114

- Alternate DNS: 8.8.8.8 (optional)

Click **OK** -> OK again, close all windows.

To verify if it takes effect, open a new CMD and enter:

ipconfig


If the following content appears, it indicates success,

```
IPv4 Address. . . . . : 192.168.2.88
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.8.1
```


Starting VanJeeLaserView_722.exe to Connect to Lidar

After the network settings are complete, turn off the firewall, then double-click VanJeeLaserView_722.exe. If it runs successfully, the following screen will appear.

Switch Language

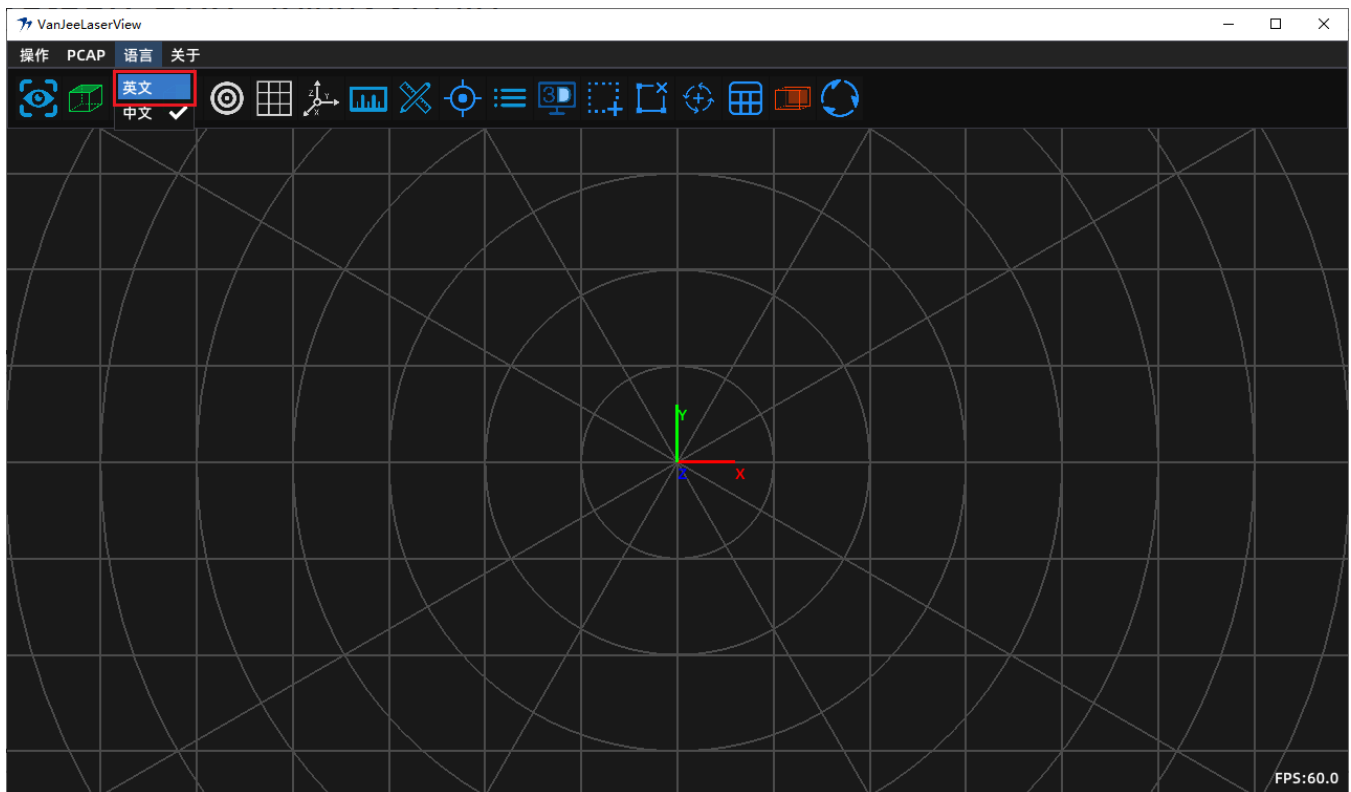

Click [Operation] - [Connect],

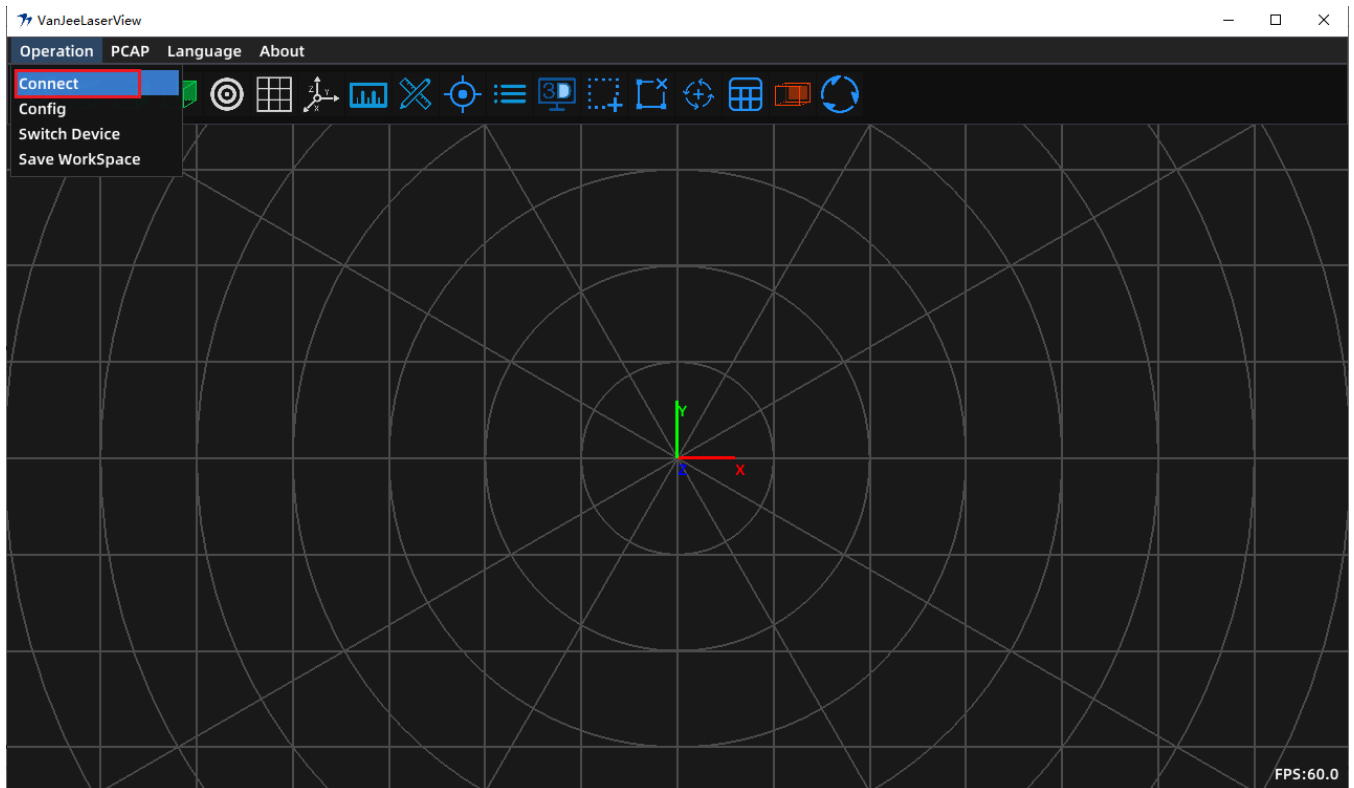

The network connection popup will appear as shown in the figure. Click Connect, and you can see the real-time point cloud. When you don't know the device IP, you can click Broadcast to find devices in the LAN,

