

Pico_ K210 QR code recognition

1.K210 and Pico communication

1.1 Experimental premises

This tutorial uses Pico, and K210 requires running the program in **K210-AI (stm32_pico_arduino)** to start the experiment

Pico * 1



K210 perspective module * 1 (requires SD card (with AI model inside) and camera)

USB to TTL module * 1

1.2 Experimental wiring

pico	USB to TTL module
GP8	RXD
GND	GND

pico	k210
GP9	TXD
GND	GND
VCC	5V
Wiring as shown in the diagram :	

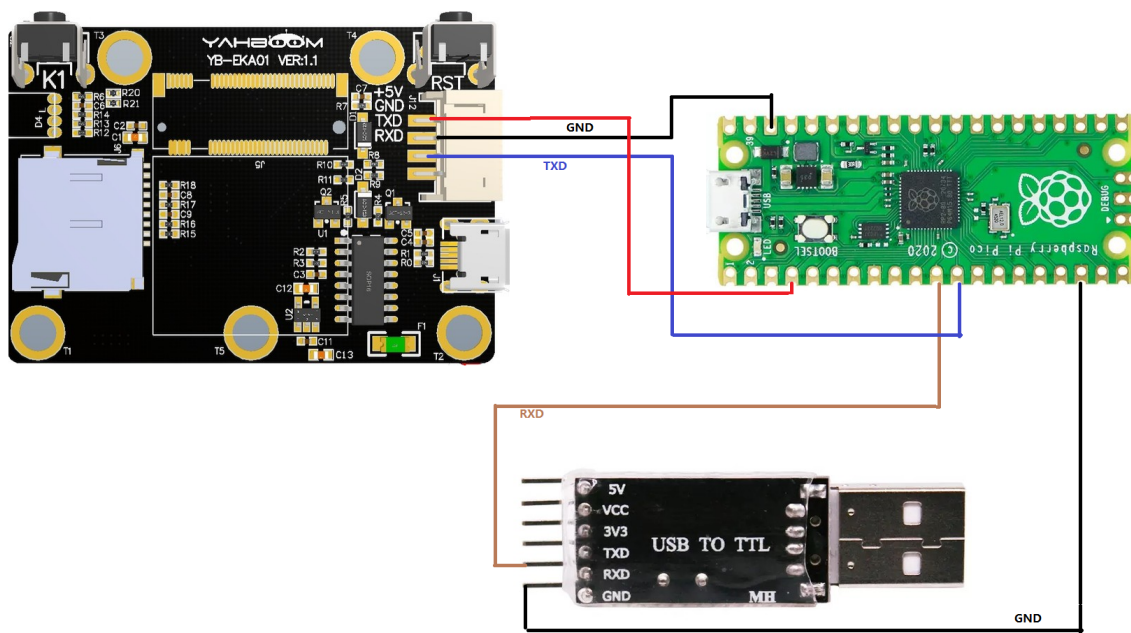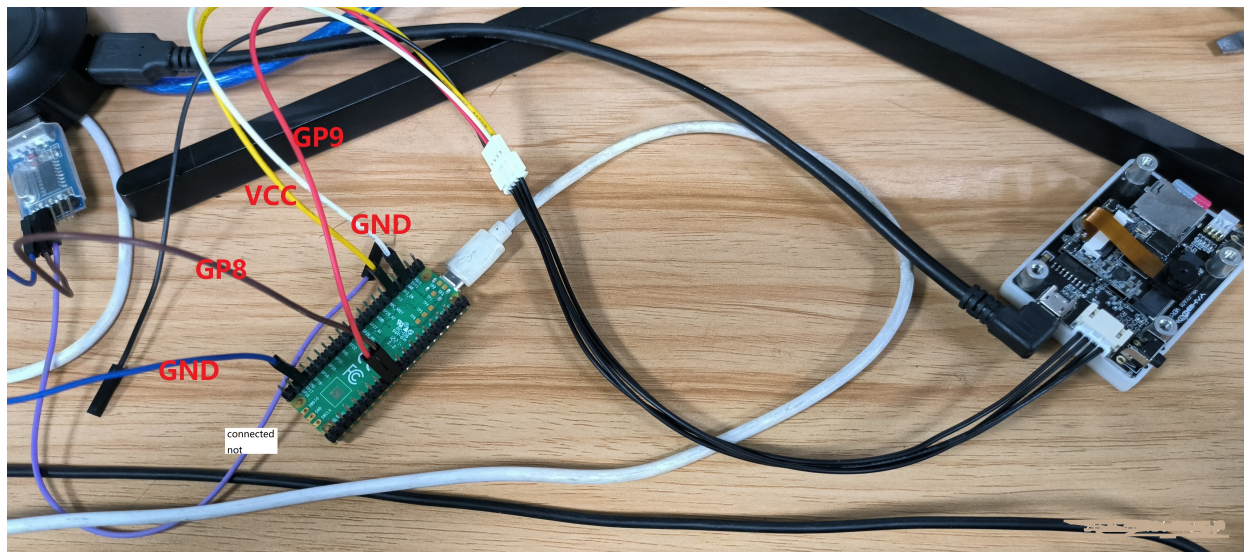

1.3 Main code parsing

```
u1 = UART(1, baudrate=115200, tx=Pin(8), rx=Pin(9), bits=8, parity=None, stop=0)

k210_data_class = 0
k210_data_x = 0
k210_data_y = 0
k210_data_w = 0
k210_data_h = 0
k210_data_id = 0
k210_data_msg = ""

while True:
    while u1.any() > 0:
        rxx=u1.read()
```

```

    #u1.write(rxx)
    recv_k210_data(rxx)

    if k210_data_class != 0:
        if k210_data_class == 3:
            sstr = "x="+str(k210_data_x)  +" y="+str(k210_data_y)  +"
w="+str(k210_data_w)  +" h="+str(k210_data_h)  +"\r\n"
            u1.write(sstr)
            u1.write(k210_data_msg+'\r\n')
            k210_data_class = 0

```

Obtained from the program

- k210_data_class :Routine number
- k210_data_x :It identifies the horizontal coordinate of the upper left corner of the box (range: 0-240)
- k210_data_y :It identifies the vertical coordinate of the upper left corner of the box (range: 0-320)
- k210_data_w :The width of the recognized box (range: 0-240)
- k210_data_h :The length of the recognized box (range: 0-320)
- k210_data_id :It's a recognized label
- k210_data_msg :It's the identified information

This processing mainly involves receiving a message from k210 and calling recv_ K210_ Data() for processing and assigning the processed information to k210_ Data_ Members of XXX.


Attention

If you want to develop for the second time, without changing the K210 program and data processing functions, directly call K210_ Data_ The variable of XXX is good (xxx: refers to x y w h id msg)

1.4 experimental phenomena

1. After connecting the cable, the K210 perspective module runs offline. Please check 【6.2 K210 as coprocessor】 -- 【ReadMe】

2. Set the serial port assistant to the interface shown in the figure

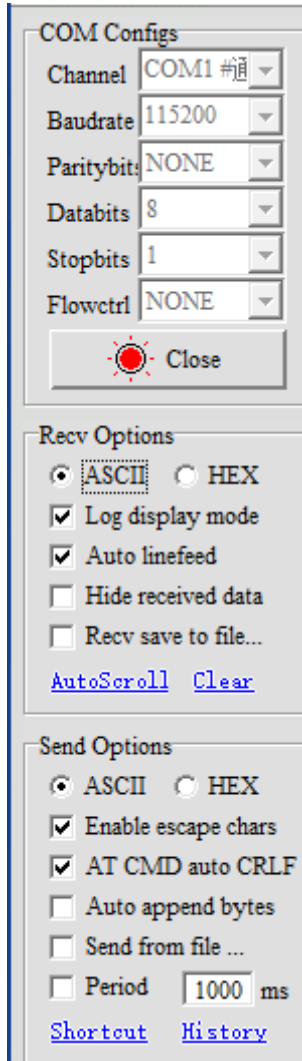

The image shows a serial port configuration window with three main sections: COM Configs, Recv Options, and Send Options.

COM Configs:

- Channel: COM1 #00
- Baudrate: 115200
- Paritybits: NONE
- Databits: 8
- Stopbits: 1
- Flowctrl: NONE
- Close button (with a red sun icon)

Recv Options:

- ☒ ASCII ☐ HEX
- ☒ Log display mode
- ☒ Auto linefeed
- ☐ Hide received data
- ☐ Recv save to file...
- [AutoScroll](#) [Clear](#)

Send Options:

- ☒ ASCII ☐ HEX
- ☒ Enable escape chars
- ☒ AT CMD auto CRLF
- ☐ Auto append bytes
- ☐ Send from file ...
- ☐ Period: 1000 ms
- [Shortcut](#) [History](#)

3. Download Pico's Python firmware into Pico and run the QR code recognition program provided in this tutorial. How to run Pico's Python program? Please refer to the Pico related environment building tutorial, which will not be elaborated in this tutorial

4. Then k210 runs the relevant routines, and the serial assistant will print out the important information transmitted by k210 to Pico. The phenomenon shown in the following figure is the result of color recognition

```
x=35, y=0, w=198, h=195
str = hello world
x=34, y=1, w=195, h=195
str = hello world
x=32, y=7, w=195, h=197
str = hello world
x=37, y=8, w=192, h=191
str = hello world
x=39, y=9, w=193, h=192
str = hello world
x=42, y=11, w=188, h=192
str = hello world
x=43, y=10, w=189, h=190
str = hello world
x=43, y=12, w=189, h=187
str = hello world
x=55, y=19, w=187, h=189
str = hello world
x=60, y=22, w=187, h=188
str = hello world
x=61, y=23, w=186, h=189
str = hello world
x=61, y=26, w=184, h=185
str = hello world
x=60, y=24, w=185, h=187
str = hello world
x=56, y=21, w=190, h=185
```

This routine only outputs data for these four members of x\y\w\h