

TCP/IP

TCP/IP, or Transmission Control Protocol/Internet Protocol, is one of the most fundamental communicative protocol on Internet, which stipulates the standard and methods of the Internet communication. Users can control robotic arms remotely through connecting with IP address instead of the USB port.

In this chapter, myCobot 280 M5 is used as an example for explanation.

Make sure that M5Stack-basic and Atom are both burnt before using.

Connection

1.1 WIFI

Follow the steps below.

Step 1: Press WLAN Server, and "WIFI Connecting" appears, signaling that the robotic arm is connecting with WIFI.





Step 2: If the screen shows WIFI Connected, IP and Port, it means that robotic arm is successfully connected with WIFI.



1.2 Mobile Network

Step 1: It is required to change the name of hotspot on your smartphone into the same as that on the robotic arm, namely "MyCobotWiFi2.4G". Meanwhile, change the password of hotspot as "mycobot123".

17:18



[General](#)

About

Name MyCobotWiFi2.4G >

iOS Version 16.0 (20A362) >

Model Name

Model Number

Serial Number

Coverage Expired >

Network

Songs

Videos

Photos

Applications

Capacity

Available



17:18

4G 

Settings **Personal Hotspot**

Personal Hotspot on your iPhone can provide Internet access to other devices signed into your iCloud account without requiring you to enter the password.

Allow Others to Join



WLAN Password

mycobot123 >

Allow other users or devices not signed into iCloud to look for your shared network "MyCobotWiFi2.4G" when you are in Personal Hotspot settings or when you turn it on in Control Center.



TO CONNECT USING WLAN

- 1 Choose "MyCobotWiFi2.4G" from the WLAN settings on your computer or other device.
- 2 Enter the password when prompted.



TO CONNECT USING BLUETOOTH

- 1 Pair iPhone with your computer.
- 2 On iPhone, tap Pair or enter the code displayed on your computer.
- 3 Connect to iPhone from computer.



TO CONNECT USING USB

- 1 Plug iPhone into your computer.

2 Choose iPhone from the list of network services in your settings.

Step 2: Press WLAN Server to connect with mobile network.



Notice: If it fails to connect, go back to press USB UART and then try the steps above again.


1.3 Solution to Failed Connection

Step 1: Update the version of Atom and M5Stack-basic to the minirobot v2.0 and atommain v4.1.


Step 2: Click on the icon to open the software UartAssist.exe.




Step 3: Click on "取消".

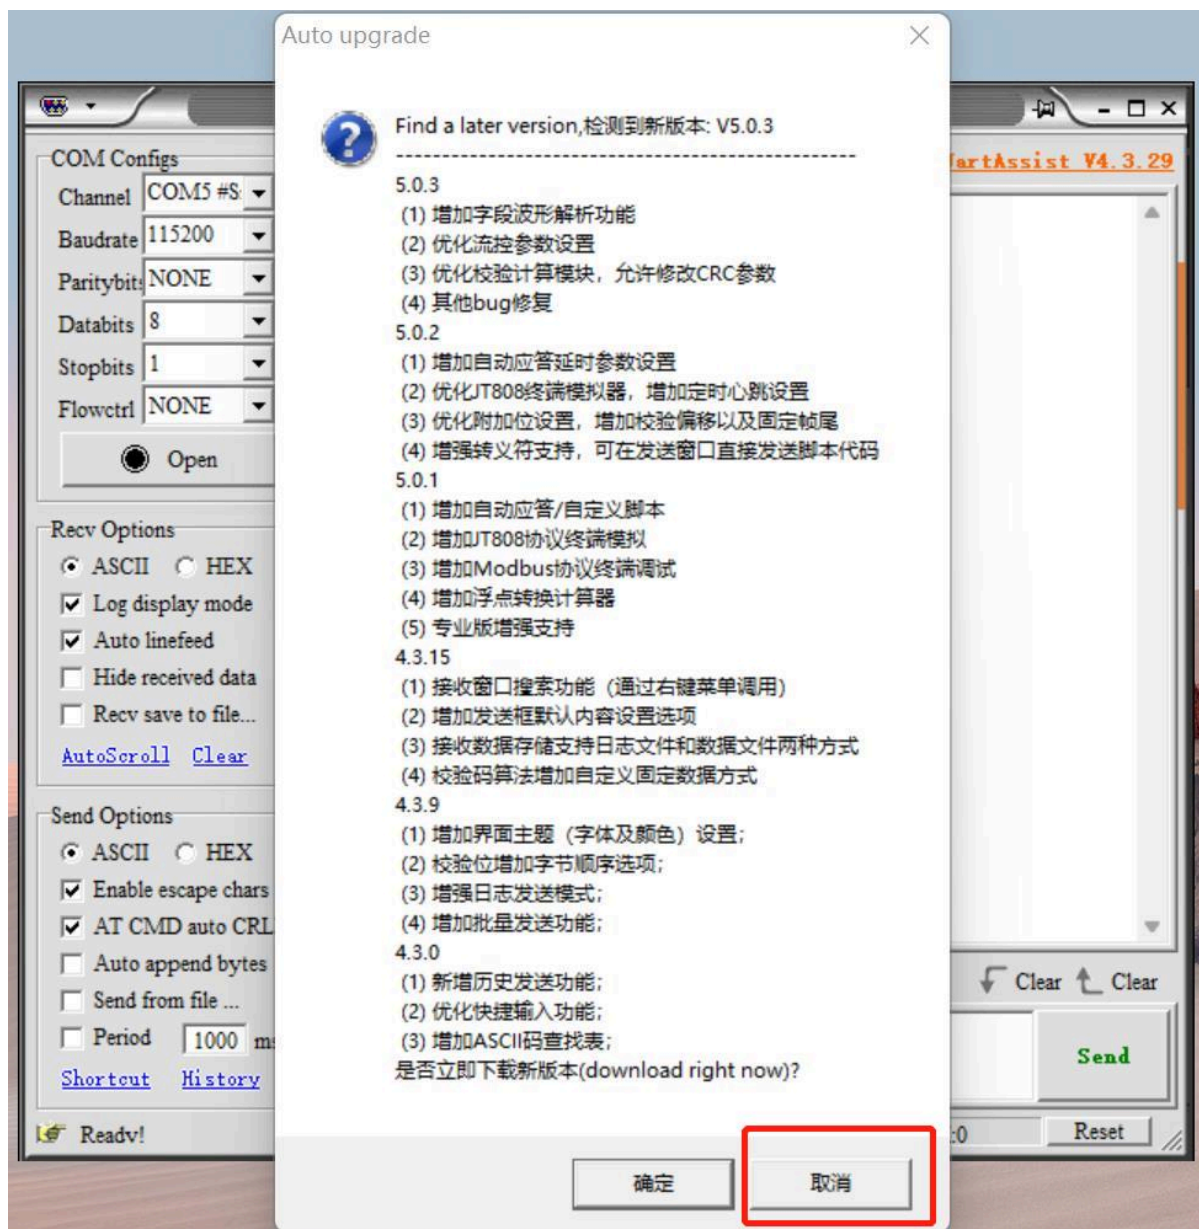

Step 4: Click on History, and then BatchSend. After that, right-click in the white space, and then New to add a data item.

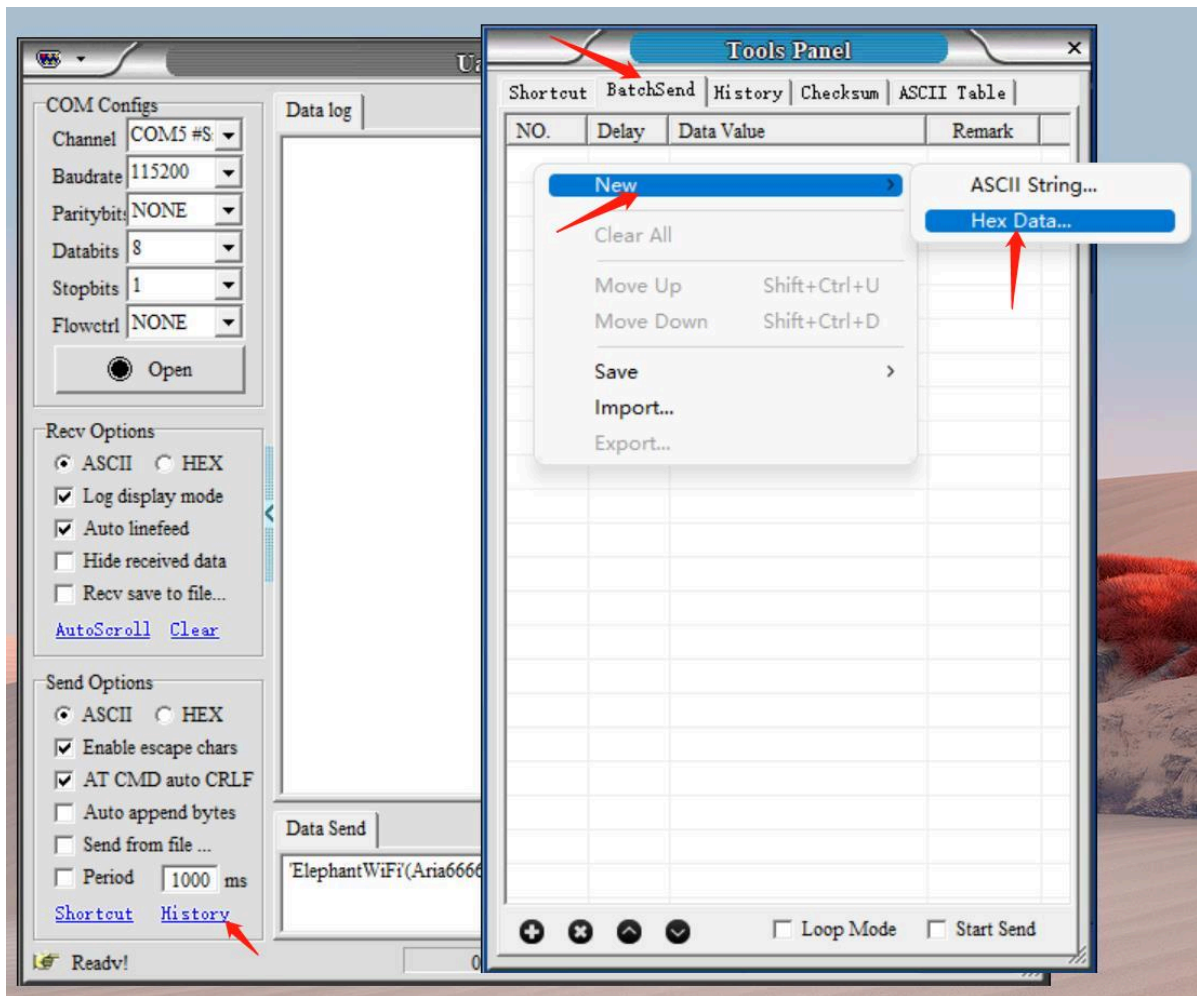


Step 5: Add a data item according to the settings shown in the figure below. And then, save that item.

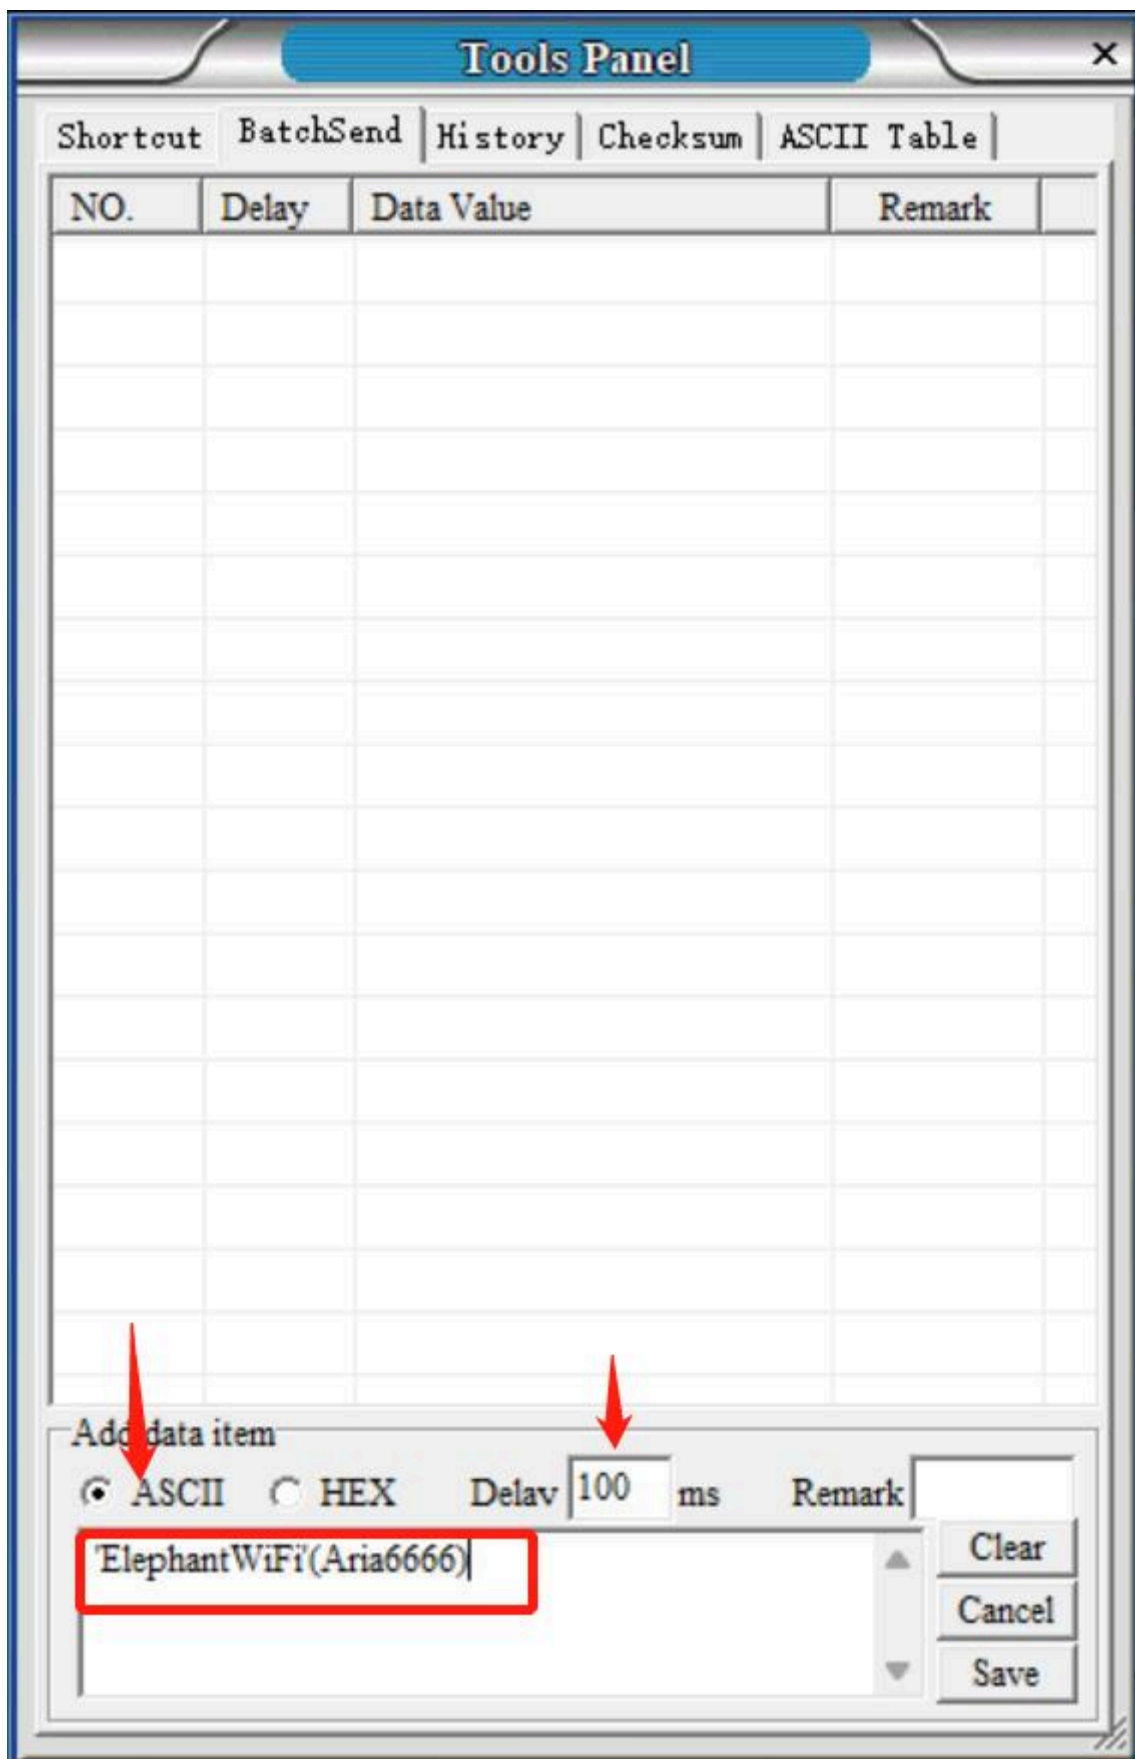

Step 6: Press **Transponder** on the M5Stack-basic and then press USB UART.

Step 7: Set COM configurations, and then click on "Open". After that, click on "Start Send".

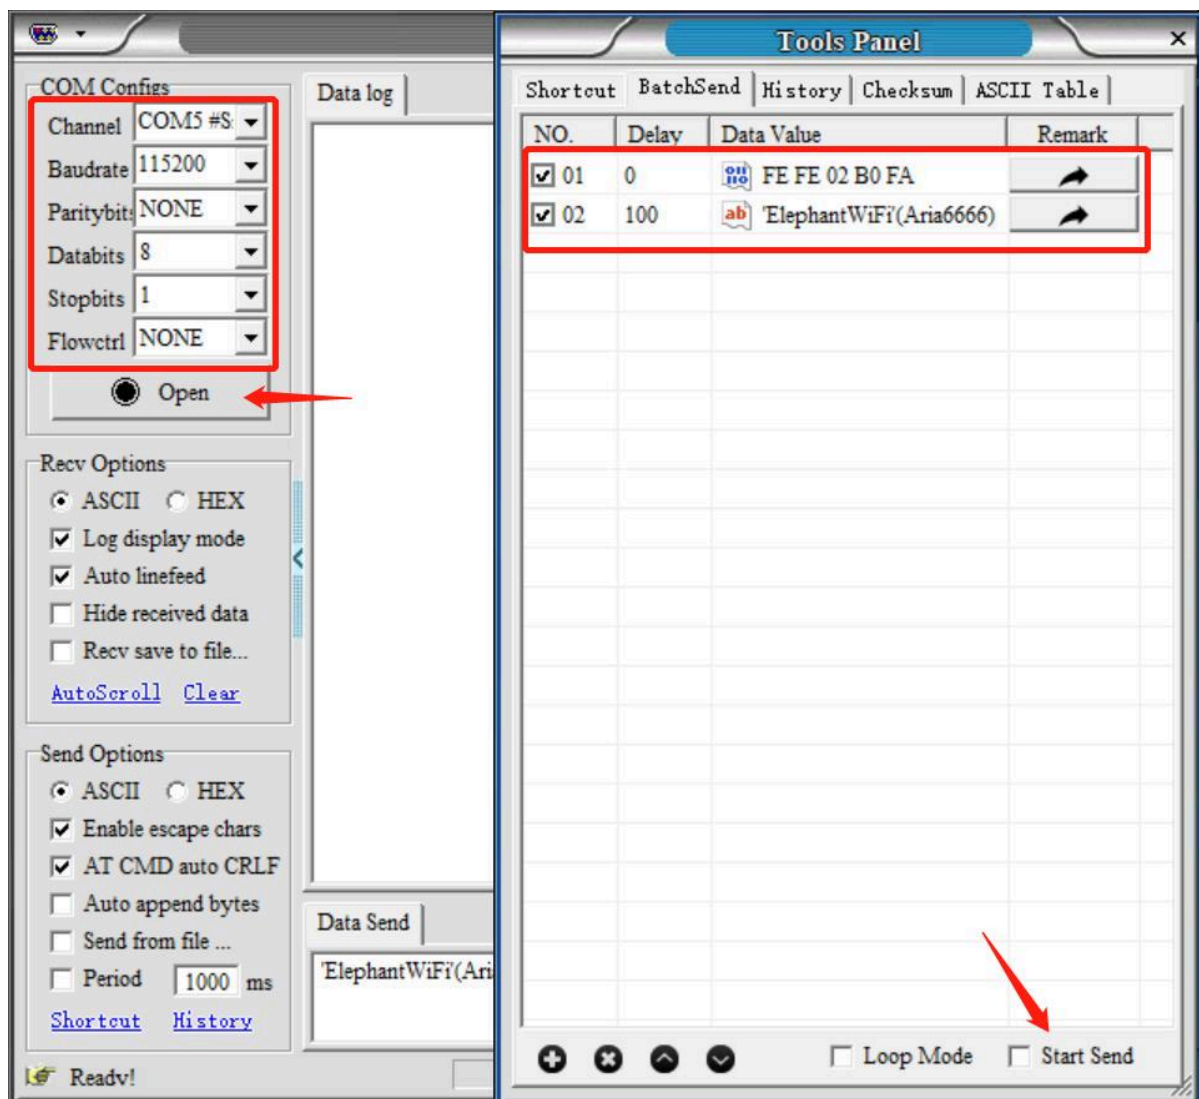

Step 8: After sending the data items, there is a response.



Step 9: Press WLAN Server on the M5Stack-basic to connect successfully.

ElephantWiFi

WIFI Connected

IP: 192.168.11.15

Port: 9000

ReConnect

Exit

