

Control RGB light panel

Preparation before you begin


- Make sure the robotic arm is connected to the computer
- Make sure the machine is normal
- Make sure the machine is power on

Learning content of this chapter

How to control RGB light panel using myBlockly

API introduction

- method module: `Set_color`

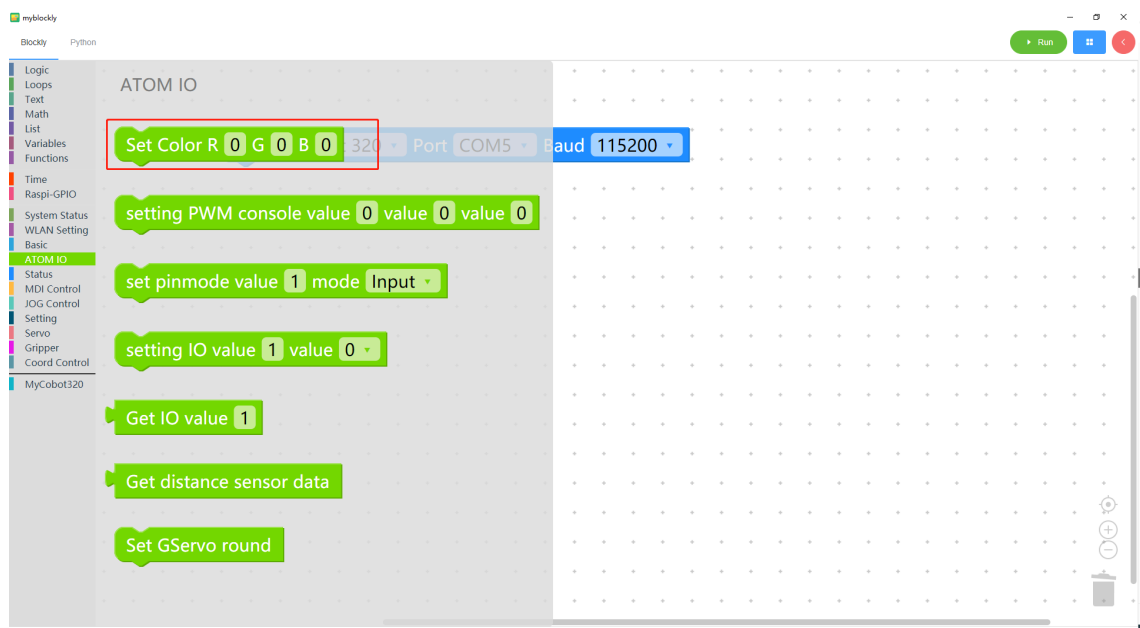

- Parameter introduction:
 - The parameters that need to be set are R (x), G (x), and B (x). Different values represent different colors.
 - Parameter range (for details, please refer to the RGB parameter table):

*

R: 0~255


G: 0~255

B: 0~255

- Purpose: Control the color of RGB light panel.

Simple demonstration

The graphics code is as follows:

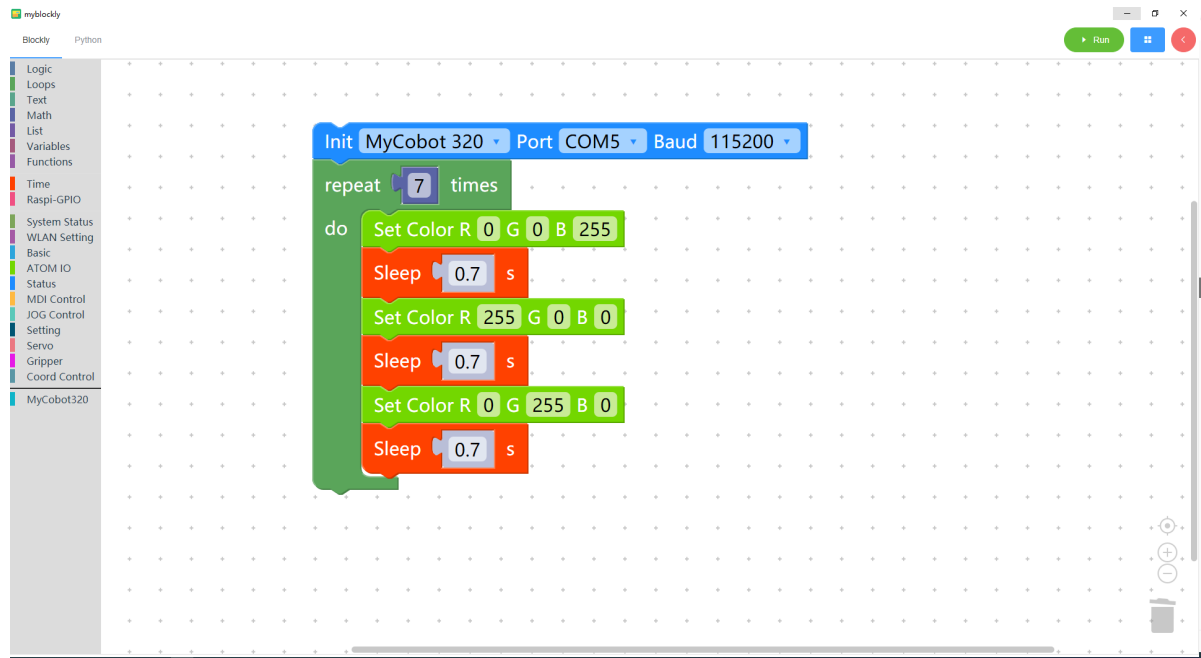

- What is implemented:

The color of the robotic arm RGB light panel is controlled to change sequentially from "blue-red-green", and the whole process is cycled seven times.