

Control the robotic arm to return to the origin

Preparation before you begin


- Make sure the robotic arm is connected to the computer
- Make sure the machine is normal
- Make sure the machine is power on

Learning content of this chapter

How to use myBlockly to control the robot arm to return to the origin

API introduction

- Method module: `Set angle`

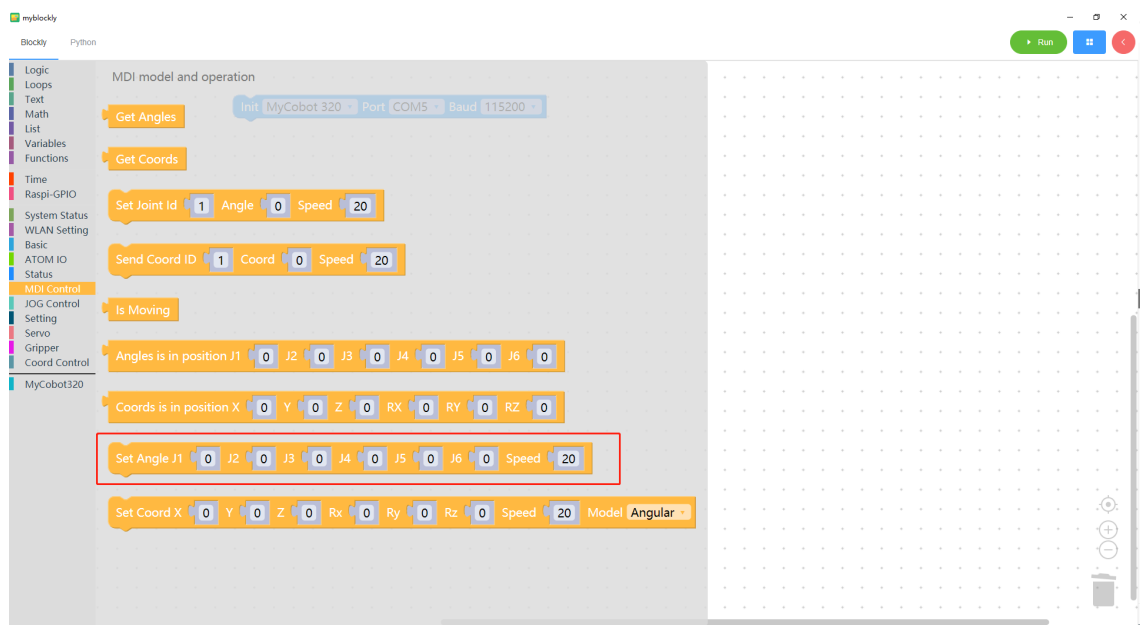


- Parameter introduction:

This module has two parameters that can be adjusted:

- Joint angle parameters: If the robot arm returns to the origin, all joint angle parameters need to be set to 0
 - Speed parameter: 0-100
- Purpose: Control the robotic arm and return the angles of all axes of the robotic arm to the origin (angle is 0)

Simple Demonstration

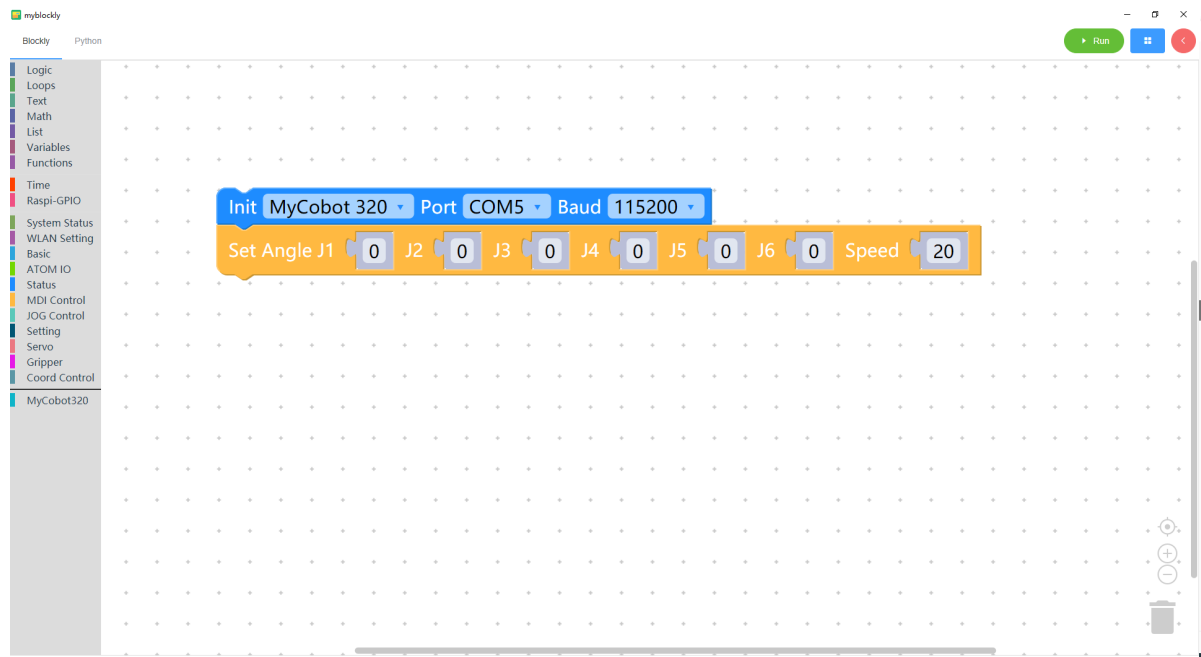

- Implementation content: Control the movement of the robotic arm to return to the origin, so that the angles of all axes of the robotic arm are 0