


Burn and update firmware

Customers get the machine does not need to be burned in non-essential cases, the factory has already been burned, only a few cases need to be burned.


For example: minirobot corresponding to the need to burn the scene of the LCD screen does not light up, burn the Arduino program needs to be switched to python program control, Atom firmware corresponding to the need to burn the scene of the joints can not be locked, Atom lights do not light up and so on.

Burn Atom firmware


Step 1: Connect to PC. Connect the Atom at the end with USB.

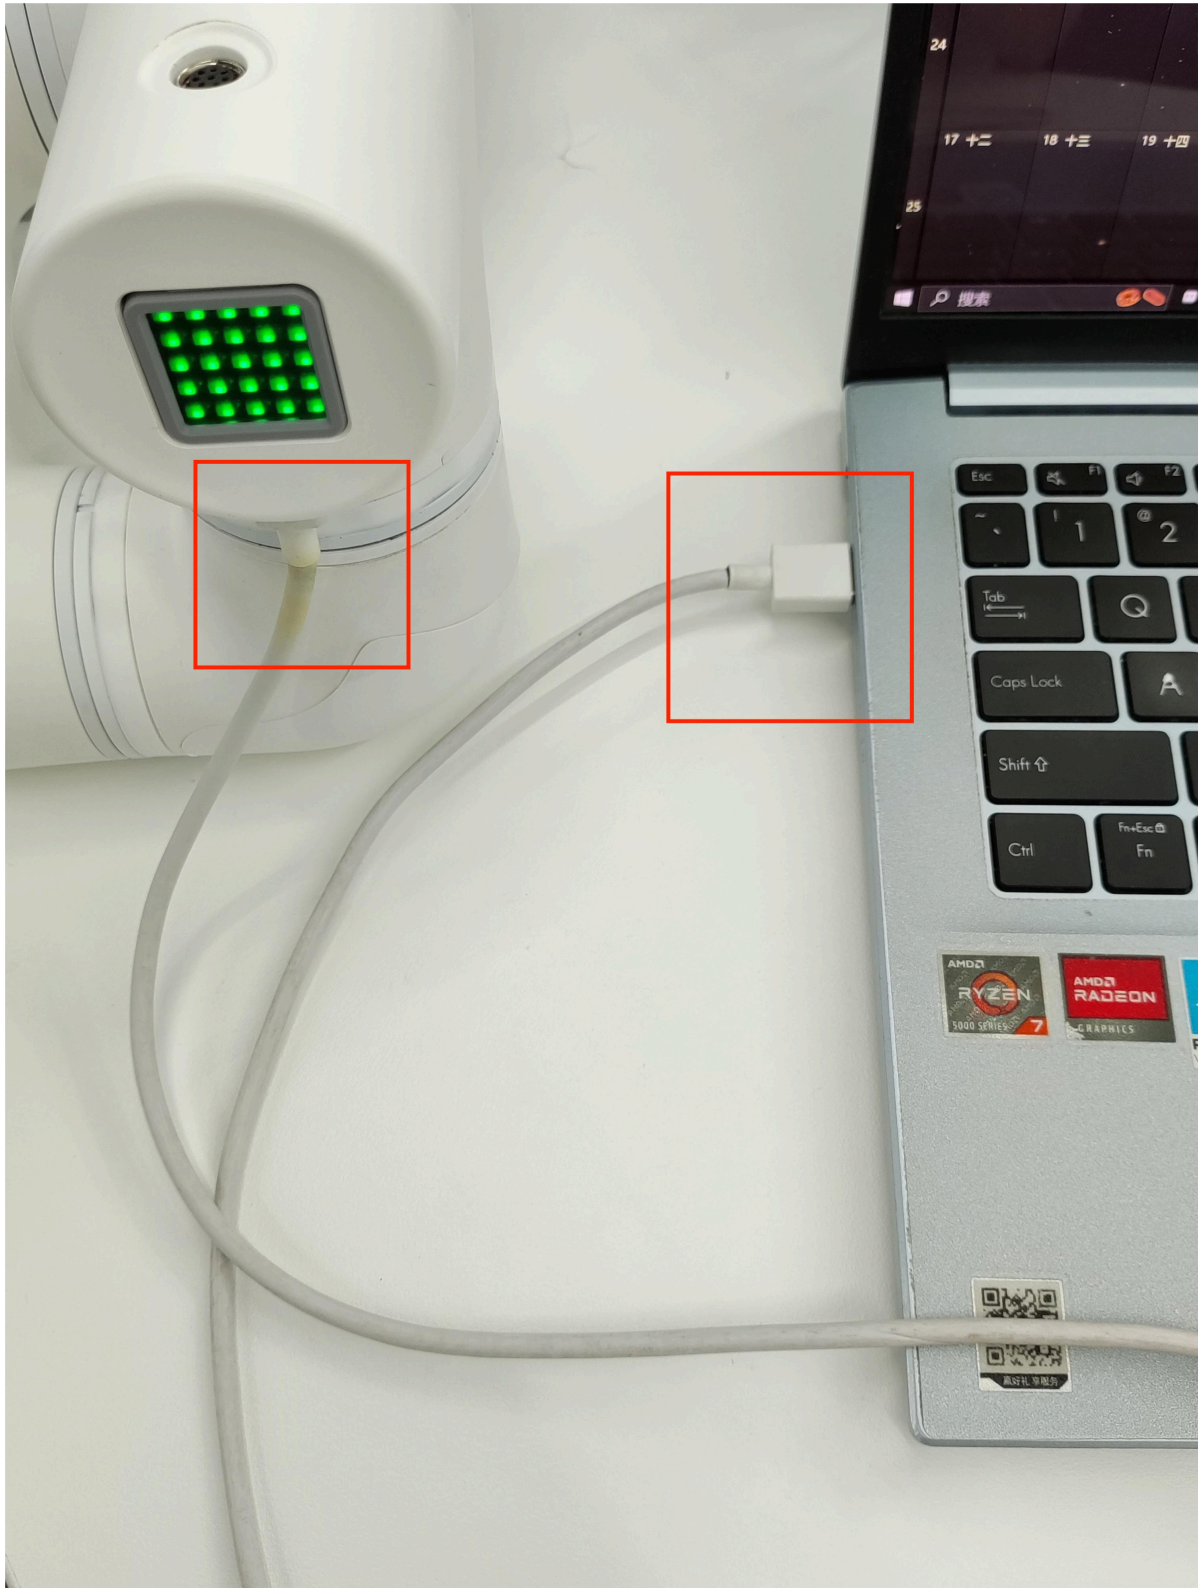


Step 2 :Select Robot myCobot 320 M5

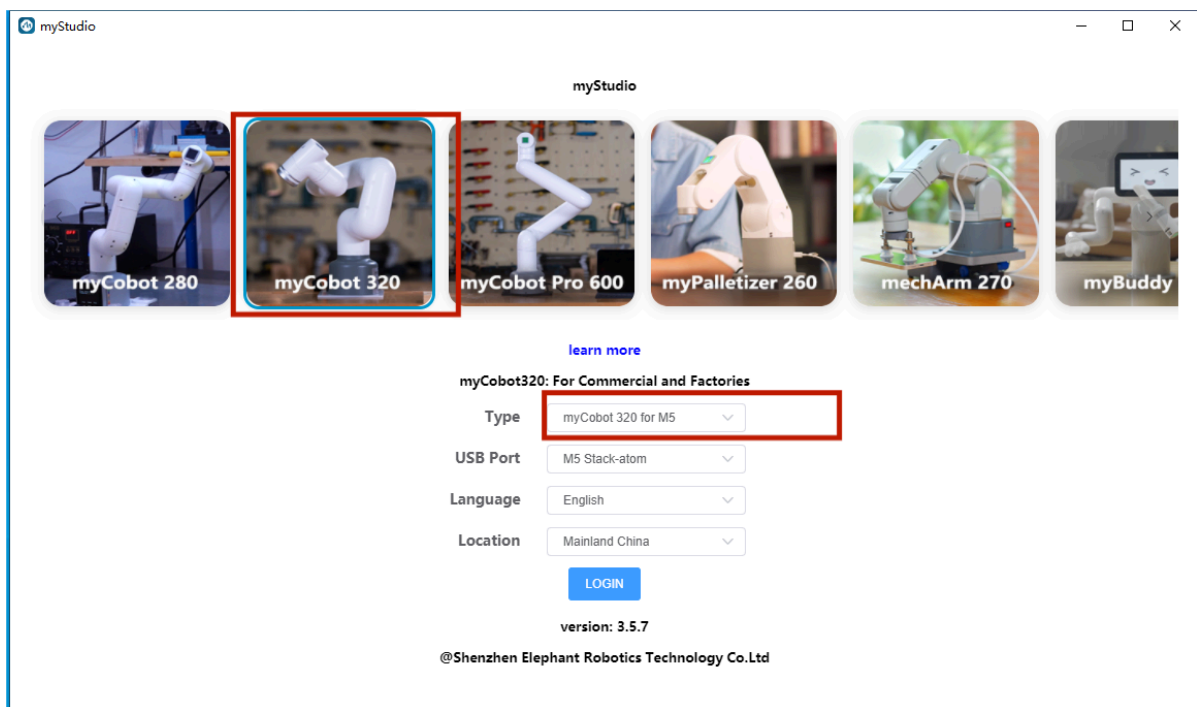

Step 2: Select **ATOM** in the **Board** column, and the Atom firmware will appear in the sidebar **Basic**. There is only one firmware for Atom, just click to **Download** it in.

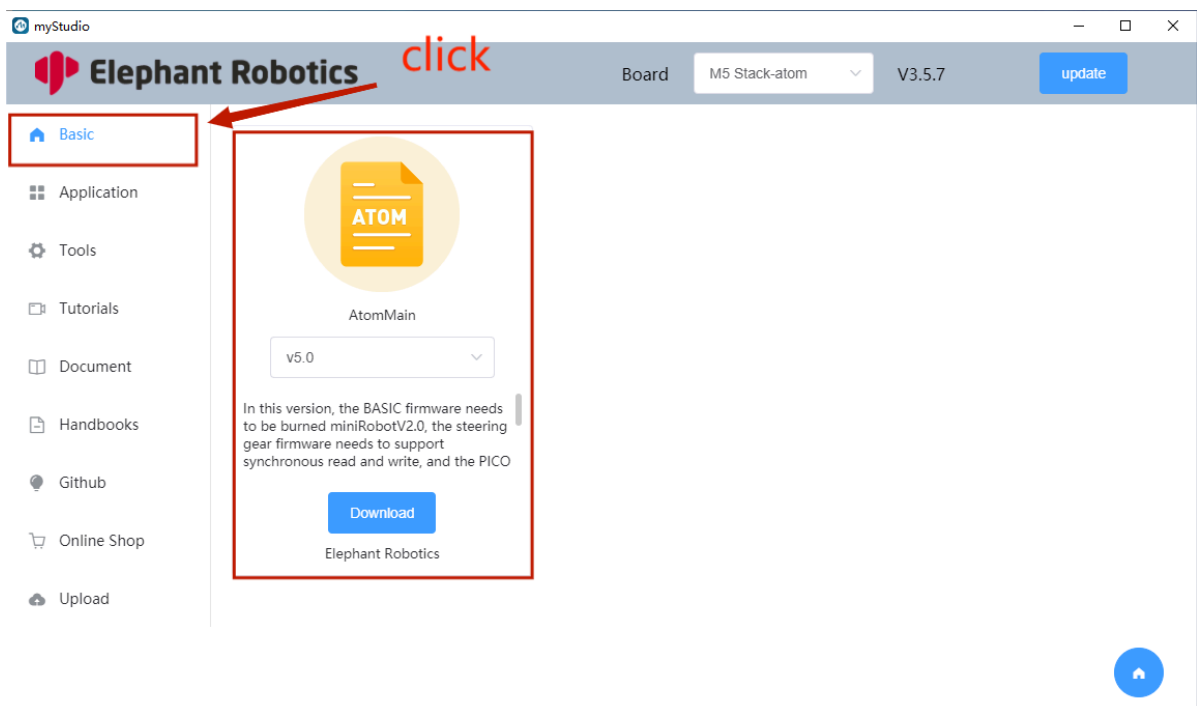


Step 3: After download finish, click the **Flash** button to start burn.

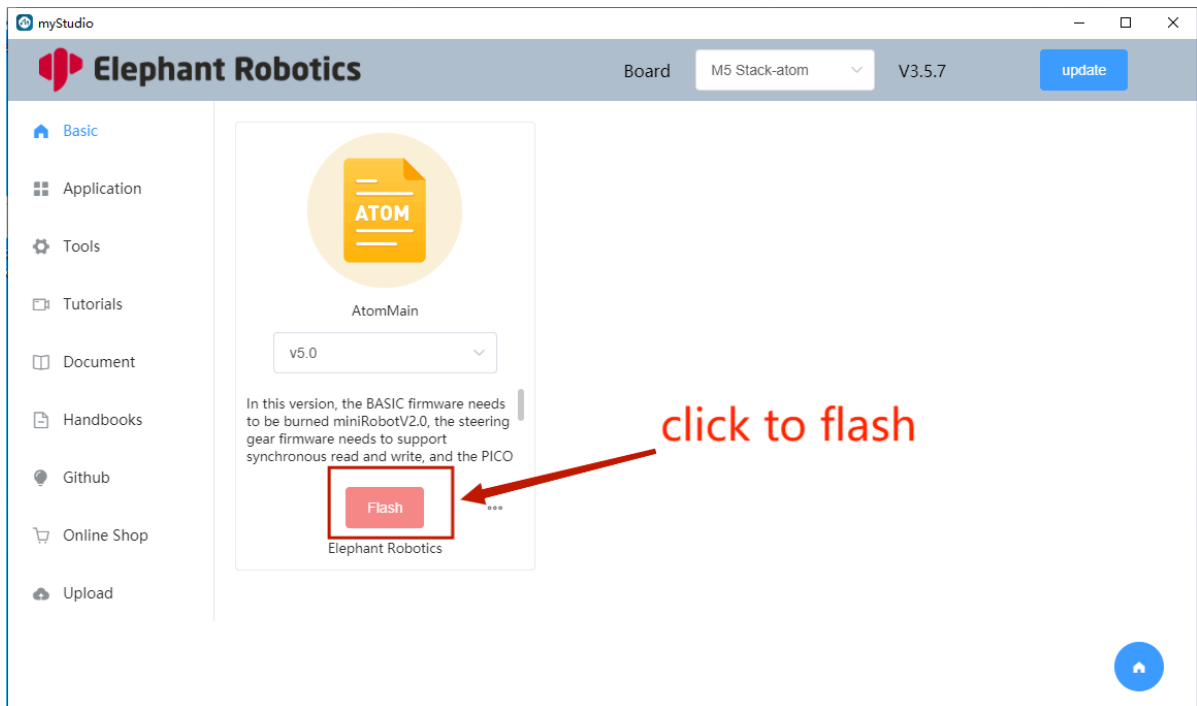


Burning M5Stack-Basic firmware——minirobot


Step 1: Connect M5Stack-Basic to PC.

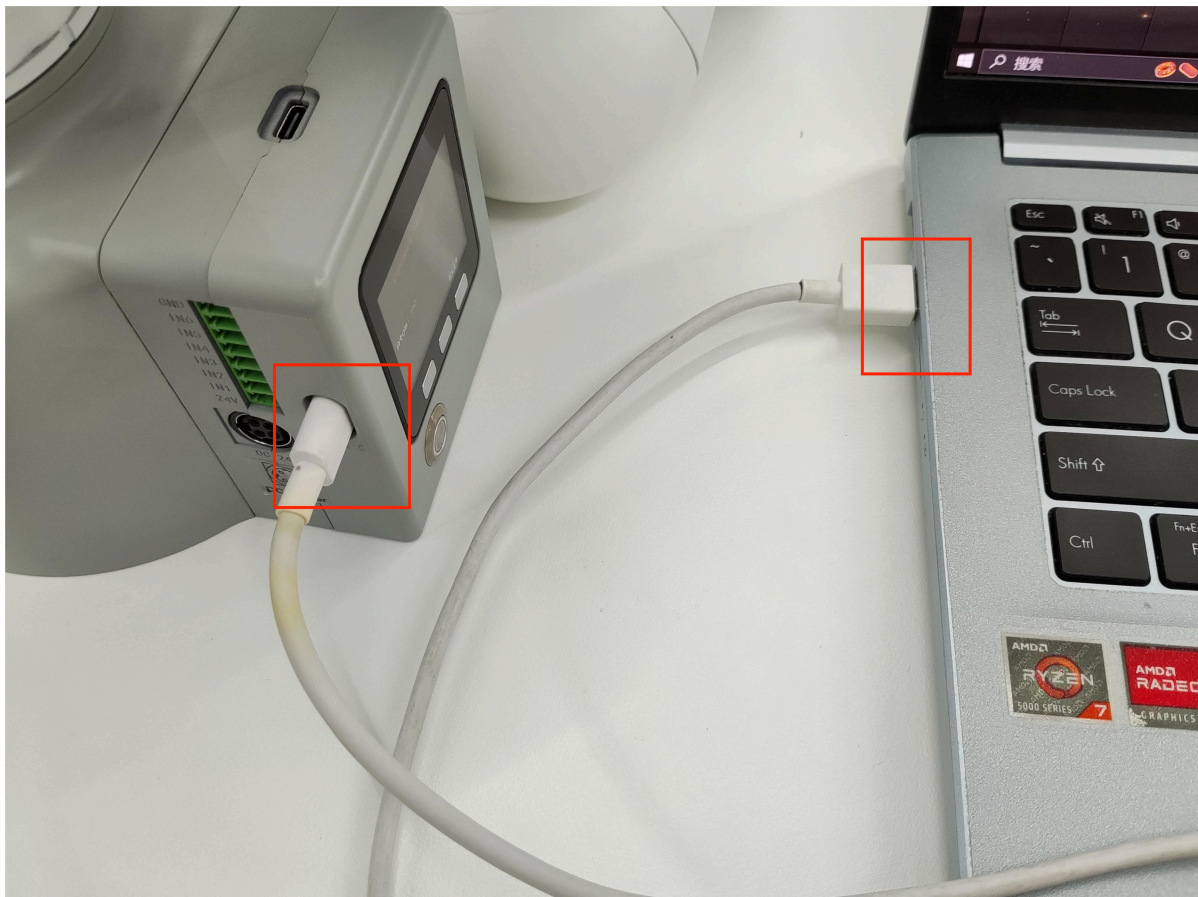


Step 2 :Select Robot myCobot 320 for M5 ,and click LOGIN button.

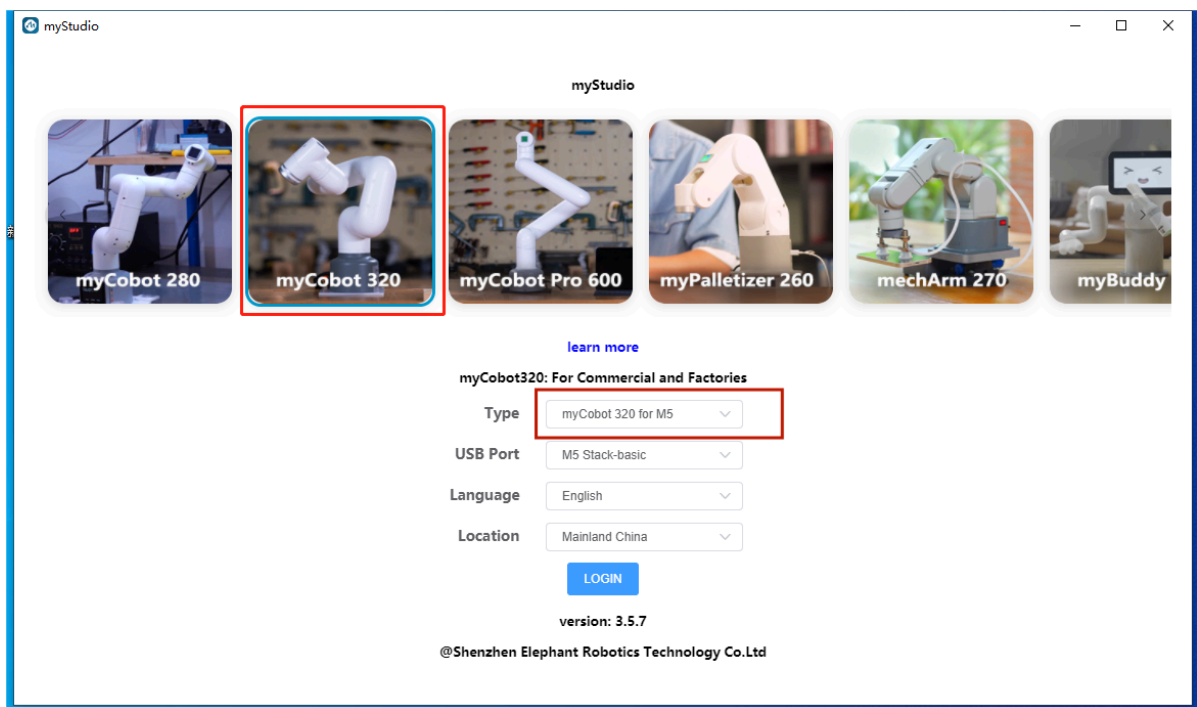


Step 3: After logging in, click **Basic**

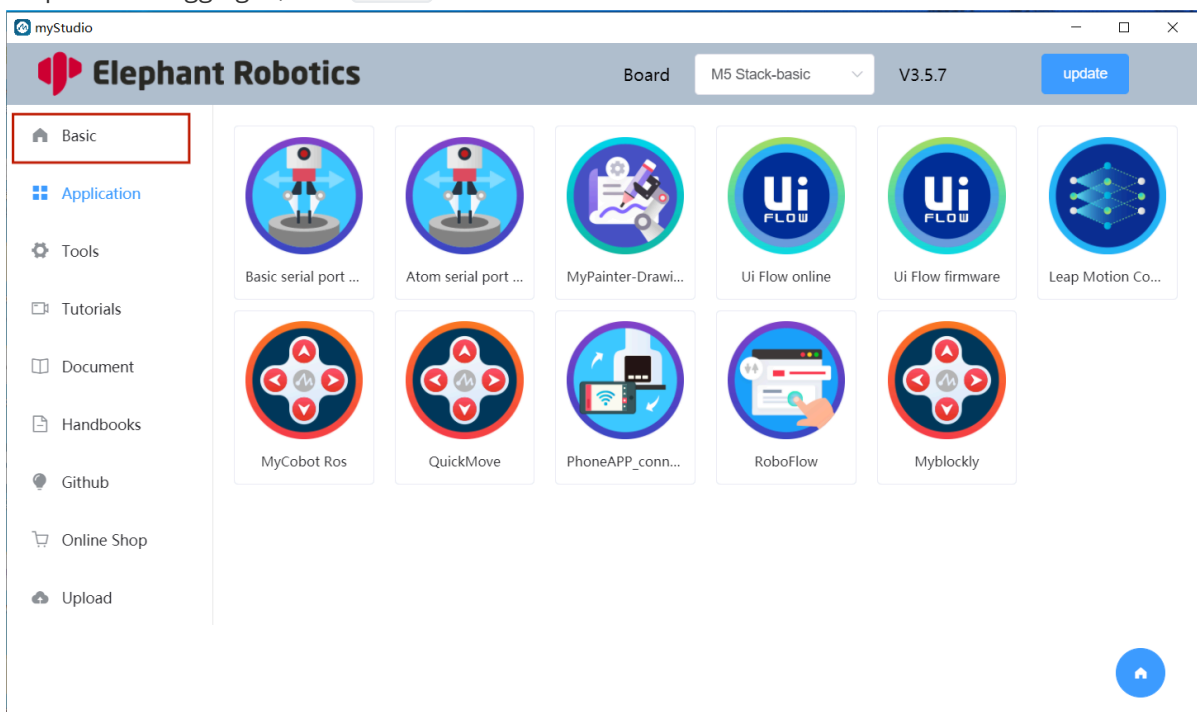


Step 4: click **Download**

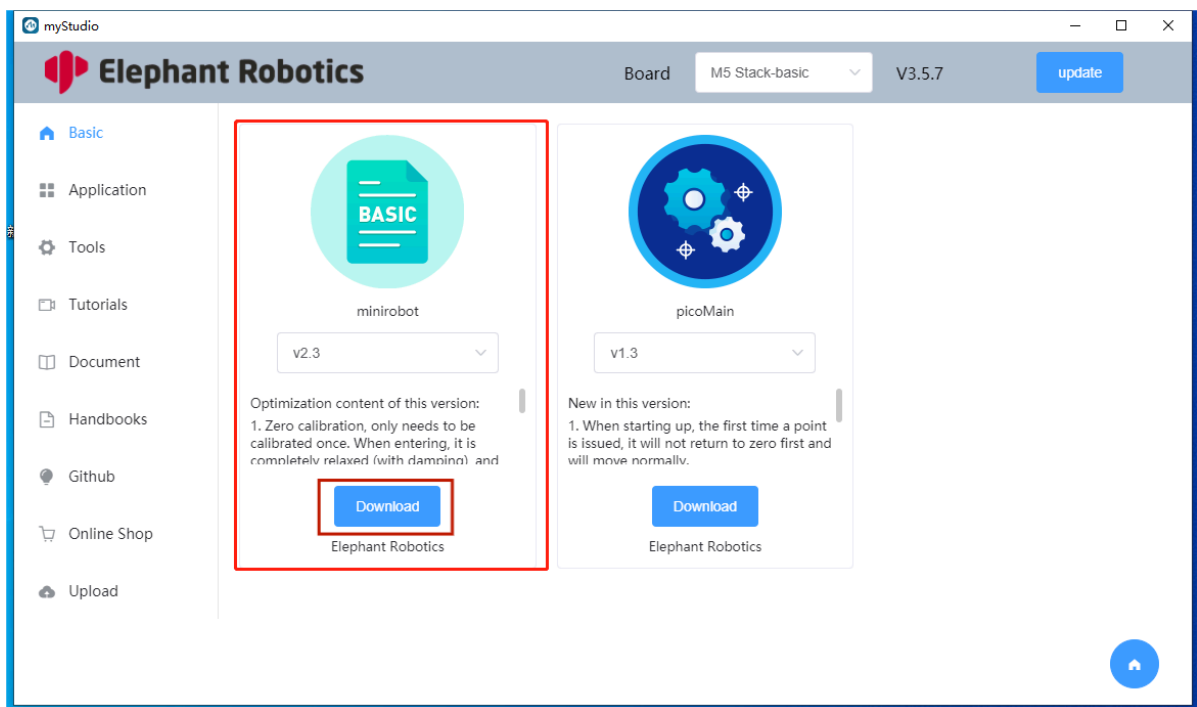

Step 5: click **ok**

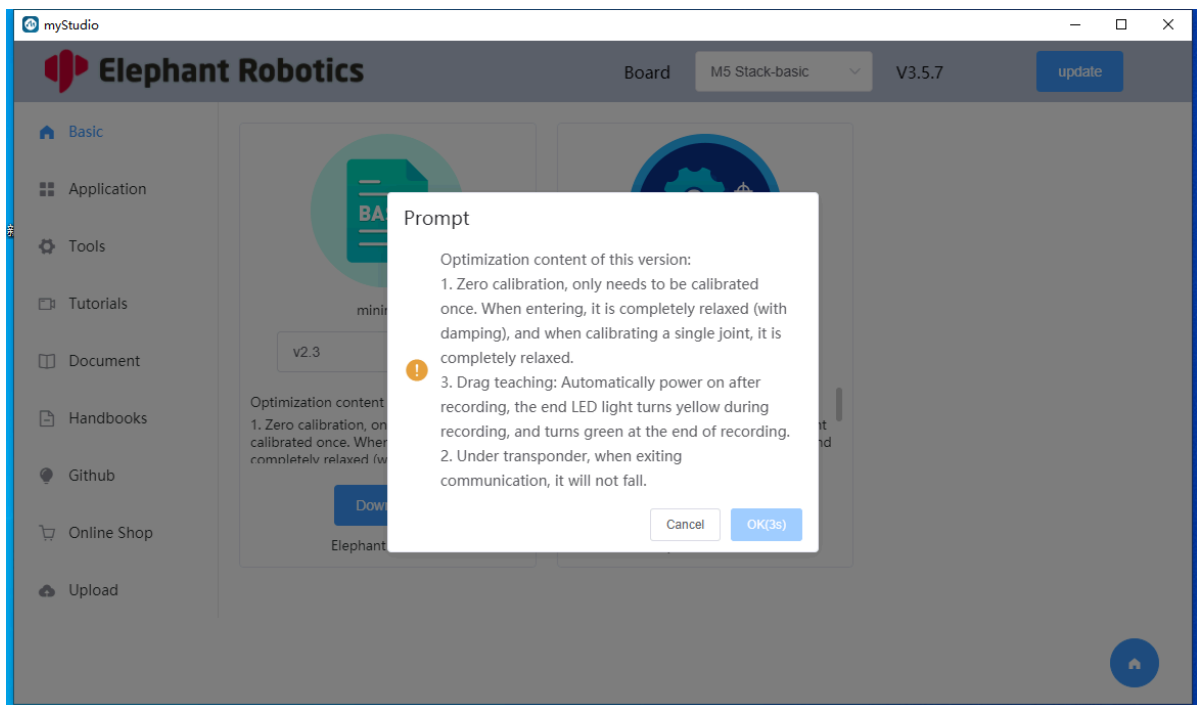


Step 5: click **Flash**

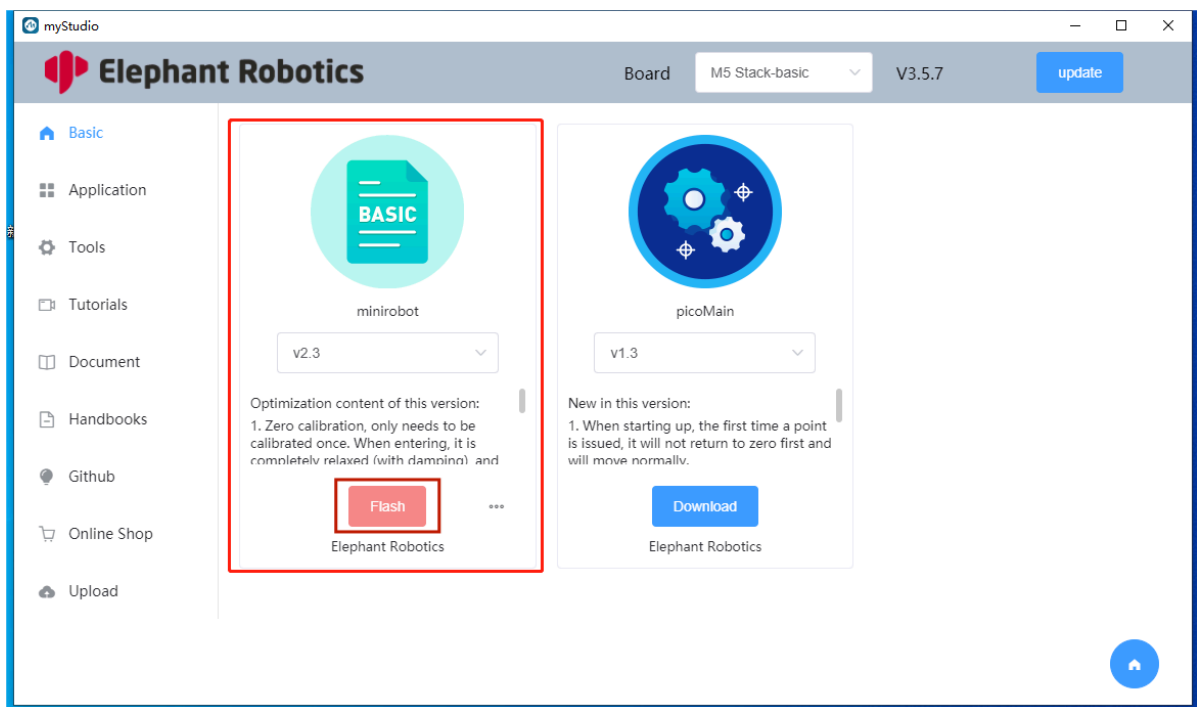

Burn pico firmware——picoMain

Step 1: Connect M5Stack-Basic to PC.



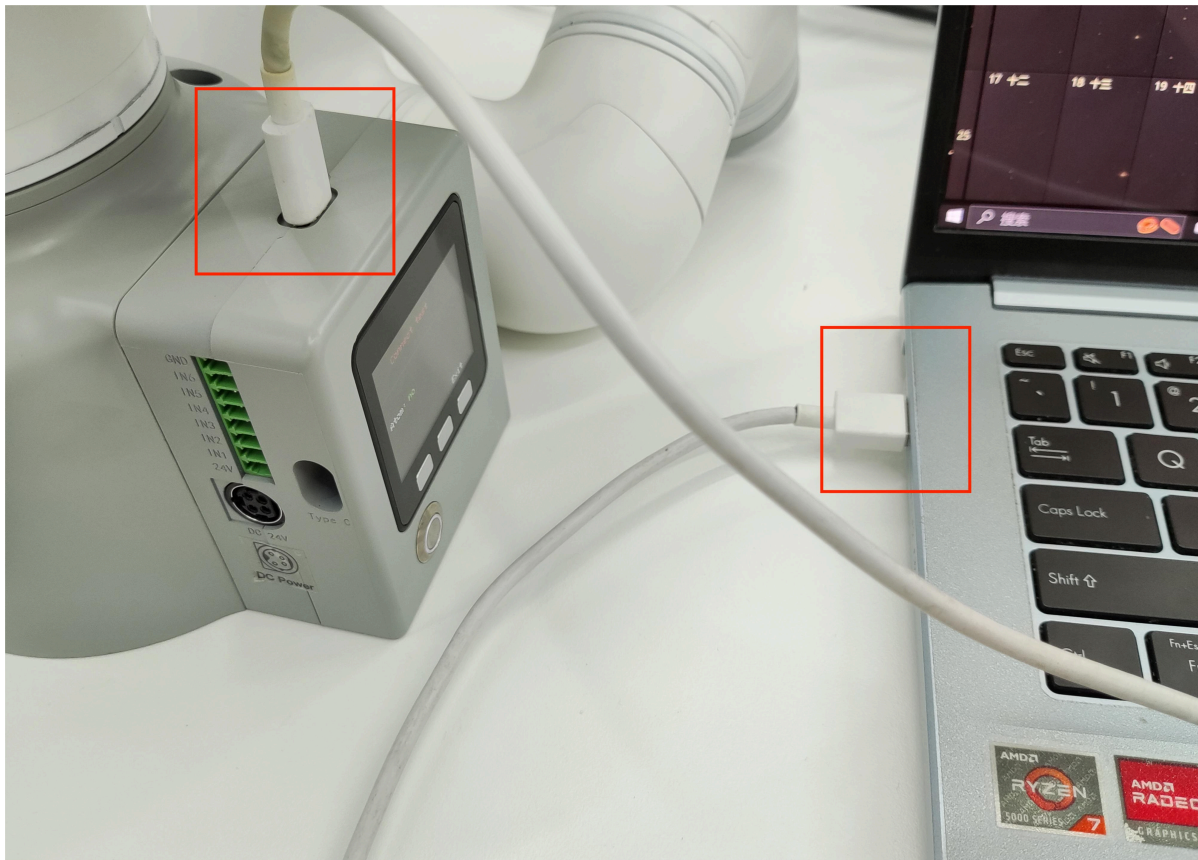


Step 2: Select Flash mode in the robot arm base (you can choose to press the **UP** key once or the **Down** key four times), and then the base will sleep with a black screen for about 30 seconds.




Step 3: Enter the myStudio firmware burning page and select **picoMain** firmware burning.

Note: To burn the pico firmware, you need to select Flash mode, that is, to burn in the sleep state. If the sleep time is exceeded, the base display will restart and then burning the pico firmware will fail. Step 2: Step 2 :Select Robot **mycobot 320** for **M5**,and click **LOGIN** button.


Step 4: Select Robot **mycobot 320** for **M5**,and click **LOGIN** button.

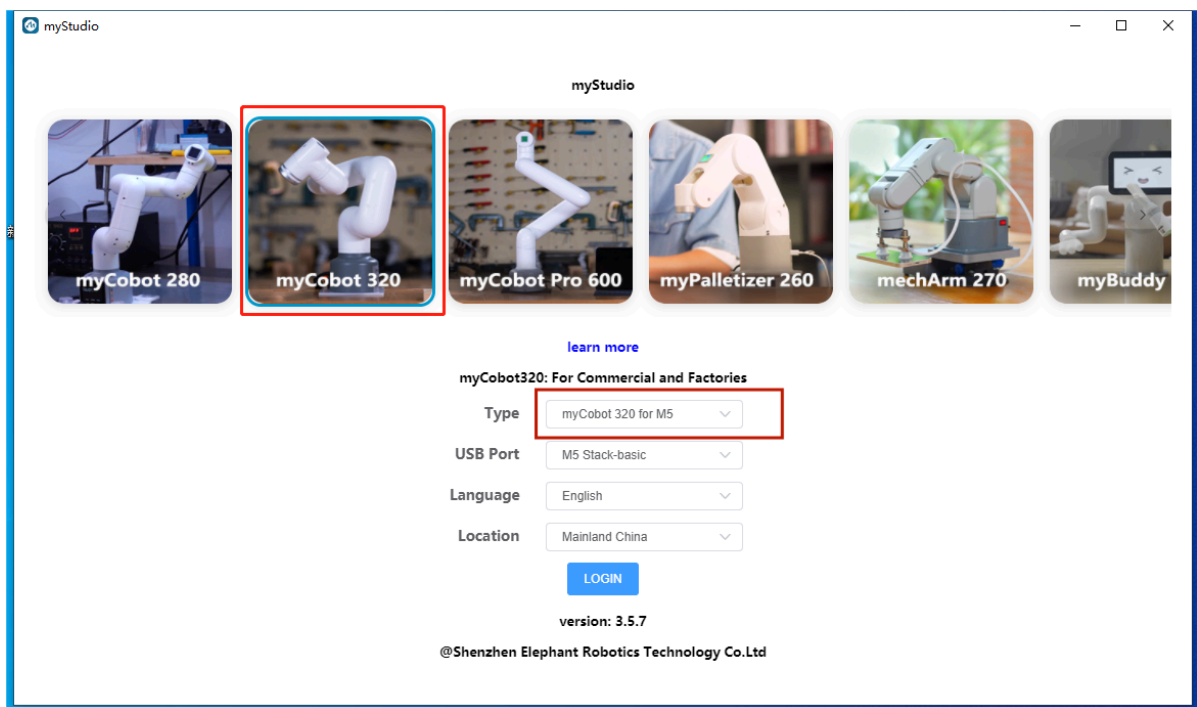

Step 5: After logging in, click **Basic**

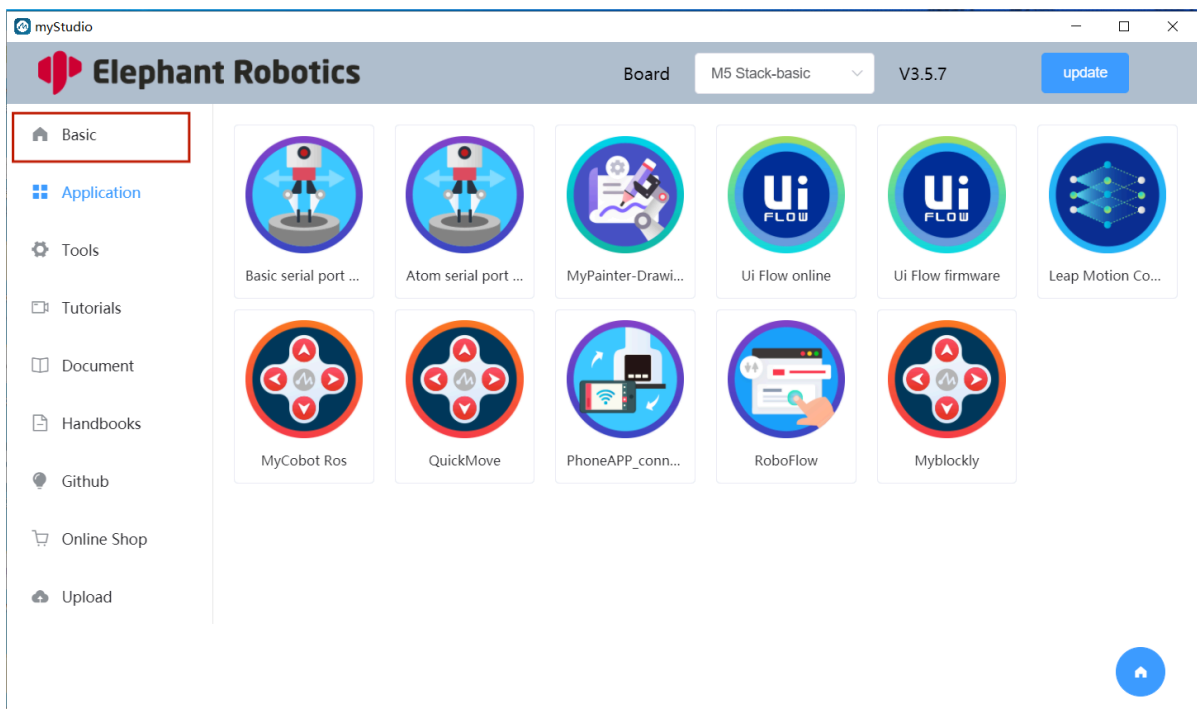

Step 6: click **Download** and click **Flash** to burn.

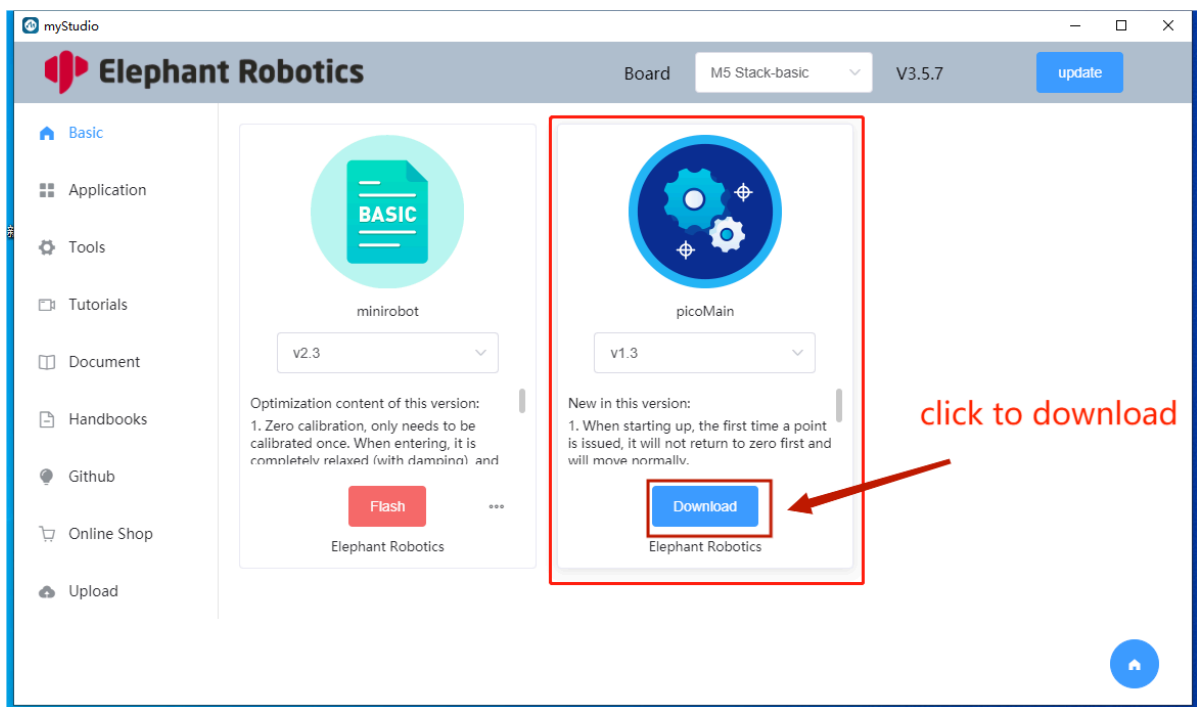

Step 7: click **Flash** to burn.

