

PREFACE

Thank you for selecting a Hero MotoCorp **Splendor Plus**. We wish you many miles of continued riding pleasure in the years ahead.

We, at Hero MotoCorp, are committed to demonstrate excellence in our environment performance on a continual basis, as an intrinsic element of our corporate philosophy. To achieve this we commit ourselves to continue product innovations to improve environment compatibility, comply with all applicable legislation including environment legislation and strengthen the green supply chain.

Your motorcycle is conforming to latest (Bharat Stage-III norms) regulation for emission, safety & noise levels. We are also using non asbestos brake shoes and engine gaskets which are environment friendly in nature.

This booklet is your guide to the basic operation and maintenance of your new Hero MotoCorp **Splendor Plus**. Please take time to read it carefully. As with any fine machine, proper care and maintenance are essential for trouble-free operation and optimum performance.

Your Authorised Hero MotoCorp dealer will be glad to provide further information or assistance and is equipped to handle your future service needs.

Let us make this world a safer, healthier and more environment friendly place.


NOTE

ALL INFORMATION, ILLUSTRATION, PHOTOGRAPH, DIRECTIONS, SPECIFICATIONS AND OTHER CONTENTS COVERED IN THIS OWNER'S MANUAL ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF ITS PRINTING APPROVAL, AND THE ACCURACY OR CORRECTNESS OF THE SAME IS NOT UNDERTAKEN OR GUARANTEED. Hero MotoCorp Limited. RESERVES THE RIGHT TO MAKE CHANGES IN ITS CONTENTS AT ANY TIME WITHOUT NOTICE AND/OR INCURRING ANY OBLIGATION, WHATSOEVER. NO ONE IS ALLOWED TO REPRODUCE ANY PART OF THIS PUBLICATION WITHOUT OBTAINING PRIOR WRITTEN PERMISSION FROM Hero MotoCorp Limited.

CONTENTS

	Pg. No.		Pg. No.
MOTORCYCLE IDENTIFICATION	1	• MAINTENANCE SCHEDULE	23
PRODUCT SPECIFICATION	2	• OIL SCREEN FILTER/ CENTRIFUGAL FILTER	25
SAFE RIDING TIPS	4	• SPARK PLUG	26
TIPS FOR HEALTHY ENVIRONMENT	5	• AIR CLEANER	27
DESCRIPTION	6	• THROTTLE OPERATION	28
PARTS FUNCTION	9	• VALVE CLEARANCE	29
• INSTRUMENTS & INDICATORS	9	• CARBURETOR	30
• IGNITION SWITCH	10	• CLUTCH	30
• LEFT HANDLEBAR CONTROLS	11	• DRIVE CHAIN	32
• STEERING LOCK	11	• FRONT BRAKE	34
• FUEL VALVE	12	• REAR BRAKE	35
• FUEL TANK	13	• BATTERY	38
ENGINE OIL	14	• STOP LAMP SWITCH	40
ENGINE OIL TOP UP PROCESS	14	• HEADLAMP ADJUSTMENT	40
ENGINE OIL REPLACEMENT PROCESS	15	• SUSPENSION	41
TYRES	16	• FRONT WHEEL REMOVAL	41
PRE-RIDE INSPECTION	18	• REAR WHEEL REMOVAL	43
STARTING THE ENGINE	19	• WASHING THE MOTORCYCLE	45
RIDING	20	• CATALYTIC CONVERTER	46
BRAKING	21	• AIR SUCTION VALVE	46
UTILITY BOX	21	BASIC TROUBLE SHOOTING	47
TOOL KIT / FIRST AID KIT	22	ROAD SIGNS	49
MAINTENANCE	23	WARRANTY DETAILS	
		HERO GENUINE PARTS	

MOTORCYCLE IDENTIFICATION

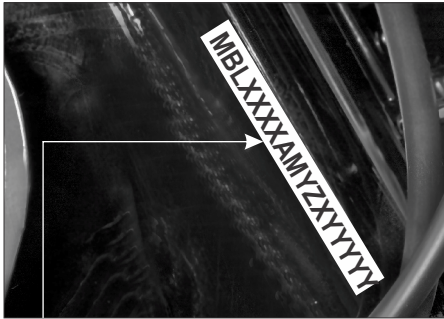

Vehicle Identification Number (VIN)

Location : Stamped on the right side of the steering head tube.

VIN: MBLXXXXAMYZXYYYYYY

MBL	XXXXAM	Y	Z	X	YYYYY
Manufacturer Code	Vehicle Description	Year of Mfg.	Assembly Plant	Month of Mfg.	Serial Number

Model Code.:

Model	VIN	Engine
Splendor Plus (Kick, Drum, Spoke)	AL	EJ
Splendor Plus ((Kick, Drum, Cast)	AM	EJ



Engine No.

Location: Stamped on the lower side of the left crankcase.

Engine No.: XXXXEJYZXYYYYYY

XXXXEJ	Y	Z	X	YYYYY
Engine Description	Year of Mfg.	Assembly Plant	Month of Mfg.	Serial Number

VIN and Engine No. may be required:

1. During registration of the motorcycle.
2. For dealing with Legal & Insurance Departments.

SPECIFICATIONS

Item	
DIMENSIONS	
Overall Length	1970 mm
Overall Width	720 mm
Overall Height	1040 mm
Wheelbase	1230 mm
Saddle Height	785 mm
Ground Clearance	159 mm
WEIGHT	
Kerb Weight	109 kg
CAPACITIES	
Engine Oil	0.95 litres at the disassembly 0.75 litres at draining
Fuel Tank	11 litres (minimum)
Fuel Reserve Capacity	1 litre (usable)
Front Fork Oil at Disassembly	162-165 ml
ENGINE	
Maximum power	5.50 kW (7.5 Ps) @ 8000 r/min
Maximum torque	7.95 N-m @ 5000 r/min
Bore and Stroke	50.0 x 49.5 mm
Compression Ratio	9.0 : 1
Displacement	97.2 cc
Spark Plug	NGK - CR7HSA, BOSCH - UR4AC, Champion-P-RZ9HC (Federal Mogul)
Spark Plug Gap	0.6 - 0.7 mm
Valve Clearance (cold)	IN : 0.05 mm EX : 0.05 mm
Idle Speed	1400 ± 100 r/min

CHASSIS AND SUSPENSION

Front Suspension	Telescopic Hydraulic Shock Absorbers
Rear Suspension	Swing Arm with Hydraulic Shock Absorber
Caster	26°
Trail length	80 mm
Tyre size, front	2.75 x 18 - 4 PR / 42P
Tyre size, rear	2.75 x 18 - 6 PR / 48P
Front Brake	Drum Type
Rear Brake	Drum Type
Front Wheel	Spoke / Cast Wheel (Optional)
Rear Wheel	Spoke / Cast Wheel (Optional)

POWER TRANSMISSION

Primary reduction	3.722
Final reduction	3.071
Gear ratio, 1st	3.181
2nd	1.705
3rd	1.238
4th	0.958

ELECTRICAL

Battery	12V - 2.5 Ah
Alternator	Flywheel A.C. generator
Starting System	Kick
Headlamp (High/Low)	12V 35/35W Halogen Bulb, MFR
Tail/Stop lamp	12V 5/10W MFR
Turn signal lamp	12V 10Wx4 MFR
Meter Illumination/fuel indicator lamp	12V 3.4Wx2
Neutral indicator	12V 3.4W
Turn signal indicator	12V 1.7Wx2
Position lamp	12V 3.4W
Hi Beam Indicator	12V 1.7W

FUSE

7A

* MFR stands for Multifocal Reflector

SAFE RIDING TIPS

Do's:

1. Always conduct simple pre-ride inspections (ref. page no 18).
2. Always wear a helmet (ISI marked) with chinstrap securely fastened and insist on a helmet for your pillion rider.
3. While riding, sit in a comfortable position with your legs close to fuel tank.
4. Ride defensively and at a steady speed (between 40-50 km/hr).
5. For stopping motorcycle, use both brakes simultaneously, keeping throttle in the close position.
6. Respect road signs and obey traffic rules for your own safety and that of others on the road (ref. page no. 49-50).
7. During night time, dip headlamps of your motorcycle for oncoming traffic, or when following another vehicle.
8. Give way to others on the road and signal before you make a turn.
9. To make yourself more visible, wear bright reflective clothing that fits well.
10. Take care of loose / hanging clothes while solo / pillion riding.
11. Get your motorcycle serviced regularly by the Authorised Hero MotoCorp workshop.

Don'ts:


1. Never use cell phone while riding the motorcycle.
2. Avoid sudden acceleration, braking and turning of your motorcycle.
3. Never shift gears without disengaging the clutch and closing the throttle.
4. Never touch any part of the hot exhaust system like muffler.
5. Never ride under the influence of alcohol or drugs.
6. Concentrate on the road and avoid talking to the pillion rider or others on the road.
7. Do not litter the road.
8. Do not cross the continuous white/yellow line in the centre of the road, while overtaking.
9. Do not attach large or heavy items to the handlebars, front forks, or fenders.
10. Never take your hands off the steering handle while riding.

SOME TIPS FOR HEALTHY ENVIRONMENT

The following tips shall ensure a healthy motorcycle, healthy environment, and a healthy you.

1. **Healthy engine:** The engine is the lifeline of every vehicle. To keep it healthy, it should be tuned regularly, which will also help reduce pollution and improve vehicle performance & fuel efficiency.
2. **Regular Servicing:** Get your motorcycle serviced at an Authorised Hero MotoCorp workshop, as per the service schedule, for an optimum performance and keep the emission level under check.
3. **Genuine Spares:** Always insist on Hero MotoCorp genuine parts as spurious or incompatible spares and accessories can upset or deteriorate your motorcycle's running condition.
4. **Genuine Engine Oil:** Hero 4T Plus SAE 10W 30 SL grade (JASO MA2) engine oil recommended by Hero MotoCorp and make sure you change it every 6000 kms. (with top up every 3000 kilometres) to keep the engine fit and environment healthy.
5. **Noise Pollution :** Noise beyond a certain decibel is pollution. Whether it is from horns or defective mufflers, excessive noise will cause headaches and discomfort.
6. **Emission Pollution :** Get emission of your motorcycle checked by Authorised agencies atleast once every 3 months or as notified by the government from time to time.
7. **Fuel saving & reduce pollution :** Switch "OFF" the engine while waiting at traffic signal points to save fuel and reduce pollution, if the waiting period is long.

DESCRIPTION

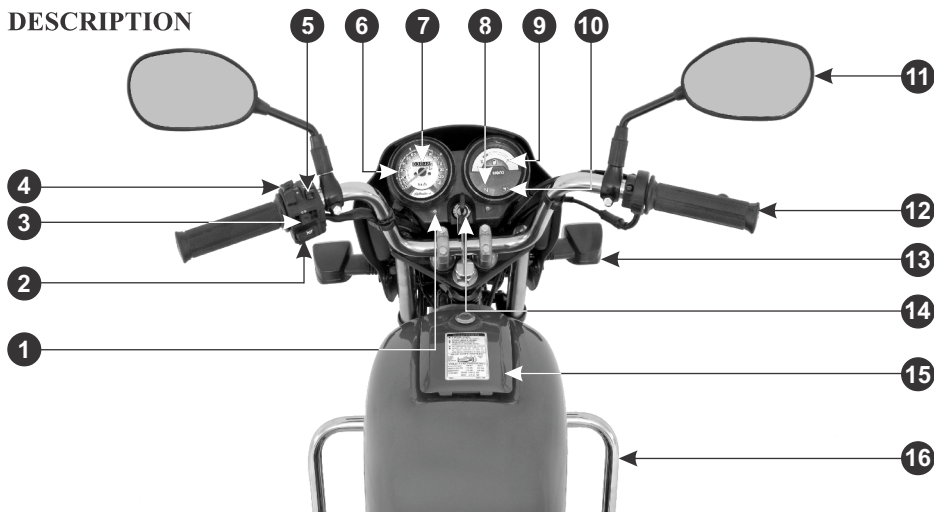


PARTS LOCATION

- | | |
|----------------------------|---|
| (1) Turn signal indicator | (9) Fuel gauge |
| (2) Horn switch | (10) High beam indicator |
| (3) Turn signal switch | (11) Rear view mirror |
| (4) Headlamp switch | (12) Throttle grip |
| (5) Headlamp dimmer switch | (13) Front turn signal lamp |
| (6) Speedometer | (14) Ignition switch with steering lock |
| (7) Odometer | (15) Fuel tank lid |
| (8) Neutral indicator | (16) Leg guard |

***Accessories and features shown may not be part of standard fitment.**


LEFT SIDE VIEW

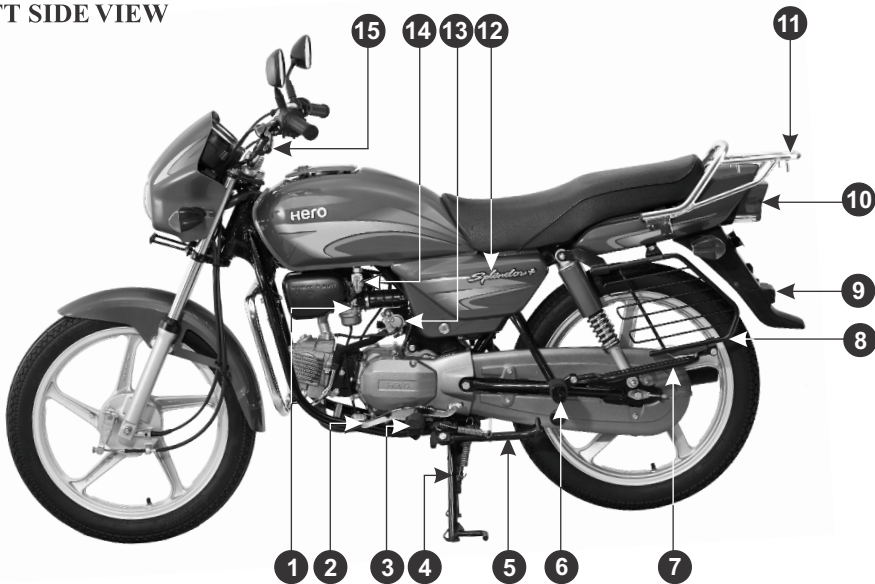

- | | | |
|-----------------------|------------------------|------------------------|
| (1) Carburetor | (7) Women pillion step | (12) Left side cover |
| (2) Gear shift pedal | (8) Saree guard | (13) Air suction valve |
| (3) Rider foot rest | (9) Reflex reflector | (14) Fuel valve |
| (4) Main stand | (10) Tail / Stop lamp | (15) Clutch lever |
| (5) Side stand | (11) Rear carrier | |
| (6) Pillion foot rest | | |

***Accessories and features shown may not be part of standard fitment.**

RIGHT SIDE VIEW

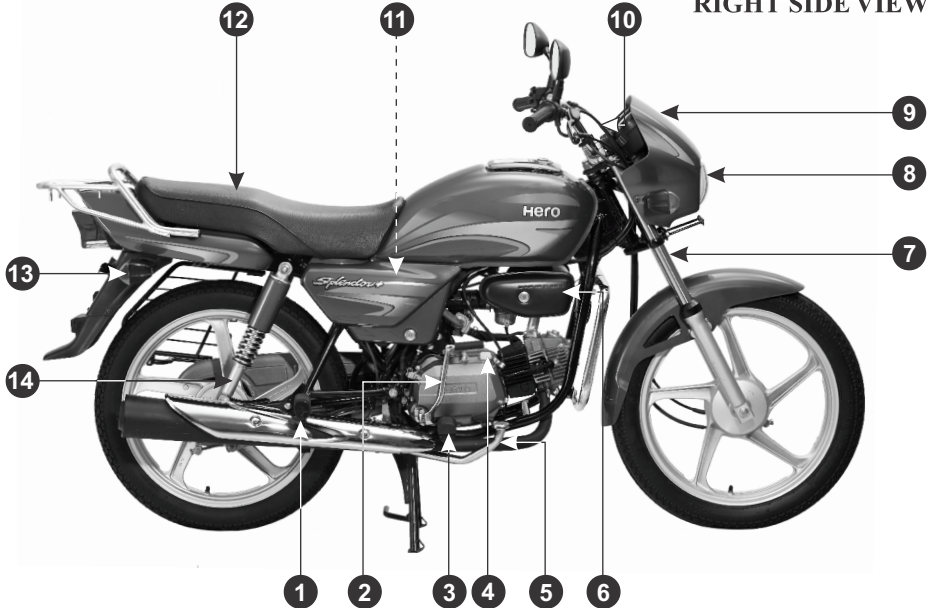

(1) Pillion foot rest

(2) Kick start pedal

(3) Rider foot rest

(4) Oil level dipstick

(5) Rear brake pedal

(6) Utility box

(7) Front suspension

(8) Headlamp

(9) Visor

(10) Front brake lever

(11) Battery compartment (inside)

(12) Seat

(13) Rear turn signal lamp


(14) Rear suspension

***Accessories and features shown may not be part of standard fitment.**

PARTS FUNCTIONS



Instruments and Indicators

The indicators are in the speedometer panel above the headlamp. The functions are as below.

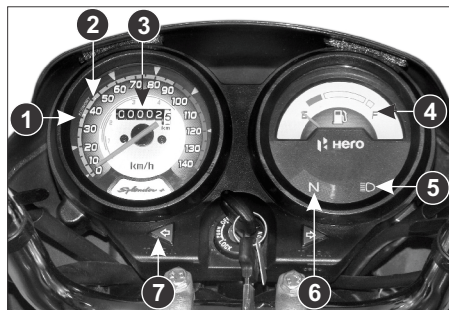

Sl. No.	Description	Function
(1)	Speedometer	Indicates driving speed
(2)	Gear shifting range	Shows the appropriate speeds for shifting gears
(3)	Odometer	Shows accumulated mileage
(4)	Fuel gauge	Indicates approximate fuel quantity
(5)	High beam indicator	Light glows when headlamp is in Hi Beam
(6)	Neutral Indicator	Light glows when vehicle is in neutral
(7)	Turn signal indicators	Flashes when turn signal switch is operated

Ignition Switch

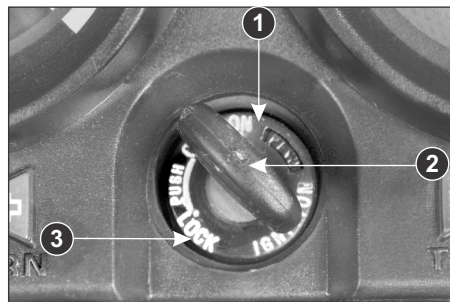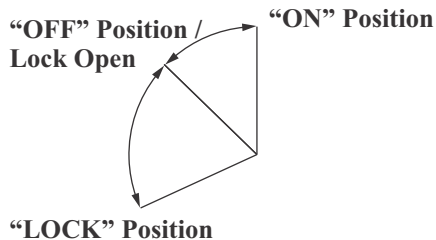

1. Ignition switch
2. Ignition key
3. Steering lock position

Key Position	Function	Key Removal
"ON"	The engine can be started, Turn signal lamps, Horn, Tail/Stop lamp and Fuel Gauge will be functional	Key cannot be removed
"OFF"	Engine cannot be started and no electrical system will be functional	Key can be removed
"LOCK"	Steering can be locked	Key can be removed

Left Handlebar Controls



1. Headlamp switch

The switch has three positions.

“☀️”, “🔦” and “●” marked by white dot.

Position	Action
●	“OFF”
🔦	Following are “ON” • Position lamp • Tail/Stop lamp • Fuel indicator lamp • Speedometer lamp
☀️	Headlamp “ON”

2. Headlamp dimmer switch

Select “🔦” for high beam and “☀️” for low beam.



3. Position lamp switch

Select “🔦” to put the position lamp to “ON”.

4. Turn signal switch

Shift the turn signal switch sideways for Right/Left indications and leave it to come back to its normal position on its own.


IMPORTANT : To switch “OFF” the turn signal after completing the turn, gently push the knob inside .

5. Horn switch

Press the switch to operate the horn.

Steering Lock

Steering lock is with Ignition switch, turn the key to “OFF” position & turn the handle bar towards left or right & push the key downwards & turn towards “Lock” position. After locking take out the key.

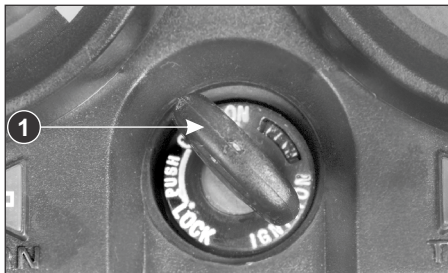


(1) Ignition key

FUEL VALVE

The three way fuel valve is on the left side of the carburetor.

OFF


At “OFF”, fuel cannot flow from the tank to the carburetor. Turn the valve “OFF” whenever the motorcycle is not in use.

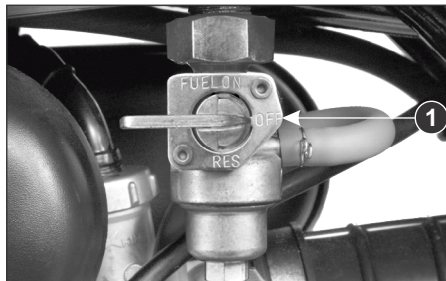

(1) OFF Position

ON


At “ON”, fuel will flow from fuel tank to the carburetor.

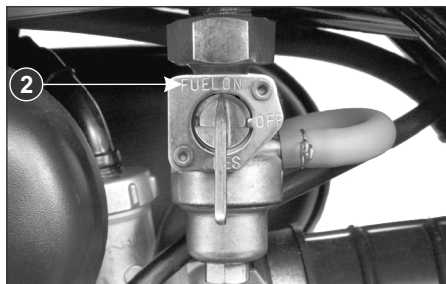

(2) ON Position

RES

At “RES”, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is exhausted. Refill the tank as soon as possible after switching to “RES”. The reserve fuel supply is 1 litre usable.

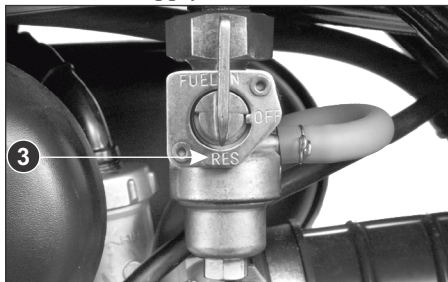

(3) RESERVE Position

NOTE

- Do not operate the motorcycle with the fuel valve in the “RES” position after refilling. You may run out of fuel, with no reserve.
- Do not keep the fuel valve between “ON” and “OFF” position while riding, since this may drain reserve fuel from the tank.

FUEL TANK

Fuel tank capacity is 11 litres (minimum) including reserve supply of 1 litre.

1. To remove the fuel tank cap (1), insert the ignition key (2), turn it anti-clockwise and open the lid (3) as shown in the picture.
2. Remove the cap by turning it anti-clockwise.
3. Do not overfill the tank. There should be no fuel in the filler neck (4).
4. For locking, press the lid gently and turn the key clockwise.




(1) Fuel tank cap

(2) Ignition key

(3) Lid

CAUTION

Do not park the motorcycle under direct sunlight as it causes evaporation of petrol due to heat and deterioration of paint gloss due to ultra violet rays.

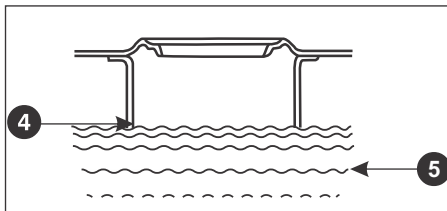

(4) Filler Neck

(5) Fuel

⚠ WARNING

Petrol is extremely flammable and is explosive under certain conditions. Refill in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the petrol is refilled or stored.

ENGINE OIL

Use hero genuine engine oil or recommended grade oil.

BRAND: Hero 4T plus

GRADE: SAE 10W 30 SL Grade

(JASO MA2).

Manufactured by :

1. Tide Water Oil Co. (India) Ltd.
2. Savita Oil Technologies Limited.
3. Bharat Petroleum Corporation Limited.

OIL CAPACITY : 0.95 litres

Engine Oil Level Check

Check engine oil level each day before operating the motorcycle.

The oil level dipstick (1) is on the right crankcase cover for measuring oil level. **Oil level must be maintained between the upper (2) and lower (3) level marks on the oil level dipstick.**

Do top up if oil level reaches towards the lower level mark or every 3000 kms. whichever is earlier.

ENGINE OIL TOPUPPROCESS

1. Start the engine & let it idle for 3-5 minutes.



1. Oil level dipstick
 2. Upper level mark
 3. Lower level mark
2. Stop the engine & place the motorcycle on its main stand on level ground, remove the oil level dipstick and wipe it clean.


3. Reinsert the oil level dipstick without screwing it in and check the oil level.
4. **If required, add the specified oil up to the upper level mark. Do not overfill.**
5. Reinstall the oil level dipstick, and check for oil leaks.
7. Make sure that oil level is at the upper level mark of the oil level dipstick with the motorcycle parked on its main stand on level ground, and that there are no oil leaks.

ENGINE OIL REPLACEMENT PROCESS

Replace engine oil once in every 6000 kms/ 6 months whichever is earlier.

Drain engine oil with the engine warm and the motorcycle on its main stand.

1. To drain the oil, remove the oil level dipstick and drain plug (1).
2. After the oil has completely drained, make sure that the sealing washer is in good condition and reinstall the drain plug.
3. Fill the crankcase through the filler hole with approximately 0.75 litres of the recommended grade oil at draining.
4. Reinstall the oil level dipstick.
5. Start the engine and allow it to idle for few minutes.
6. Stop the engine.

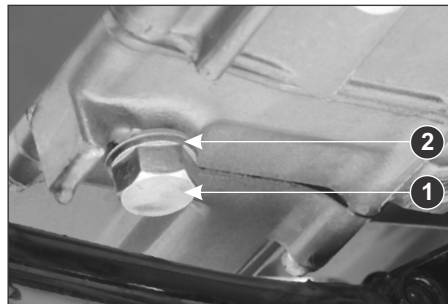

(1) Drain plug (2) Sealing washer

CAUTION

- Running the engine with insufficient oil can cause serious engine damage.
- Running the engine with excessive oil can cause spark plug fouling & loss in performance.
- Engine oil is a major factor affecting the performance and service life of the engine. Non-detergent, vegetable, or castor based racing oils are not recommended.

TYRES

The tyres that are fitted on your motorcycle are designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability and comfort.

NOTE


The imported tyre(s) if fitted without ISI mark; are in compliance of BIS standard and Central Motor Vehicle Rules 1989, as declared by the Tyre manufacturer.

To safely operate your motorcycle, the tyres must be of recommended type and size, in good condition with adequate tread, and correctly inflated. The recommended tyre size is:

Front	2.75 x 18 -4PR/42P
Rear	2.75 x 18 -6PR/48P

Air Pressure

Properly inflated tyres provide the best combination of handling, tread life, and riding comfort. Generally, under inflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Under inflated tyres can also cause wheel damage in rocky terrain. Over inflated tyres make your motorcycle ride more harshly, are more prone to damage from surface hazards and wear unevenly.

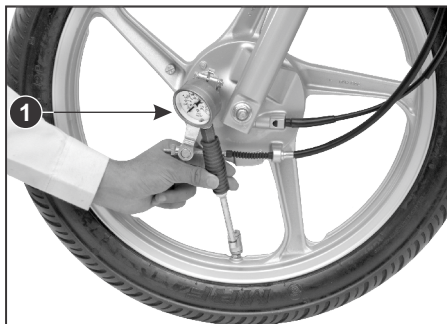

(1) Air Pressure Gauge

Make sure the valve stem caps are secure. If necessary, install a new cap.

The recommended “Cold” tyre pressures are :

	Rider only	Rider and Pillion
Front	1.75 kg/cm ² (25 psi)	1.75 kg/cm ² (25 psi)
Rear	2.00 kg/cm ² (28 psi)	2.50 kg/cm ² (36 psi)

CAUTION

Over inflation / under inflation will affect the performance.

Inspection

Whenever you check the tyre pressures, you should also examine tyre treads & side walls for wear, damage & foreign objects.


Look for:

- Bumps or bulges in the side of the tyre or the tread. Replace the tyre if you find any bumps or bulges.
- Cuts, splits or cracks in the tyre. Replace the tyre if you can see fabric or cord.
- Excessive tread wear.

Also, if you hit a pothole or hard object, pull to the side of the road as soon as you safely can and carefully inspect the tyres for damage.

Tread Wear

Replace tyres immediately when the wear indicator (1) appears on the tyre.

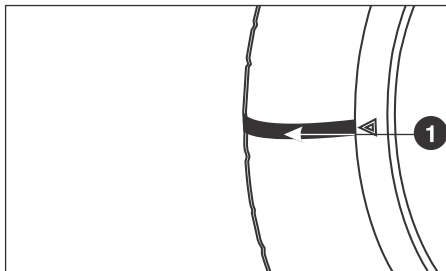

(1) Wear indicator

▲ WARNING

- Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt and killed.
- Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.
- Follow all instructions in this owner's manual regarding tyre inflation and maintenance.
- Under-inflation may result in the tyre slipping on, or tyre coming off the rim.

PRE-RIDE INSPECTION

You should conduct pre-ride inspection before riding the motorcycle to enhance riding comfort and safety.

Clean your motorcycle regularly. It protects the surface finish. Avoid cleaning with products that are not specifically designed for motorcycle surfaces.

Inspect your motorcycle every day before you start the engine. The items listed here will only take a few minutes, and in the long run they can save time, expense, and possibly your life. Please follow the tips as given below:

1. **Engine oil level** - check and top up engine oil if required (page 14). Check for leaks.
2. **Fuel level** - ensure sufficient fuel is available in your fuel tank for your journey (pages 12-14). Check for leaks.
3. **Front and rear brakes** - check operation. Adjust free play if necessary (pages 34-38).
4. **Tyres** - check condition and pressure (page 16-17).
5. **Clutch** - check for smooth operation. Adjust free play (page 30-31).
6. **Drive Chain** - check condition and slackness (pages 32-34). Adjust and lubricate if necessary.
7. **Throttle** - check for smooth opening and closing in all steering positions (page 28).
8. **Lamps and Horn** - check that headlamp, tail/stop lamp, turn signals, indicators and horn function properly.
9. **Rear View Mirror** - ensure that the rear view mirror gives a good rear view when you are sitting on the motorcycle.
10. **Fitting & Fasteners** - check & tighten if necessary.
11. **Battery** - check electrolyte level (page 38-39).
12. **Steering** - check for smooth action for easy maneuverability.
13. **Air Suction Valve** - make sure that all tube connections are secured properly.

STARTING THE ENGINE



1. Turn the ignition switch “ON”.


2. Turn the fuel valve “ON”.



5. Open the throttle slightly and kick start the engine.



3. Select neutral position & check  indicator glows on instrument cluster with ignition “ON”.

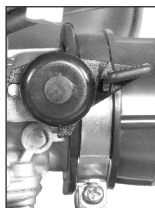

6. Push the choke lever downwards to “OFF” position as indicated, after warming up the engine for few seconds.

Please note that the kick starting will not be possible when the transmission gears are engaged.



WARNING

Never run the engine in a closed area, the exhaust contains poisonous gases.

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the ignition switch “OFF” and turn the choke lever to “OFF”. Close the throttle fully and crank the engine several times with the kick starter. Turn the ignition switch “ON” and start the engine without using choke.

Running In

During first 1000 kms, do not operate the motorcycle at more than 60 kms/hr speed in top gear, 45 kms/hr in third gear, 30 kms /hr in second gear and 15 kms/hr in first gear. Avoid full throttle operation.


During initial running in, newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running in precautions till 1000 kms will reduce initial wear of engine components and increase its service life.

RIDING

1. After the engine has been warmed up, the motorcycle is ready for riding.
2. While the engine is idling, press the clutch lever and depress the gearshift pedal to shift into 1st (low) gear.
3. Slowly release the clutch lever and at the same time, gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.
4. When the motorcycle attains a moderate speed, close the throttle, press the clutch lever and shift to 2nd gear by depressing the gearshift pedal.
5. This sequence is repeated progressively to shift to 3rd and 4th (top gear).

Recommended Shifting Speed

1 st	0-20 km/hr
2 nd	15-30 km/hr
3 rd	20-40 km/hr
4 th	30 km/hr and above

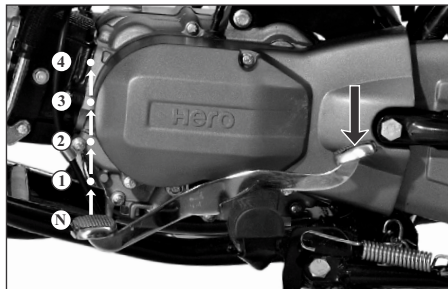

CAUTION

Do not shift gears without operating clutch and without closing the throttle otherwise this would lead to damage of gears.

BRAKING

1. For normal braking, close the throttle and gradually apply both front and rear brakes simultaneously while shifting down gears to suit your road speed.
2. For maximum deceleration/quick stopping, close the throttle and apply the front and rear brakes simultaneously.

⚠ WARNING

- Independent use of only the front or rear brake increases stopping distance.
- Extreme braking may cause wheel locking and reduce control over the motorcycle.
- Wherever possible, reduce speed or apply brake before entering a turn closing the throttle or braking in midturn may cause wheel slip. Wheel slip will reduce control over the motorcycle.
- When riding in wet or rainy conditions, or on loose surfaces the ability to stop the motorcycle reduces.

- All your actions should be smooth under these conditions. Sudden accelerations, braking or turning may cause loss of control. For your safety, exercise extreme caution when braking, accelerating or turning.
- When descending a long steep slope use engine braking (power) by changing to lower gears, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.

PARKING


After stopping the motorcycle, shift the transmission to neutral, turn the fuel valve "OFF", turn the ignition switch "OFF", park the motorcycle on main stand, lock the steering and remove the key

CAUTION


- Park the motorcycle on firm level ground to prevent overturning.
- While parking vehicle on side stand engage the first gear.

UTILITY BOX

To store some important utility items a utility box has been provided.

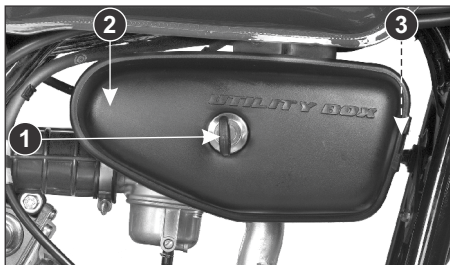

To open, insert the key (1), rotate it clockwise, pull the cover (2), and slide it sideways to disengage it from the hook (3).

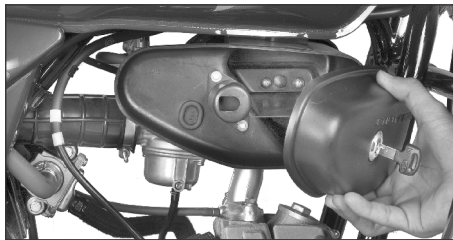


To close, engage the hook and press gently. Hold the key in clockwise direction, slide the cover back and release the key.

TOOL KIT

The tool kit (1) is stored in the utility box. Some emergency repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

Kit consists of following tool:

- Tool bag- 1 No.
- +, - No. 2 Driver- 1 No.
- Grip- 1 No.
- Box wrench 16 x 14- 1 No.

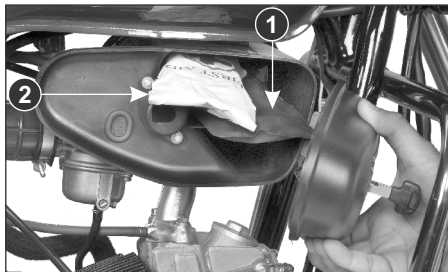

FIRST AID KIT

The first aid kit (2) is stored in the utility box. Some emergency first aid can be performed by medicine contained in the kit.

Kit contains the following items :

- 1) Antiseptic Cream - 1 No.
- 2) Sterilised Dressing - 1 No.
- 3) Water Proof Plaster - 1 No.
- 4) Elastic Bandage - 1 No.
- 5) Gauze (Rolled Bandage) - 1 No.
- 6) Sterilised Elastic Plaster - 1 No.
- 7) First Aid Bag - 1 No.

MAINTENANCE SCHEDULE

Dear Customer,

We would strongly recommend the following schedule, to keep your motorcycle in perfect running condition and healthy environment. Motorcycle subjected to severe use or ridden in dusty area will require more frequent servicing.

ITEMS	WHICHEVER COMES FIRST	DURING FREE SERVICE PERIOD						AFTER FREE SERVICE ONCE IN EVERY					
	SERVICE	1st	2nd	3rd	4th	5th	6th						
	DAYS	1st 60	Next 100	Next 100	Next 100	Next 100	Next 100						
	KMS.	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	3000	6000	9000	12000	15000	
Fuel Line		I	I	I	I	I	I	I					
Throttle Operation		I,A	I,A	I,A	I,A	I,A	I,A	I,A					
Carburetor		C,A	A	C,A	A	C,A	A	A	C,A				
Air Cleaner*		C	C	C	C	C	C	C					
Spark Plug		I,C,A	I,C,A	I,C,A	I,C,A	R	I,C,A	I,C,A			R		
Valve Clearance		I,A	I,A	I,A	I,A	I,A	I,A	I,A					
Engine Oil**		O	I,T	O	I,T	O	I,T	I,T	O				
Engine Oil Strainer Screen		C		C		C			C				
Engine Oil Centrifugal Filter		C		C		C			C				
Oil Circulation		I	I	I	I	I	I	I					
Drive Chain @		I,C,L,A at every 2000 kms						I,C,L,A at every 2000 kms					
Battery		I	I	I	I	I	I	I					
Brake Shoe Wear		I,A	I,A	I,A	I,A	I,A	I,A	I,A					

ITEMS	WHICHEVER COMES FIRST	DURING FREE SERVICE PERIOD						AFTER FREE SERVICE ONCE IN EVERY				
	SERVICE	1st	2nd	3rd	4th	5th	6th					
	DAYS	1st 60	Next 100	Next 100	Next 100	Next 100	Next 100					
	KMS.	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	3000	6000	9000	12000	15000
Brake System (Brake Cam & Brake Pedal)		-	C, L	-	C, L	-	C, L	-	C, L			
Stop Lamp Switch		I, A	I, A	I, A	I, A	I, A	I, A	I, A				
Headlamp Focus		I, A	I, A	I, A	I, A	I, A	I, A	I, A				
Clutch		I, A	I, A	I, A	I, A	I, A	I, A	I, A				
Side Stand/Main Stand		L	L	L	L	L	L	L				
Fasteners***		I	I	I	I	I	I	I				
Wheels/Tyres		I	I	I	I	I	I	I				
Steering Head Bearing		I	I, A	I	I, A	I, L, A	I	I	I, A		I, L, A	
Front Suspension/Oil****		I	I	I	I	I	I	I	-			
Secondary Air Injection		-	-	I	-	I	-	-	I			
Muffler (Catalytic Converter)		-	-	I, E	-	I, E	-	-	I, E			

* More frequent cleaning may be required when riding in dusty areas.

** Replace engine oil once in every 6000 kms. Top up once in every 3000 kms.

*** Inspect & maintain specified torque.

**** Replace once in every two years or 30000 kms. whichever is earlier.

● Check idle CO emission along with idle r/min / idle CO adjustment (if required).

@ Visit Authorised Hero MotoCorp workshop for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 kms.

NOTE:- Always wipe the water from the motorcycle after washing. Use clean soft cloth or pressurised air for completely drying the water.

I: INSPECT R: REPLACE C: CLEAN L: LUBRICATE A: ADJUST IF REQUIRED O: OIL CHANGE T: TOP UP E: EMISSION CHECK

OIL FILTER SCREEN & CENTRIFUGAL FILTER

1. Drain the engine oil thoroughly.
2. Remove the kick starter pedal (1), disconnect the clutch cable (2). Remove the right crankcase cover (3).
3. Remove the oil filter screen (4) and wash it in clean non flammable or high flash point solvent (kerosene).
4. Reinstall the filter screen with the sharp edged side facing inwards.




- (1) Kick starter pedal
- (2) Clutch cable
- (3) Right crankcase cover


5. Remove centrifugal filter cover (5) & clean the centrifugal filter (6) with non flammable or high flash point solvent (kerosene).
6. Reinstall the centrifugal filter cover, right crankcase cover, kick start pedal & clutch cable.
7. Fill the crankcase with clean engine oil as per specification.

NOTE :

Clean filters as specified in the maintenance schedule.

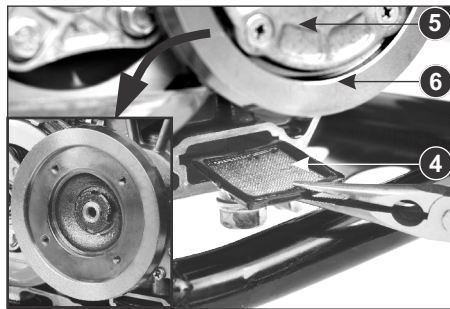

- (4) Oil filter screen
- (5) Centrifugal filter cover
- (6) Centrifugal filter

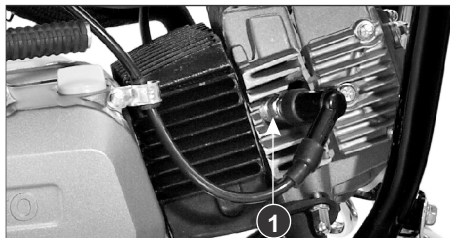

(1) Spark Plug

SPARK PLUG


Recommended plugs :

NGK - CR7HSA, BOSCH - UR4AC,

Federal Mogul - P-RZ9HC

For most riding conditions this spark plug heat range number is satisfactory. However, if the motorcycle is going to be operated for extended periods at high speeds or near maximum power in hot climates, the spark plug should be changed to a cold heat range number; consult Authorised Hero MotoCorp workshop on this if required.

1. Clean any dirt around the spark plug base.
2. Disconnect the noise suppressor cap and remove the spark plug with the help of spark plug wrench provided in the tool bag.

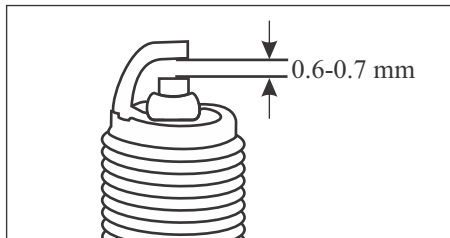

3. Visually inspect the spark plug electrodes for wear. The centre electrode should have square edges and the side electrode should not be eroded. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.
4. Make sure that the spark plug gap is 0.6-0.7 mm using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode carefully. Make sure the plug washer is in good condition.
5. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
6. Tighten a new spark-plug 1/2 turn with a spark plug wrench to compress the washer. If you are reusing a plug, it should only take 1/8-1/4 turn after the plug seats.

AIR CLEANER


The air cleaner should be serviced at regular intervals (page 23). When riding in dusty areas, more frequent service may be necessary.

1. Insert the ignition key into the side cover lock (1). Remove the side cover (2) by turning the key clockwise. Pull out lug (3) from the grommet and push the cover as per direction indicated (4).




- (1) Side cover lock (2) Side Cover
(3) Lug (4) Direction Indication

2. Remove the air cleaner cover screws (5) and the cover (6).
3. Pull out the filter assembly by separating the mounting clamp (7) from the inner lug (8). Separate air cleaner element (9) from the element holder (10).

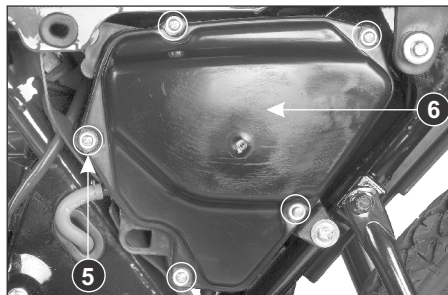

- (5) Air cleaner cover screws
(6) Air cleaner cover

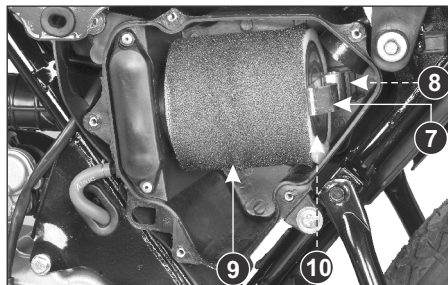

- (7) Mounting clamp (8) Inner lug
(9) Air cleaner element (10) Element holder
4. Wash the element in non-inflammable or high flash point solvent (kerosene) and allow to dry thoroughly.

⚠ WARNING

Never use petrol or low flash point solvent for cleaning the air cleaner element. A fire or explosion could result.

5. Soak the air cleaner element in clean gear oil (SAE 80 or 90) and squeeze out the excess oil.
6. Install the air cleaner element, on holder, insert filter assy. into outlet duct & press gently to fix the mounting clamp in housing. Ensure cover lug should take proper seat on the other side of the mounting clamp.

THROTTLE OPERATION

Cable Inspection


Check for smooth rotation of the throttle grip from the fully open to the fully closed position. Check at full left and full right steering positions. Inspect the condition of the throttle cable from the throttle grip down to the carburetor. If the cable is kinked, chafed or improperly routed, it should be replaced or rerouted. Standard throttle grip free play (1) is approximately 2-6 mm of grip rotation.



(1) Free play

Free Play Adjustment

Slide the grommet (2), loosen the lock nut (3) and turn the adjuster (4).

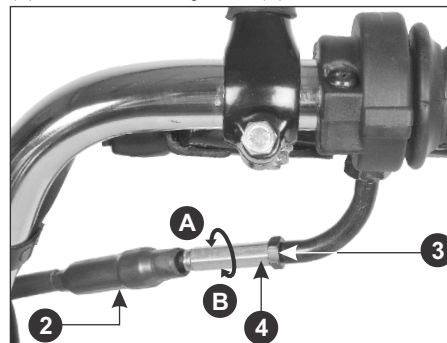

(2) Grommet

(3) Lock nut


(4) Adjuster

(A) Decrease free play

(B) Increase free play

VALVE CLEARANCE

Excessive valve clearance will cause noise, and little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check valve clearance at the specified intervals (page 23).

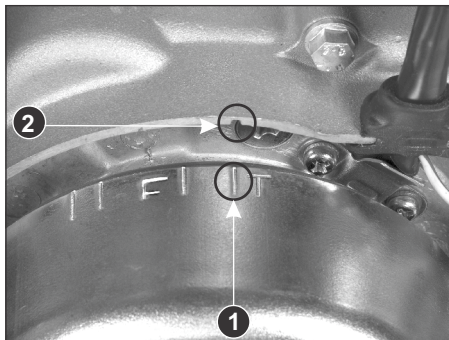

(1) 'T' mark (2) Index mark


1. Remove the magneto cover and two tappet covers.
2. Rotate the flywheel anticlockwise and align the 'T' mark (1) with the index mark (2). In this position the piston will either be on the compression or exhaust stroke. The adjustment must be made when the piston is at Top Dead

Center and both the inlet and exhaust valves are closed.

This condition can be determined by moving the rocker arms. If they are free, it is an indication that the valves are closed and the piston is in compression stroke.

If they are tight the valves are open, rotate the flywheel 360° anticlockwise and re-align the 'T' mark with the index mark.

3. Check the clearance by inserting the feeler gauge (5) between the adjusting screw (3) and valve stem.

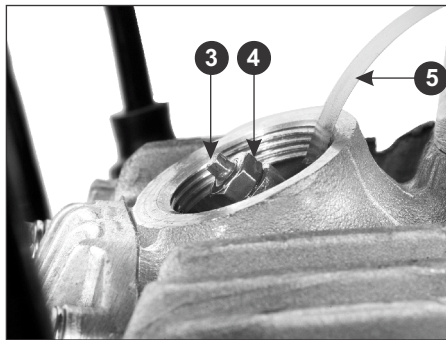

(3) Adjusting screw

(4) Lock nut

(5) Feeler gauge

NOTE

The checking or adjusting of valve clearance should be performed while the engine is cold. The clearance will change as the engine temperature rises.

Standard clearance

In. 0.05 mm Ex. 0.05 mm

Adjust by loosening the lock nut (4) and turning the adjusting screw (3) until there is a slight drag on the feeler gauge. After tightening the lock nut (4), check again the clearance.

4. Install all parts in the reverse order of disassembly.

NOTE

Before inserting the feeler gauge, smear a bit of engine oil to avoid damage to the feeler gauge.

CARBURETOR

Idle speed


The carburetor is factory pre-set in order to achieve optimum performance and meet emission standards.

However in case of specific requirement of tuning due to engine stalling in idle speed,

please follow the instructions given hereunder:

1. Warm up the engine and rest the motorcycle on the main stand.
2. Adjust idle speed with the throttle stop screw (1).

IDLE SPEED: 1400 ± 100 R/MIN

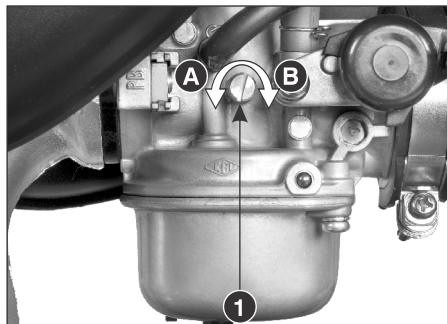


(1) Throttle stop screw

(A) Decrease r/min (B) Increase

CLUTCH

Clutch adjustment may be required if the motorcycle stalls when shifting into gear or tends to creep or if the clutch slips, causing acceleration to lag behind engine speed. Normal clutch lever free play (1) is 10-20 mm at the lever (2).

1. To adjust the free play, loosen the lock nut (3). Turn the adjusting nut (4) to obtain the specified free play. Tighten the lock nut and check the adjustment.

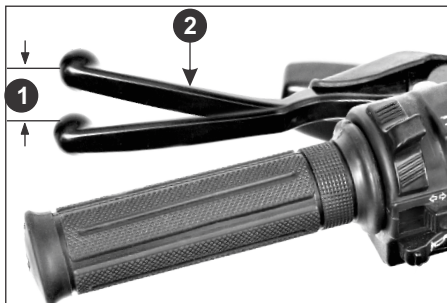


(1) Free play (2) Clutch lever

2. Start the engine, press the clutch lever and shift into gear. Make sure the engine does not stall, and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. The motorcycle should start smoothly and accelerate.

NOTE

Check that the clutch cable routing is correct.

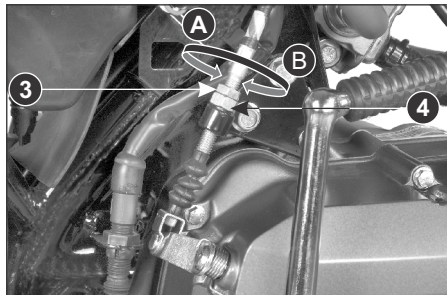

(3) Lock nut (A) Decrease free play
(4) Clutch cable (B) Increase free play
adjuster nut

NOTE

If proper adjustment cannot be obtained or the clutch does not work correctly, visit your Authorized Hero MotoCorp workshop.

Other Checks

- Check the clutch cable for kinks or signs of wear that could cause sticking or failure.
- Check for clutch cable model. Use genuine clutch cables.
- Check for clutch cable routing.


DRIVE CHAIN

The service life of the drive chain is dependent upon proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain and sprockets. The drive chain (1) should be checked and lubricated as part of the Pre-ride Inspection (page 18). Under severe usage, or when the motorcycle is ridden in unusually dusty areas, more frequent maintenance will be necessary.


Inspection

1. Turn the engine "OFF", place the motorcycle on its main stand and shift the transmission to neutral. Remove hole cap (2).
2. Drive chain slack (3) should be adjusted to allow approximately 25 mm vertical movement by hand.

Rotate the wheel and check drive chain slack as the wheel rotates. Drive chain slack should remain constant as the wheel rotates. If the chain is slack in one section and tight in another, some links are kinked and binding. Binding can be eliminated by frequent lubrication.

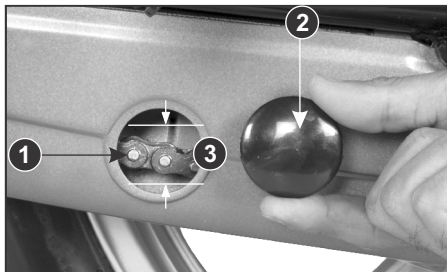


- (1) Drive chain (3) Drive chain slack
- (2) Hole cap
3. Turn the chain to view chain lock plate (4) inside the hole. Ensure that the chain lock plate open end (5) is installed in the opposite direction of the chain rotation.
 4. Inspect the sprocket teeth for wear or damage.

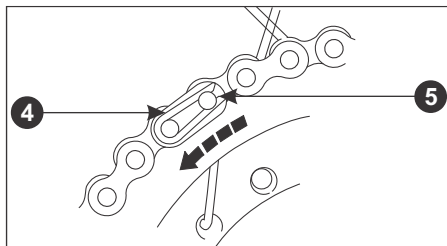

- (4) Chain lock plate (5) Open end

5. If the drive chain or sprockets are excessively worn or damaged, they should be replaced. Never use a new chain with worn out sprockets since this will result in rapid chain wear.

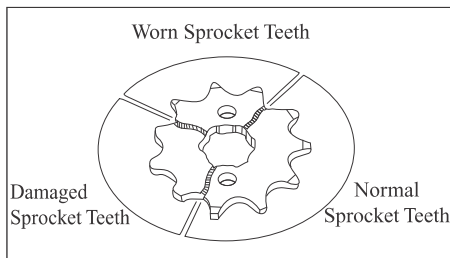



Adjustment

- Place the motorcycle on its main stand with the transmission in neutral and the ignition switch in “OFF” position.
- Loosen the rear axle nut (1) and sleeve nut (2).
 - Loosen the drive chain lock nut (3).
 - Turn both the adjusting nuts (4) in an equal number of turns until the correct drive chain slack is obtained. Turn the

adjusting nut clockwise to decrease the slack or anticlockwise to increase the slack of the chain.

- Align the chain adjuster index mark (5) with the corresponding scale graduations (6) on both the sides of the swing arm equally.
 - If the drive chain slack is excessive when the rear axle is moved to the farthest limit of adjustment, the drive chain is worn and must be replaced.
 - Tighten the rear axle nut and sleeve nut.
- Rear axle nut torque: 5.4 kgf-m
Sleeve nut torque : 4.4 kgf-m
- Check the drive chain slack again.

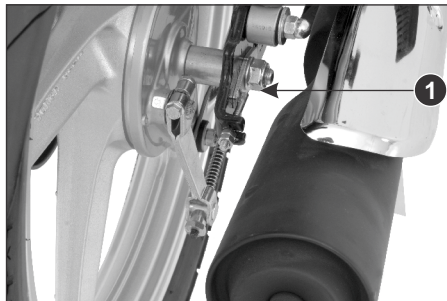

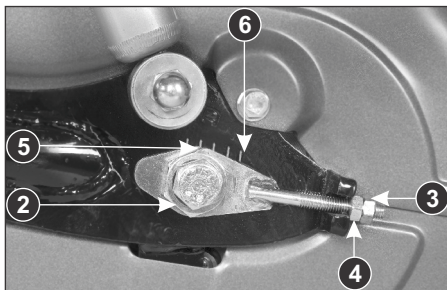

- (1) Rear axle nut (2) Sleeve nut
- (3) Drive chain lock nut
- (4) Drive chain adjusting nut
- (5) Index mark (6) Scale graduation
- Rear brake pedal free play is affected when repositioning the rear wheel to adjust drive chain slack. Check rear brake pedal free play and adjust as necessary (page 36-37).

Lubrication

1. Turn the engine “OFF”, place the motorcycle on its main stand and shift the transmission into neutral.
2. Lubricate the drive chain by applying liberal amount of SAE-90 oil.

CAUTION

Regular adjustment and lubrication as per

the maintenance schedule would ensure high performance and longer life.

NOTE


Visit Authorised Hero MotoCorp workshop for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 kms.

FRONT BRAKE

Adjustment

1. Place the motorcycle on its main stand.
2. Measure the distance, the front brake lever (1) moves before the brake starts to take hold. Free play (2) should be 10-20 mm at the tip of the brake lever.
3. If adjustment is necessary turn the adjusting nut (3).


Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4) after making final free play adjustment.

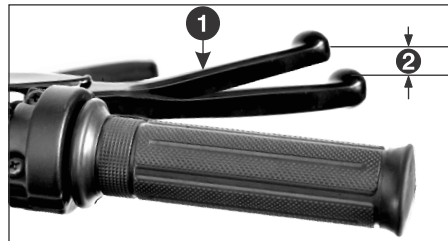


- (1) Front brake lever
- (2) Free play

3. Apply the brake several times and check for free wheel rotation when released.


Spoke wheel version

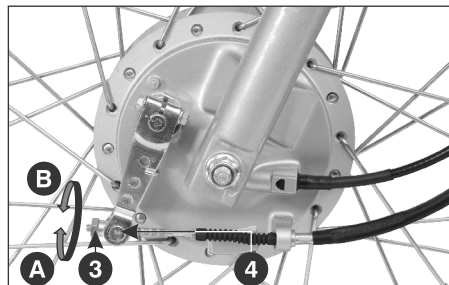

(A) CUT-OUT NOT SEATED

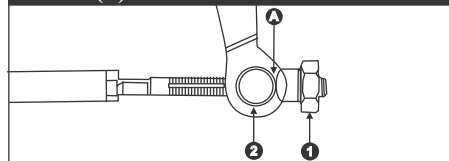


(B) CUT-OUT SEATED

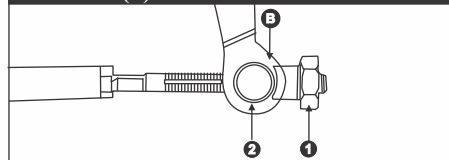

(1) Adjusting nut

(2) Brake arm pin

Cast wheel version

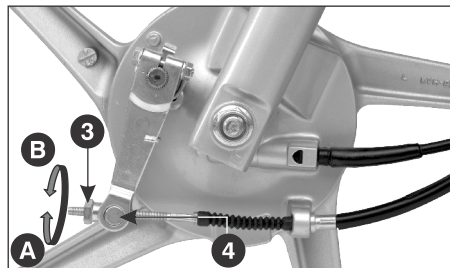

(3) Adjusting nut (4) Brake arm pin (A) Decrease freeplay (Clockwise) (B) Increase freeplay (Anti-Clockwise)

NOTE

If proper adjustment cannot be obtained by this method, visit your Authorized Hero MotoCorp workshop.

REAR BRAKE

Adjustment

1. Place the motorcycle on its main stand.
2. Measure the distance brake pedal (1) moves before the brake starts to take hold. Free play (2) should be 20-30 mm.
3. If adjustment is necessary, turn the rear brake adjusting nut (3).


Make sure that the cut-out on the adjusting nut is seated on the brake arm pin (4) after the final adjustment has been made.




(1) Rear brake pedal (2) Free play

4. Apply the brake several times and check for free wheel rotation when released.

Spoke wheel version

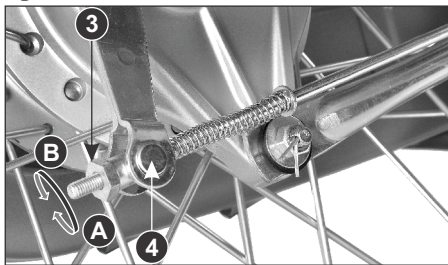

Cast wheel version

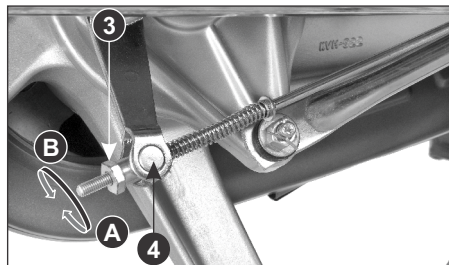

(3) Adjusting nut (4) Brake arm pin
(A) Decrease free play (Clockwise)
(B) Increase free play (Anti-Clockwise)


NOTE

If proper adjustment cannot be obtained by this method, visit your Authorised Hero MotoCorp workshop.

BRAKE WEAR INDICATORS (Spoke wheel version)


When the brake is applied, an arrow (1), fixed to the brake arm (2), moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

Front Brake Wear Indication

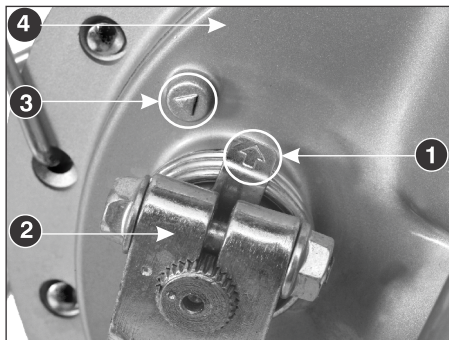

- (1) Arrow (3) Reference mark
(2) Brake arm (4) Brake panel

Rear Brake Wear Indication

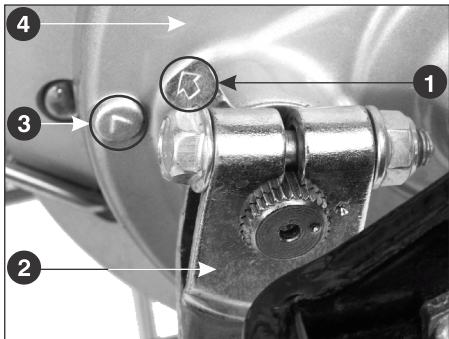


- (1) Arrow (3) Reference mark
(2) Brake arm (4) Brake panel

BRAKE WEAR INDICATORS

(Cast wheel version)


When the brake is applied, an arrow (1), fixed to the brake arm (2), moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

Front Brake Wear Indication

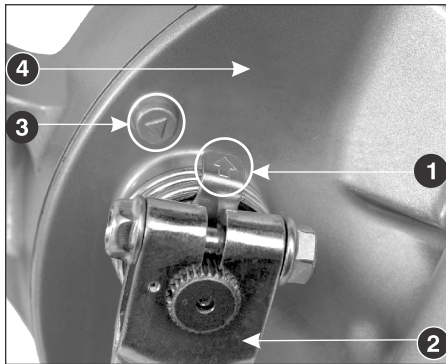

- (1) Arrow (3) Reference mark
(2) Brake arm (4) Brake panel

Rear Brake Wear Indication

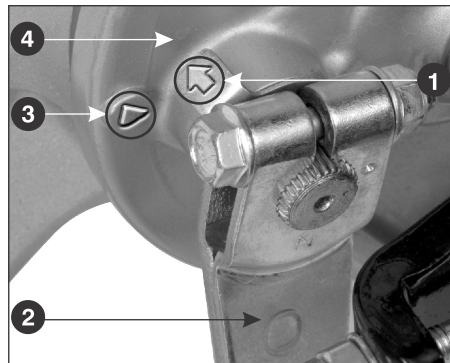

- (1) Arrow
- (2) Brake arm
- (3) Reference mark
- (4) Brake panel


BATTERY

Location

The battery (1) is located behind the right side cover.

Specification

12V-2.5Ah

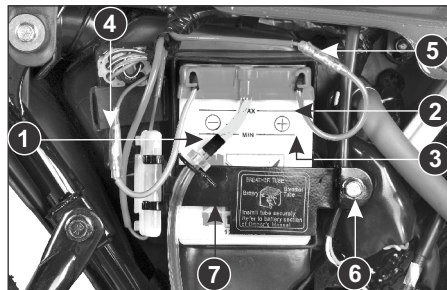

- (1) Battery
- (2) Upper level mark
- (3) Lower level mark
- (4) Negative terminal
- (5) Positive terminal
- (6) Bolt
- (7) Bracket

Maintenance

Check the battery electrolyte. The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the battery. If the electrolyte level is low, disconnect the cable from battery negative (4) and positive (5) terminals, remove the bolt (6) and remove the bracket (7) for access to the battery. Remove the battery filler caps.


Carefully add distilled water to the upper level mark using a small plastic funnel.

NOTE

- Use only distilled water in the battery. Tap water may shorten the service life of the battery.
- Dispose off used / old battery to Authorised dealer only.
- Insufficient electrolyte results in sulphation & plate damage.

Fuse Replacement

The fuse holder (1) is placed adjacent to the battery which consists of specified fuse 7A (2) and spare fuse (3).

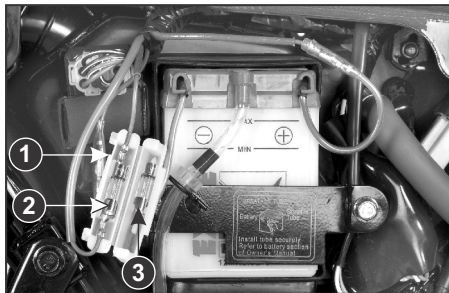

(1) Fuse holder

(2) Fuse

(3) Spare Fuse

⚠ WARNING

- Never use a fuse with a different rating from that specified. It may lead to serious damage to the electrical system or a fire due to short circuit.
- Battery gives off explosive gases. Keep sparks, flames & cigarettes away.


CAUTION

- When checking battery electrolyte level or adding distilled water, make sure the breather tube is connected to the battery breather outlet.
- Do not attempt to start or drive the motorcycle without a charged battery, it can cause fusing of the bulbs and permanent damage to certain electrical components.
- Turn the ignition switch “OFF” before checking or replacing the fuse to prevent accidental short-circuiting.

STOP LAMP SWITCH

The stop lamp switch (1) must be adjusted so that stop lamp will glow when rear brake is applied. Rear brake free play (page 36-37) should be adjusted before performing stop lamp switch adjustment. The procedure for adjusting stop lamp switch is as follows:

1. Turn the ignition switch to the “ON” position.
2. Turn the adjusting nut (2) to position stop lampswitch at a point where the stop lamp will glow just before the brake pedal is depressed to the limit of its free play. Turn the adjusting nut in direction (A) to advance switch timing or in direction (B) to retard switch timing.

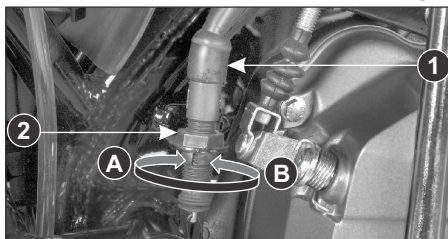


- (1) Stop lamp switch (A) Advance
(2) Adjusting nut (B) Retard

HEADLAMP ADJUSTMENT

Headlamp is factory pre set. However in case of adjustment required, please follow the steps as given below:

1. Headlamp adjustment is done by the headlamp adjuster screw (1) located below headlamp.
2. Place the motorcycle on level ground.
3. Adjust the headlamp beam vertically by rotating the screw. Rotate the screw clockwise for downward adjustment and anticlockwise for upward adjustment of headlamp beam.

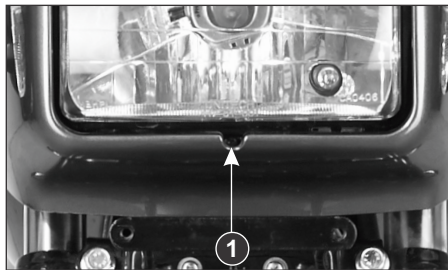

⚠ WARNING

An improperly adjusted headlamp may blind oncoming driver or it may fail to light the road for a safe distance.

SUSPENSION

Inspection

- Check the front forks by locking the front brake and pumping the front fork up and down vigorously. The suspension action should be smooth and there should be no oil leakage.
- Check the rear shock absorber by pushing hard downwards on rear carrier while the motorcycle is not parked on stand. The suspension action should be smooth and there should be no oil leakage.




Front

Rear

FRONT WHEEL REMOVAL (Spoke wheel version)

1. Raise the front wheel off the ground.


2. Remove the speedometer cable (1) by pressing the tab (2) & then pull out the cable.
3. Disconnect the brake cable (3) from brake arm (4) and brake panel (5) by removing the front brake adjusting nut (6).
4. Remove the axle nut (7).
5. Remove the axle and then remove the wheel.

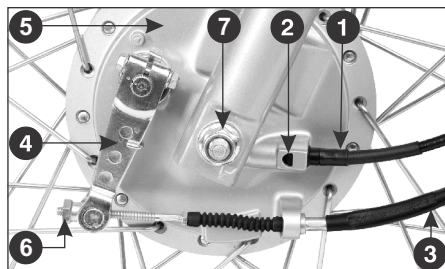

- | | |
|-----------------------|-------------------------------|
| (1) Speedometer cable | (5) Brake panel |
| (2) Tab | (6) Front brake adjusting nut |
| (3) Front brake cable | (7) Axle nut |
| (4) Brake arm | |

Installation Notes

- Reverse the removal procedure.
- Install the front wheel by ensuring that the lug (8) on the left fork is located in the slot (9) in the brake panel.

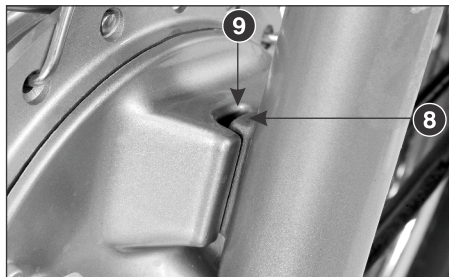

(8) Lug

(9) Slot


- Rotate the front wheel & see if the speedometer needle is working.
- Tighten the axle nut
Axle nut torque : 5.4 kgf-m
- Adjust the brake (page 35-36).
- After installing wheel, apply the brake several times and check for free wheel rotation when released.

FRONT WHEEL REMOVAL

(Cast wheel version)

1. Raise the front wheel off the ground.
2. Remove the speedometer cable (1) by pressing the tab (2) & then pull out the cable.

3. Disconnect the brake cable (3) from brake arm (4) and brake panel (5) by removing the front brake adjusting nut (6).
4. Remove the axle nut (7).
5. Remove the axle and then remove the wheel.

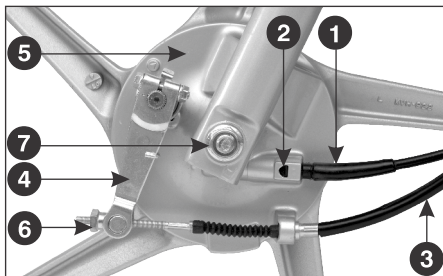

(1) Speedometer cable

(5) Brake panel

(2) Tab

(6) Front brake adjusting nut


(3) Front brake cable

(7) Axle nut

(4) Brake arm

Installation Notes

- Reverse the removal procedure.
- Install the front wheel by ensuring that the lug (8) on the left fork is located in the slot (9) in the brake panel.

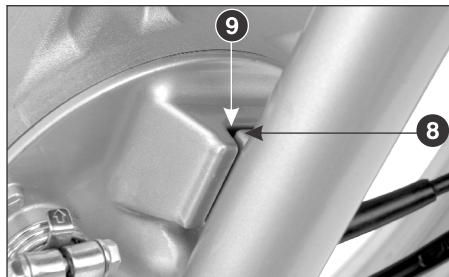

(8) Lug

(9) Slot

- Rotate the front wheel & see if the speedometer needle is working.
 - Tighten the axle nut.
- Axle nut torque : 5.4 kgf-m
- Adjust the brake (page 35-36).
 - After installing wheel, apply the brake several times and check for free wheel rotation when released.


REAR WHEEL REMOVAL

(Spoke wheel version)


1. Raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3) by pushing down the brake pedal. Disconnect the brake

stopper arm (4) from the brake panel (5) by removing split pin (6) and nut (7).

3. Remove the axle nut (8) and pull the axle (9). Remove the wheel.

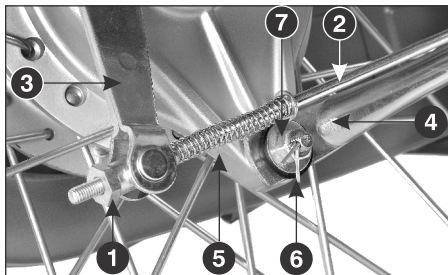

(1) Rear brake adjusting nut, (2) Rear brake rod, (3) Brake arm, (4) Brake stopper arm, (5) Brake panel, (6) Split pin, (7) Lock nut

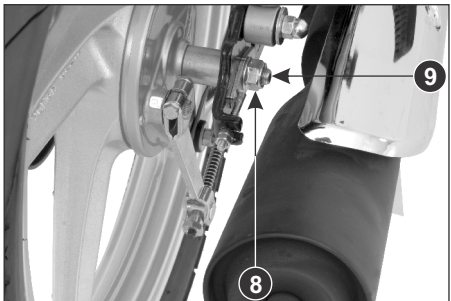

(8) Axle nut (9) Axle

Installation Notes

- Reverse the removal procedure
- Axle nut torque : 5.4 kgf-m

Brake stopper arm nut torque : 2.2 kgf-m

- Adjust the brake (page 36-37) and drive chain (page 32-34).
- After installing the wheel, apply the brake several times and check for free wheel rotation when released.


CAUTION

Always replace used split pins with new ones.


REAR WHEEL REMOVAL

(Cast wheel version)

1. Raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3) by pushing down the brake pedal. Disconnect the brake stopper arm (4) from the brake panel (5) by removing split pin (6) and nut (7).
3. Remove the axle nut (8) and pull out the axle (9). Remove the wheel.

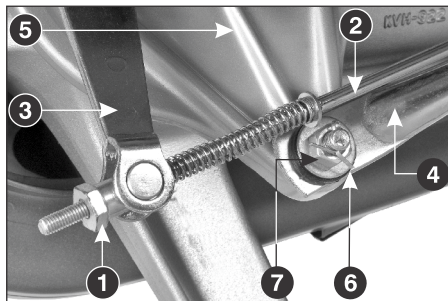

(1) Rear brake adjusting nut, (2) Rear brake rod, (3) Brake arm, (4) Brake stopper arm, (5) Brake panel, (6) Split pin, (7) Lock nut

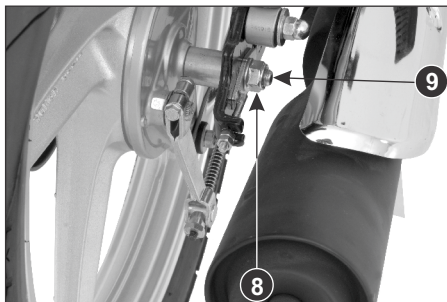

(8) Axle nut (9) Axle

Installation Notes

- Reverse the removal procedure
- Axle nut torque : 5.4 kgf-m

Torque link nut torque : 2.2 kgf-m

- Adjust the brake (page 36-37) and drive chain (page 32-34).
- After installing the wheel, apply the brake several times and check for free wheel rotation when released.

CAUTION

Always replace used split pins with new ones.

WASHING THE MOTORCYCLE

Follow the below mentioned steps for washing the motorcycle.

1. Wet the motorcycle with light water spray. Avoid directing water to muffler outlets and electrical parts.
2. Clean the headlamp lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water. Rub the soiled area gently rinsing it frequently with fresh water.
3. After cleaning spray water thoroughly.
4. Dry the motorcycle by wiping with dry soft cloth.

NOTE

- Our authorised dealership take all above mentioned precautions like recommended detergents and usage of muffler caps/plugs during wash to ensure quality wash.
- It can damage certain parts of the motorcycle.

CATALYTIC CONVERTER

This motorcycle is equipped with a catalytic converter in the silencer (muffler).


The catalytic converter contains noble metals that serve as catalyst, promoting chemical reactions to convert CO and HC in the exhaust to CO₂ and H₂O (water vapour).

A defective catalytic converter contributes to air pollution and can impair your engine's performance.

Follow these guidelines to protect your motorcycle's catalytic converter.

- Always use unleaded petrol. Even a small amount of leaded petrol can contaminate the catalyst metals, making the catalytic converter ineffective.
- Keep the engine tuned up.

AIR SUCTION VALVE

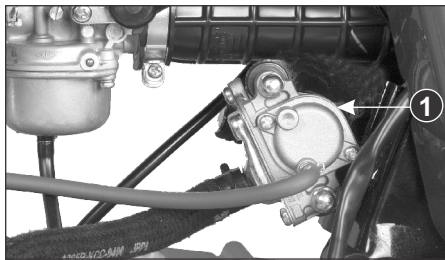

(1) Air Suction Valve


Further to meet emission standards this motorcycle is provided with the air suction valve.

Air Suction Valve (1) supplies fresh air from the air filter to the exhaust manifold to convert carbon monoxide to carbon dioxide. This reduces the CO% in the vehicle's exhaust.

BASIC TROUBLE SHOOTING


1. STARTING TROUBLE - ENGINE DOES NOT START

A. FUEL SYSTEM

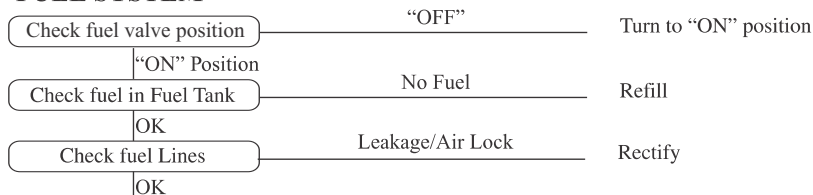


Consult Authorised Hero MotoCorp Workshop

B. NO SPARK AT SPARK PLUG

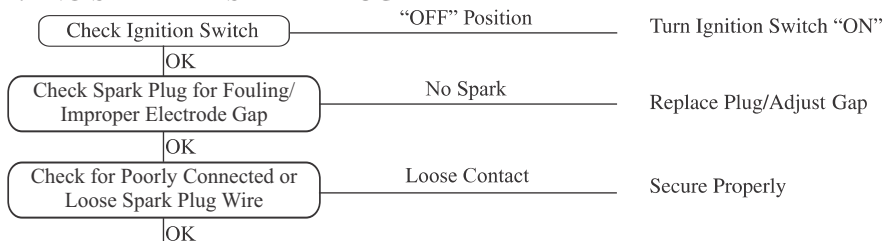

Consult Authorised Hero MotoCorp Workshop

2. ENGINE STARTS BUT STALLS

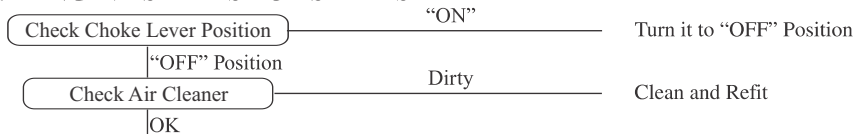

Consult Authorised Hero MotoCorp Workshop

3. POOR PICK-UP

Spark Plug Loose in Cylinder Head	Loose	Tighten the Spark Plug
OK		
Check Air Cleaner	Clogged	Clean and Refit
OK		
Check Brake Binding	Improper Adjustment	Readjust the free play of Brake lever/ Pedal
OK		
Check Tyre Inflation Pressure	Under inflated	Correct Tyre Pressure
OK		

Consult Authorised Hero MotoCorp Workshop

4. ELECTRICAL SYSTEM

Feeble Horn Sound or No Light

Check Fuse	Fuse	Replace Fuse
OK		
Inspect Battery	Weak	Recharge, replace if defective
OK		
Check Bulbs	Fuse/Wrong Wattage	Replace Bulbs
OK		
Check Connections	Loose	Secure Connections
OK		

Consult Authorised Hero MotoCorp Workshop

ROAD SIGNS



Mandatory signs: These road signs inform drivers/riders of the traffic rules that apply on a certain stretch of road, thereby instructing them on how to drive/ride. Mandatory signs are distinguished by the bright red circle with black and blue markings. It is imperative that all riders follow these signs as they help avoid accidents. Their violation can be penalised under the Motor Vehicle Act.

Mandatory



Stop



Give way



One way



No horn



No bicycles



No automobiles



No hand cart



No pedestrians



No right turn



No 'U' turn



Overtaking prohibited



Speed limit



No stopping or standing



No parking



Length limit



Height limit



Restriction ends



Compulsory-ahead only



Compulsory-turn left



Compulsory-right ahead



Compulsory-ahead or turn right



Compulsory-keep left



Compulsory-bicycle track



Compulsory-sound horn



Cautionary

Cautionary Signs: These signs inform the driver/rider of the road conditions ahead. Cautionary signs therefore serve as a warning. They are usually in a red triangle with black pictures on a white background. Illustrations, diagrams and symbols are used to forewarn about dangers ahead. Cautionary road signs are as important as mandatory signs. However, the violation of cautionary signs does not attract a penalty.



Right hand curve



Right reverse bend



Incline ahead



Narrow road ahead



Narrow bridge



Pedestrian crossing



School ahead



Gap in median



Cross road



Men at work



Roundabout




Hump Road



Informatory

Informatory Signs : These are facility signs that provide important information about road directions or maps of specific destinations. On highways, they provide information about the location of public telephones, restaurants, hospitals, parking, petrol pumps, resting-places and more. These signs are usually rectangular, with black or white pictures on a blue background.



Re-assurance sign



Public Telephone



Petrol Pump



Hospital




First Aid Post



Eating Place



Light Refreshment



Destination Sign



Place identification sign



Resting place



No through road



No through side road



Park this side



Parking both sides



Taxistand

Signs and Signals are language of the road. Learn them, respect them.



Hero MotoCorp Ltd.

WARRANTY

SCOPE OF WARRANTY

Hero MotoCorp Ltd. (hereinafter called 'Hero MotoCorp') warrants its **Splendor Plus** vehicles, assembled/manufactured in its Plants and sold through its channel partners, to be free from any defect-both in material and workmanship, under normal use and conditions, subject to the following terms & conditions.

Terms & conditions

- a) **Splendor Plus** vehicle is warranted for a period of **5 years or 70000 Km**, whichever is earlier, from the date of purchase.
- b) It is advised that the purchaser avails all free and paid services from the Hero MotoCorp's authorized workshop as per the recommended schedule, to be eligible for warranty benefits. Each paid service should be availed within 90 days from the date of previous service or as per the recommended schedule, whichever is earlier.
- c) If any problem is observed in **Splendor Plus** vehicle, Hero MotoCorp's only obligation/ liability is to repair or replace that part/those parts which is/are considered to be the cause of such problem, provided however that such problem has not resulted due to misuse/improper handling etc. of the vehicle. Any **Splendor Plus** vehicle needing repair should be brought along with owner's manual to Hero MotoCorp's authorized workshop for necessary inspection and carrying rectification job.



Hero MotoCorp Ltd.

LIMITATIONS OF WARRANTY

THE WARRANTY SHALL NOT APPLY—

- (1) If all free services/paid services/oil top-ups are not availed as per the recommended schedule at Hero MotoCorp's authorized workshop.
- (2) If any other engine oil which is non compatible with product is used other than SAE 10W30 SL Grade (JASO MA2).
- (3) To normal wear & tear components including (but not limited to) brake shoes/pads, clutch plates, drive chain & sprockets, bulbs, electrical wiring, filter, spark plug, fasteners, shims, washers, oil seals, gaskets, rubber parts, bush, rubber bellows, plastic parts breakage and wheel rim for misalignment/bend.
- (4) If additional wheel(s) is/are fitted and/or any other modification carried out/unauthorized accessories fitted which shall be responsible for malfunction/deterioration of the vehicle.
- (5) If **Splendor Plus** vehicle has been used in any competitive events like races or rallies or for any commercial purposes as taxi etc.
- (6) To any damage on vehicle's painted surface cropping due to industrial pollution or other external factors.
- (7) For normal phenomena like noise vibration, oil seepage etc., which do not affect the performance of the vehicle.
- (8) To any damage caused due to usage of improper oil/grease, non-genuine parts.
- (9) If any defect crops or repairs needed as a result of using adulterated fuel.
- (10) If any maintenance/repairs required due to bad road conditions or misuse of **Splendor Plus** vehicle.
- (11) If any defect crops or repairs needed as a result of **Splendor Plus** vehicle meeting to some accident.
- (12) For consumables like oil, grease, gasket etc to be used during free services and/or warranty repairs.
- (13) To any part of the **Splendor Plus** vehicle which has been tampered or repaired in such a manner which has resulted in malfunction of the vehicle.
- (14) For **Splendor Plus** vehicle not used in accordance with the guidelines given in this Owner's Manual.
- (15) To proprietary items like Tyres, Tubes, Batteries etc, as they are subjected to the warranty terms & conditions of respective manufacturers and directly handled by them only.
- (16) Any defect(s) developing on account of external factors such as environmental factors; including but not limited to fading/peeling/rusting of paint and/or stripes and/or plated parts, seat leather tearing & cracking, aluminium parts oxidation and cracking & discoloring of control switches etc.

Decision regarding warranty settlement shall be taken by Hero MotoCorp and the same shall be final and binding on all concern.

Subject to DELHI JURISDICTION only.



Hero MotoCorp Ltd.

EMISSION WARRANTY

Scope of warranty

Hero MotoCorp Ltd. Warrants all its vehicles, assembled/manufactured at its various Plants and sold through its Authorised dealers, to comply with emission standards as specified in S.No. 5 of table in item(i) of sub rule (2) of Rule 115 of Central Motor Vehicles Rules, 1989, which stipulates that "Idle CO (Carbon monoxide) emission limit for all two wheeled petrol driven vehicles shall not exceed 3.0 percent by volume and HC (Hydro Carbon) 3000 ppm, subject to following terms & conditions.

Terms & conditions

- a) The emission warranty shall be applicable in India and shall remain valid for a period of 3 years or 30000 kms, whichever occurs earlier, from the date of vehicle purchase.
- b) In case any defect is observed in any emission-related component, Hero MotoCorp only obligation/liability shall be to repair and/or replace those part (s) which is/are considered to be the cause of non-compliance with the emission standards.
- c) The emission warranty shall be applicable only to those vehicles, which are being regularly maintained at Hero MotoCorp Authorised Dealers/Service Points in accordance with the maintenance schedule provided in the owner's manual.
- d) The customer should follow the recommended parts replacement as per the maintenance schedule in order to avail the emission warranty.
- e) If any part (s) related to emission characteristics of the vehicles is/are tampered and/or repaired by unauthorised person/workshops etc, then the emission warranty shall stand cancelled.
- f) Any part (s) suffering wear and tear under the normal course of running shall not be covered under the emission warranty. Therefore, all such parts should be replaced by the customer from time to time, on payment basis, as per the maintenance schedule provided in owner's manual and dealer's advice.
- g) It is recommended to avail the services as per the recommended schedule to be eligible for the emission warranty benefits. Please ensure that each paid service is availed within 90 days from the date of previous services or as per the recommended schedule, whichever is earlier. All service details should be completely filled by the dealer, in the **Service Record Sheet** given in the owner's manual.
- h) It is mandatory to obtain a PUC certificate from the Authorised PUC center. In case of non-compliance with the emission standards please contact the channel partner/authorised workshop immediately alongwith the previous OK certificate, for the necessary rectification. The manufacturer or the dealer is not responsible for any penalty levied on you on account of non-compliance with the emission standards.
- i) All decisions regarding emission warranty settlement shall be taken by Hero MotoCorp Ltd. and shall be final binding on all concerned.

Subjected to Delhi jurisdiction only.



WHAT ARE THE BENEFITS OF HERO MOTOCORP GENUINE SPARE PARTS ?

- ▶ **Assures long life**
- ▶ **Ensures economy for a long time**
- ▶ **Safety of vehicle and rider**
- ▶ **Peace of mind**
- ▶ **Value for money**
- ▶ **Assured quality**



CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Clutch Plate	▶ Material used is inferior ▶ Damages other parts of clutch like, clutch center and outer clutch ▶ Affects fuel efficiency ▶ Poor acceleration
Cam Chain Kit	▶ Poor performance ▶ Reduced life
Gasket Cylinder Head	▶ Improper sealing ▶ Engine knocking ▶ Leads to leakage and smoky exhaust ▶ Higher emission level



CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Element Air Cleaner	▶ Improper air filtration resulting in premature engine failure ▶ Affects fuel efficiency ▶ Poor engine performance
Spark Plug	▶ Frequent stalling of engine ▶ Higher emission level ▶ Poor engine performance ▶ Affects fuel efficiency
Brake Pads / Shoes	▶ Poor braking efficiency ▶ Rider safety - an issue ▶ Discs / Drum wear out, resulting in subsequent repair cost
Chain Sprocket Kit	▶ Noisy Operation ▶ Failure of chain can cause fatal accident

ZONAL/REGIONAL/AREA OFFICES

For any of your service related query/requirements you may contact the respective Zonal/Regional/Area Offices

CENTRAL ZONE

Hero MotoCorp Ltd., No. 209-210, Ganpati Plaza, M.I. Road, Jaipur-302001, (Rajasthan).

Tel: +91 141 2389031, +91 141 2389156, E-mail: jaipur@heromotocorp.com

Hero MotoCorp Ltd., Office No. 705-706, 7th Floor, Fun Square, Durga Nursery Road, Udaipur -313001 (Rajasthan).

Tel: +91 0294-2980578, 79, E-mail: udaipur@heromotocorp.com

Hero MotoCorp Ltd., Office. No.401, 4th Floor, Offizo, Magneto Mall, Labhandi, G.E. Road, Raipur -492 001, (Chhattisgarh)

Tel: +91-771-4034749, E-mail: raipur@heromotocorp.com

Hero MotoCorp Ltd., Third Floor, Alankar Palace, Plot No. 11, Zone II, M.P. Nagar Bhopal-462011, India.

Tel: +91-755-4203160, 2553697, 4272429, 2550086, E-mail: bhopal@heromotocorp.com

Hero MotoCorp Ltd., Maloo-01, 601-602, 6th Floor, Plot No. 26C, Scheme No. 94, Ring Road, Indore, M.P.-452010,

Tel: +91-731-4978269, 70, E-mail: indore@heromotocorp.com

EAST ZONE

Hero MotoCorp Ltd., Flat No: 1002, 10th Floor, Martin Burn Business Park, BP3, Salt Lake, Sector-V, Kolkata-700091,

West Bengal, India. Tel: +91-33-44026841, +91-33-44026830, E-mail: kolkata@heromotocorp.com

Hero MotoCorp Ltd., Odysa Business Centre, Plot no. 30, 30/982, 172/1030, 4th Floor Cuttack, Bhubaneswar highway road,

Rasulgarh, Bhubaneswar-751010, Odisha, India. Tel: +91-674-2581161, 62, 63, 64, E-mail: bhubaneswar@heromotocorp.com

Hero MotoCorp Ltd., Yash Heights, 1st Floor Bariatu Road, Above Basudeb Tata Showroom Ranchi-834009, Jharkhand,

India. Tel: +91-651-2542222, 2542224, 2542225, E-mail: ranchi@heromotocorp.com

Hero MotoCorp Ltd., Sai Corporate Park, A Block, 6th Floor, Rukanpura, Bailey Road Patna, Bihar - 800014

Tel: +919334280555/7004569648 E-mail: patna@heromotocorp.com

NORTH ZONE

Hero MotoCorp Ltd., 3rd Floor, Tower-A, DLF Centre Court, Sector-42, Golf Course Road, DLF Phase 5,

Gurgaon - 122002, Haryana, India. Tel: 0124-4754800, E-mail: delhi@heromotocorp.com

Hero MotoCorp Ltd., 602, 6th Floor, Office Tower-1, Plot No BW58, Logix City Center, Sector-32, Noida - 201301.

Tel: 0120-4631000, E-mail: noida@heromotocorp.com

Hero MotoCorp Ltd., S.C.O-367-368, First Floor, Sector-34A, Chandigarh-160022, India.

Tel: +91-172-2623773, 2623774, 2623775, E-mail: chandigarh@heromotocorp.com

Hero MotoCorp Ltd., Kapoor Towers, Plot No- 284, 15-B, Rajpur Road, Dehradun-248001, India.

Tel: 0135-2714661, 2713662, 2714663, E-mail: dehradun@heromotocorp.com

ZONAL/REGIONAL/AREA OFFICES

NORTH ZONE

Hero MotoCorp Ltd., Summit Building (10th Floor) Plot No TCG 3/3 Vibhuti Khand, Gomti Nagar Lucknow – 226010, India. Tel: 0522-4006594, E-mail: lucknow@heromotocorp.com

Hero MotoCorp Ltd., C-19/134-B, Third Floor I.P Grand, Lallapura, Sagra, Varanasi, Uttar Pradesh – 221010, India. Tel: +91-0542- 2390949, 2390241, E-mail: varanasi@heromotocorp.com

SOUTH ZONE

Hero MotoCorp Ltd., SKAV 909, 3rd Floor, 9/1, Lavelle Road, Bangalore-560001, India. Tel: +91-80- 46881000, E-mail: bangalore@heromotocorp.com

Hero MotoCorp Ltd., 3-6-289, 3rd Floor, Kareem Manzil, Hyderguda, Hyderabad-500029, India. Tel: +91-40-23223735, 23223727, 23223570, E-mail: hyderabad@heromotocorp.com

Hero MotoCorp Ltd., 9th Floor Seshachalam Centre No.636/1, Anna Salai, Nandanam, Chennai-600035, India. Tel: +91-44- 24340974, 24340977, 24340978, E-mail: chennai@heromotocorp.com

Hero MotoCorp Ltd., 6-A, DD Trade Tower, (6th Floor), Kaloor-Kadavanthra Road, Kaloor-682 017, Kochi-682017, India. Tel: +91-0484- 4039646 -7, E-mail: cochin@heromotocorp.com

Hero MotoCorp Ltd., No 1547, 2nd Floor Classic Towers, Trichy Road, Coimbatore – 641018 Tel: +91-422-2200058, 2200061, E-mail: coimbatore@heromotocorp.com

Hero MotoCorp Ltd., First Floor VA Kalburgi Mahalakshmi Mansion, Mandakini Hospital Road, New Cotton Market, Hubli-580029, India. Tel: 0836-2269717, 2361038, E-mail: hubli@heromotocorp.com

Hero MotoCorp Ltd., D.NO. 54-11-18 E, 2nd Floor, Sai Oddessey Building, Opp Executive Club, Near NH-5, Vijayawada-520008, Andhra Pradesh, India. Tel: +91-866-2546859, 2546860, E-mail: vijayawada@heromotocorp.com

WEST ZONE

Hero MotoCorp Ltd., Chrome Building, Sr. No. 33, Hissa-A-1/1/2, Plot – 2, Viman Nagar Avenue 2, Nagar Road, Pune-411014, India. Tel: +91-020-71903500, E-mail: pune@heromotocorp.com

Hero MotoCorp Ltd., 603-604, Gunjan Tower, Off Alembic Gorwa Road, Baroda-390023, India. Tel: +91-265-2286569/2286570, E-mail: baroda@heromotocorp.com

Hero MotoCorp Ltd., Ground Floor, Block No.2, Vishnu Vaibhav Complex, 222, Palm Road, Civil Lines, Nagpur-440001, India. Tel: +91-712-2545990-91, E-mail: nagpur@heromotocorp.com

Hero MotoCorp Ltd., Astarc House-Third Floor, 76/79, Makwana Lane, Off. Andheri-Kurla Road, Andheri (East), Mumbai-400059, India. Tel: +91-22-28562071, E-mail: mumbai@heromotocorp.com

Hero MotoCorp Ltd., 604, Kings Plaza, Astron Chowk, Rajkot, Gujarat – 360001 Tel: 0281-2460622, 2460623, E-mail: rajkot@heromotocorp.com