System Administration and Maintenance

Presented by:
Lieutenant Commander (IT) RMJP Nayanajith

Router/Switch Configuration

* Continue with configuration dialog? [yes/no]: **setup mode**
  - Router> **User Mode**
* Router>**enable**
  - Router# **privileged Mode**
* Router#**configure terminal**
  - Router(config)# **Global Configuration Mode**

STEPS TO CONFIGURE THE SWITCH/ROUTER

Name a Switch/Router

This is command use to assign a host name for Switch / Router Devices on the network.

* **enable**
* **configure terminal**
* **host name KDU**
* **exit**

Configure Privileged Mode Access ROUTER/SWITCH ENABLE

Enable secret/password

This is the way assign the *device access enable password / Secret* for the switch/ Router.

- **configure terminal**
- **enable password/Secret ict@123**

Encrypt passwords

- **KDU(config)#service password-encryption**

Configure CONSOLE Access Password for ROUTER/SWITCH

Line control password with logging synchronous

This is the way assign the *device access password / Secret* for network device such as switch/ Router

- **configure terminal**
- **line console 0**
- **password abt@456**
- **logging synchronous**
- **login**

Login Time-out

This is the way to set the time-out time duration for certain access account of Switch /Router devices.

* **configure terminal**
* **line console 0**
* **exec-timeout 6 45 (mm ss)**

Command history scope

This will be defined the commands history record capacity

* **configure terminal**
* **line console 0**
* **history size 3**

Stop disturbing console message when typing

- KDU(config)#line console 0
- KDU(config-line)#logging synchronous

View the date and time

- KDU#**show clock**

Change the time zone

- KDU(config)#**clock timezone utc 5 30**

Change the time

- KDU#**clock set h:m:s date month year**

(if now time is 8 10 am we must - 5 30 from it when enter the time)

Message Of The Day (MOTD)

This command uses to set a display message as Message of The Day (MOTD) banner for the users of the devices.

- **KDU(config)#Banner motd # Unauthorized access suspended #**
- **KDU(config)# banner motd $!!! Only Authorized Users Are Allowed$**

Show IP interfaces with IP Address

This command provides a summary table showing all interfaces, their IP addresses, and their status.

- **KDU# show ip interface brief**

Configure fast Ethernet / Gigabit Ethernet interface

Configure fastethernet interface

- KDU(config)#interface fastethernet 0/0
- KDU(config-if)#Description CONNECTION TO LAN ADMIN
- KDU(config-if)#ip address 192.168.1.1 255.255.255.0
- KDU(config-if)#no shut

How to Configure VLAN IP address in Switch / Router

* Switch>enable
* Switch#configure terminal
* Switch(config)#interface vlan1
* Switch(config-if)#ip address 172.16.10.2 255.255.255.0
* Switch(config)#no shut
* Switch(config-if)#exit
* Switch(config)#ip default-gateway 172.16.10.1


- **Show previous commands we have entered**
  - KDU# show history
- **Change the history size**
  - KDU#terminal history size 50 (0-256)
- **View running Configurations**
  - KDU#show running-config
- **View Startup Configurations**
  - KDU#show startup-config
- **Save router configuration to NVRam**
  - KDU#copy running-config startup-config
- **Reload the router**
  - KDU#reload

How to reset switch to factory defaults

- Switch>enable
- Switch#delete flash:vlan.dat
  - Delete filename [vlan.dat]? Y / [Press Enter Key]
  - Delete flash:vlan.dat? [confirm] Y / [Reconfirm by pressing enter key]
- Switch#erase startup-config
- Switch#reload

THANK YOU

Create Below Network

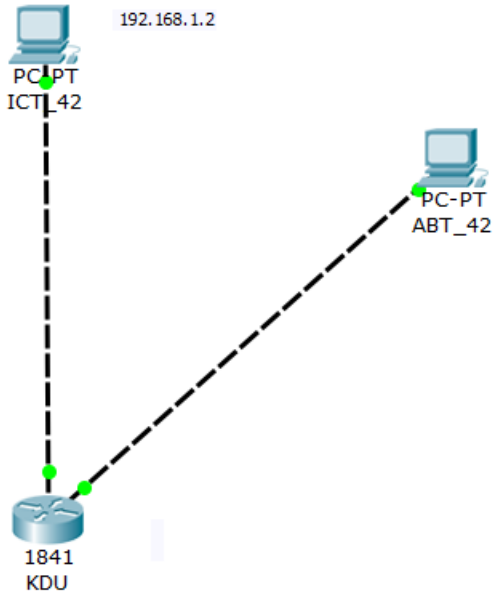

Interface	IP-Address	OK?	Method	Status	Protocol
FastEthernet0/0	192.168.1.1	YES	manual	up	up
FastEthernet0/1	172.56.7.1	YES	manual	up	up
Vlan1	10.10.10.1	YES	manual	up	down